



Bluebird S10

O Coletor de Dados **Bluebird S10** é compatível com Wi-Fi 6 sendo um ótimo equipamento para quem deseja automatizar sua empresa e necessita de um leitor e coletor de código de barras capaz de se comunicar com outras aplicações e tenha a segurança.

 
Cost Effective Full Touch Handheld Computer

S10

QUICK
GUIDE



BLUEBIRD

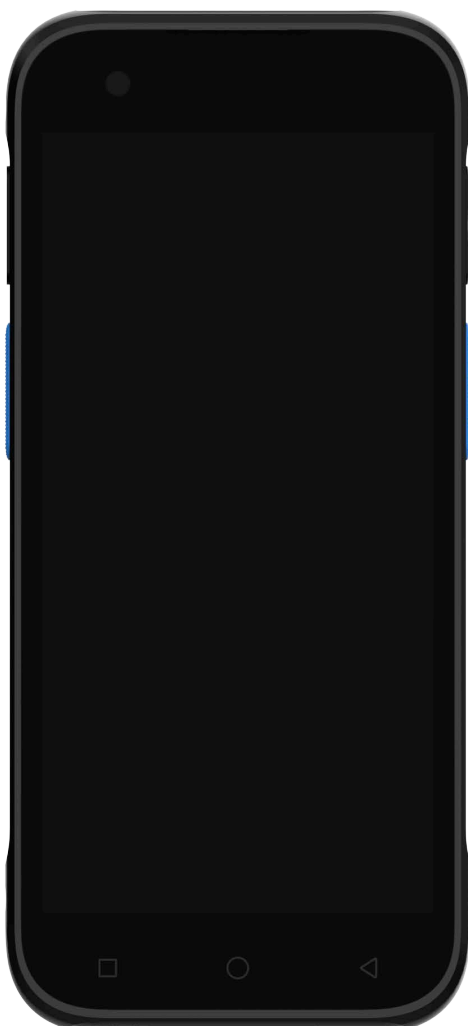

This user manual is protected by copyright.

Copyright © 2025 Bluebird Inc. All rights reserved.

Bluebird Inc. is the designer and manufacturer of Bluebird handheld mobiles.

This manual and the programs in this device are protected under international copyright laws, and may not be copied, distributed, translated, or removed by any means.

Registered Trademark



BLUEBIRD is an emerging global brand, striving to lead the market in performance and mobility. Their products represent reliability, innovation, and innovative technology. Bluebird is a registered trademark from the global brand of Bluebird Inc. and is copyright protected.

- Bluebird and stylized Bluebird Logo are registered trademarks and symbols of Bluebird Inc.
- Qualcomm® IZat™ is a registered trademark of Qualcomm Atheros, Inc. trademark of Qualcomm Atheros, Inc.
- Adobe® is a registered trademark of Adobe Systems Inc.
- All other trademarks and copyrights are the property of their respective owners.

User's Guidance

Device type	User's guidance
Class B Device (Household Information & Communication)	This device has qualified the electromagnetic wave suitable registration and can be used as a household device at a residential area as well as any other areas.
Type Registration	This wireless device may cause propagation interference, and so, it cannot be used for life-saving services.

E-Label

Users are able to access the 'E-Label information' in no more than three steps in a device's menu.

The actual steps are : Settings > System > Regulatory labels

1 Safety Information



1.1 Symbols

This manual uses the following symbols to indicate hazards and additional information.

Symbol	Name	Description
	Warning	Indicates situations that could cause injury to yourself or others.
	Caution	Indicates situations that could cause damage to your device or other equipment.
	Note	Indicates additional information that can help you get the most out of the device.

Please read this safety precaution information carefully. Failure to follow the information provided may result in fire, electric shock, or other property damage or bodily injuries.

1.2 Device

- Do not press the Power button on the device if the device is wet or do not touch adapter or power cord with wet hands. There is risk of electric shock.
- Do not use your device in an explosive danger zone.
- If your device becomes wet, do not put your device in heaters, microwaves, etc. to dry it. There is a risk of explosion or malfunction.
- Do not scratch the device's touchscreen. Use only your fingers or a compatible pen. Never use an actual pen, or any other sharp object on the touchscreen.
- Although this device is very sturdy, do not drop, hit, bend, or sit on it on purpose. It can be broken.
- Do not modify, take apart, or repair the device. Contact to your customer service center. Failure to do so will void your warranty.
- Do not attempt to modify your hardware or software. It may cause device malfunction and void your warranty.
- You may not be able to use this wireless device in basements, open fields, skyscrapers, or other places where the signal is weak.
- Backup the data and information from your device. Your data, such as ringtones, texts, and voice messages, may be erased during repairs or upgrades.
- Do not paint your device. It can damage your screen or your device's exterior.
- Avoid using or storing this device at extreme temperatures. This device is designed to work at temperatures between -20°C and 50°C (-4°F and 122°F), and humidity level 95%.



1.3 Environment



- Do not use the device while driving or operating heavy machinery. Doing so may result in death or serious injury.
- Do not use the device in locations with combustible goods. Doing so may result in an explosion.



- Do not use the device in dusty or hot locations. Doing so may damage the device.
- Do not expose your device to direct sunlight such as on the dashboard of a car for extended periods of time.
- Do not use the device in humid locations. Doing so may damage the device and void the warranty.
- Do not keep the device close to air conditioner vents. Corrosion within the device may occur due to condensation from changes in temperature.
- Do not allow children to play with the device.

1.4 Charging



- Use only the approved charger. Using an incompatible charger may cause device malfunction or other damage, such as fire.
- Charge the battery at least once a year. If you keep it without charging for a long time, it may cause device malfunction.

1.5 Distraction



In some situations, using your device may distract you and cause serious injuries and damages. For example, avoid talking on the phone or texting while driving or riding a bicycle. It is strictly prohibited by law in some jurisdictions. If you cannot avoid using your device while driving, stop your vehicle or use hand-free kit.

1.6 Frequency Interference



 
- This wireless device may cause radio frequency interference, so use Airplane mode or turn off the device when prohibited.
- The device emits an electromagnetic fields. It may interfere with your medical devices.
- Do not place credit cards, phone cards, bankbook, and tickets next to the device. The magnetic field of the device can damage their magnetic strips.



2.1 Package Contents

The package includes:

S10

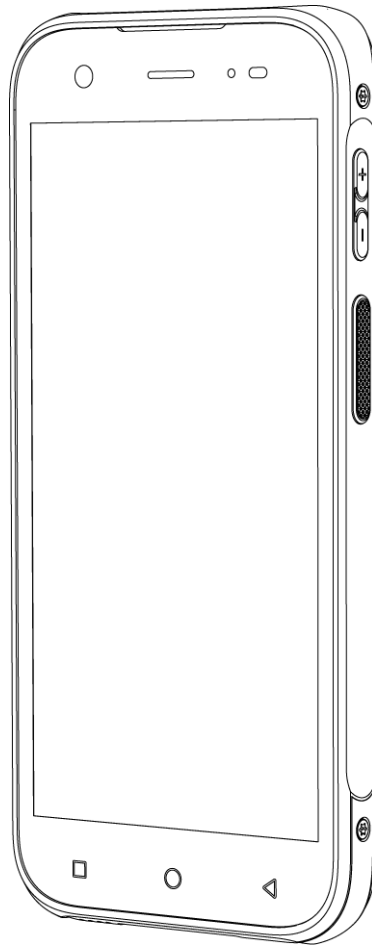

S10 Device and Battery



 
The illustrations may differ from your actual items.




2.2 Your Device

2.2.1 Front and Rear

FRONT

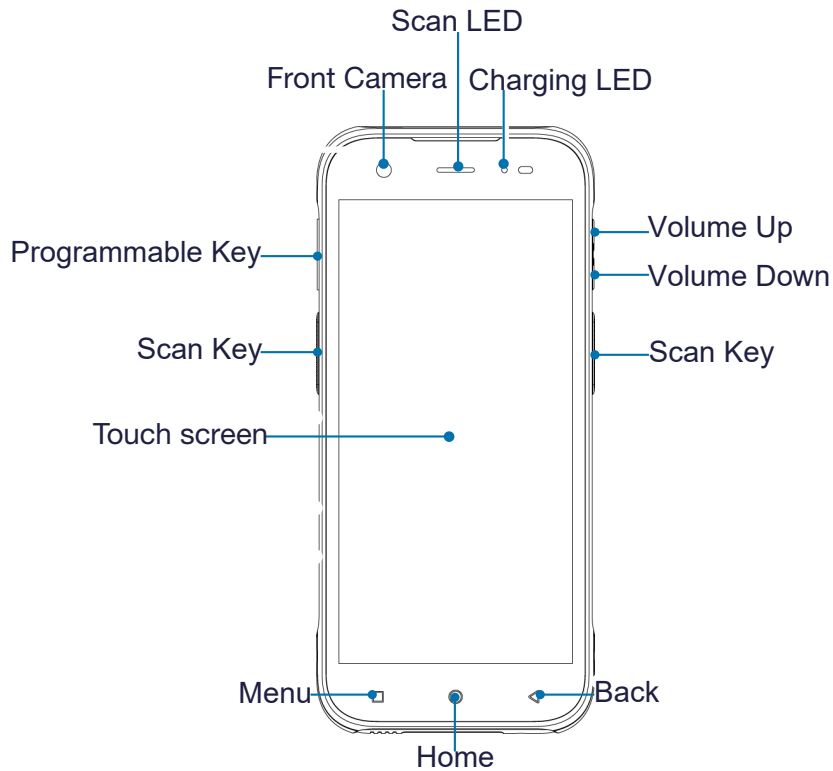


REAR

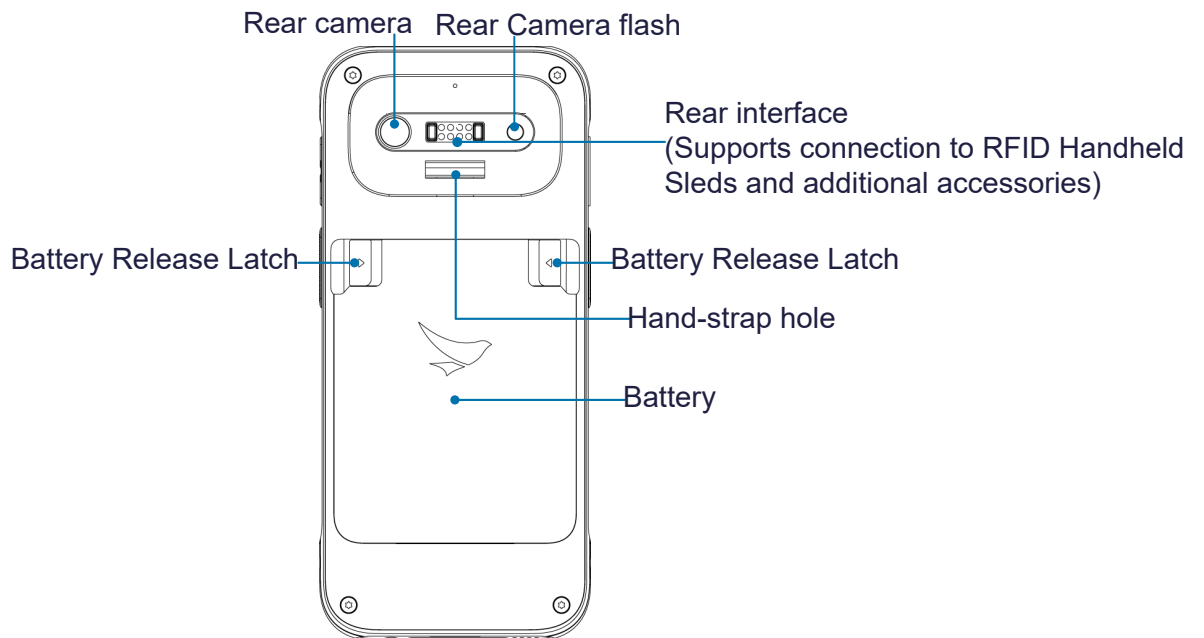 




2.2.3 Top and Bottom

 TOP

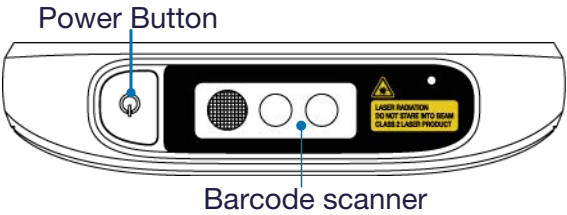

BOTTOM

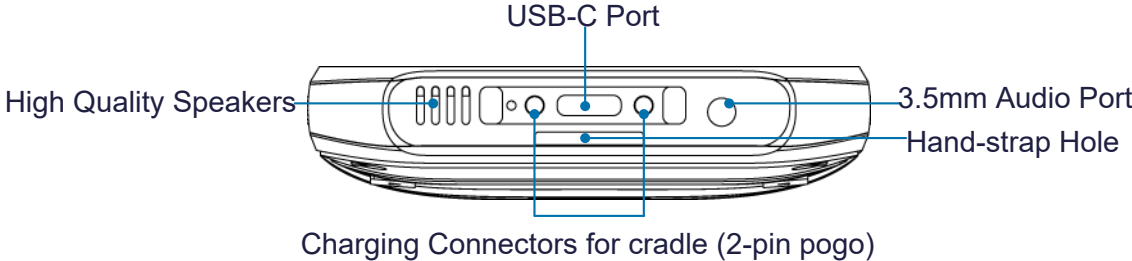 





3.1 Installing the Cards

3.1.1 Inserting a Nano SIM card

 
1 Push the battery latches to remove the battery

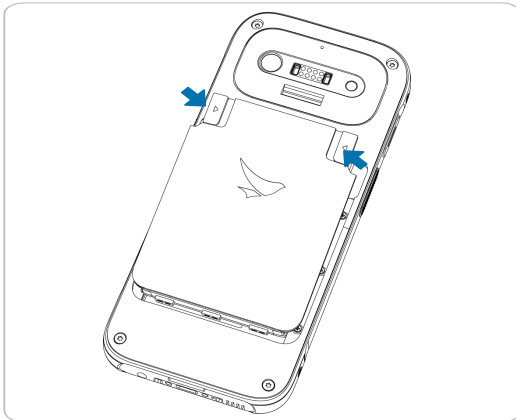

2 Remove the SIM and Micro SD Card slot

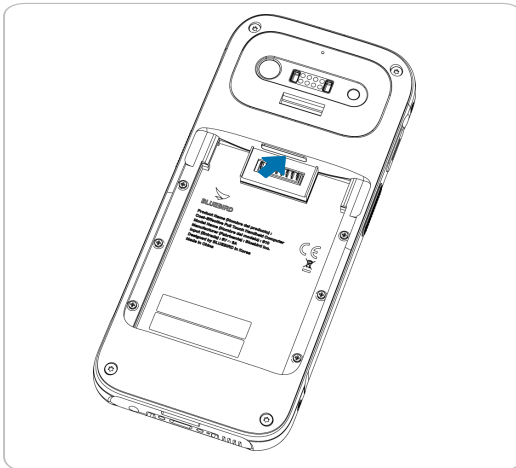 

 
3 Insert the nano sim card into the card slot.

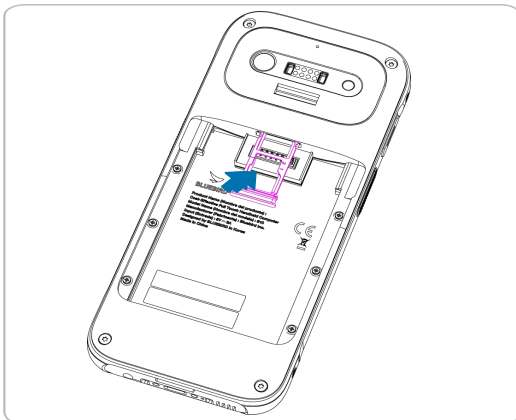




3.1.2 Inserting a Micro SD Card

 
1 Push the battery latches to remove the battery

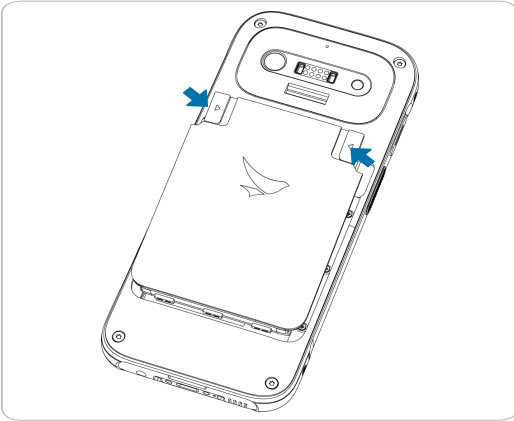

2 Remove the SIM and Micro SD Card Slot

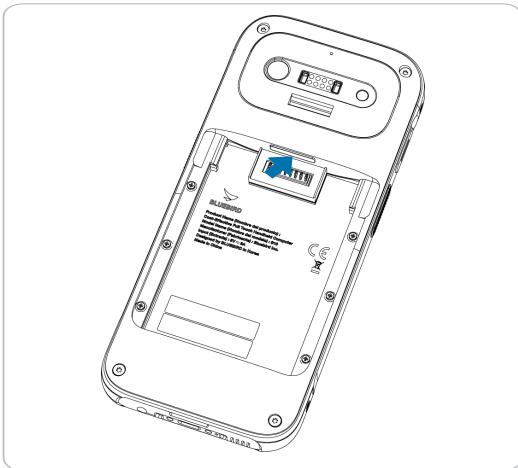 

 3 Insert the Micro SD card into the card slot.

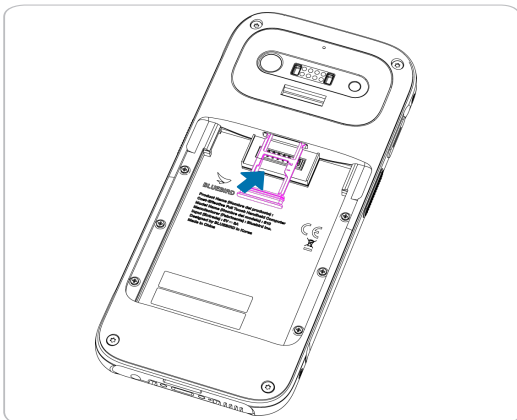





3.2 Battery

3.2.1 Installing the Battery

 1 Insert the bottom part of the battery into place

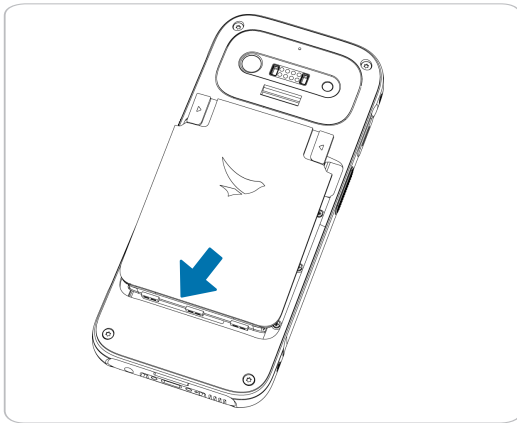

2 Push the top section of the battery

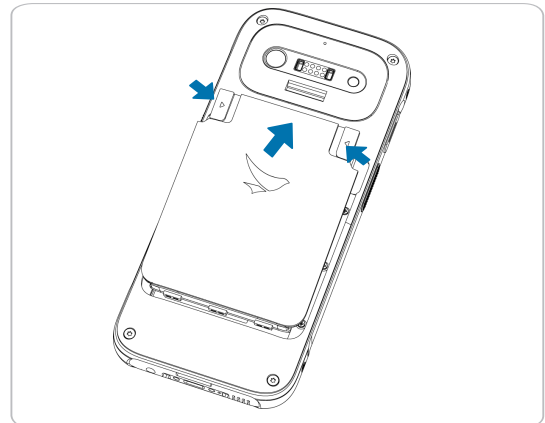 



3.2.2 Removing the Battery

Push both battery latches to open the battery cover.

 Before removing the battery, turn off the power. Failure to do so may cause damage to the device.

3.2.3 Charging the Battery

1 Connect the USB-C cable to the USB-C Cable port. The port is located on the bottom of the S10 device.

- The battery charging image appears on the screen.

 
2 Connect the USB-C to A cable to the power adapter and then plug the power adapter into a power outlet.



4.1 Turning the Device On or Off

4.1.1 Turning the Device On

Press and hold the Power button for a few seconds. The Power button is located on the top section of the S10 device.

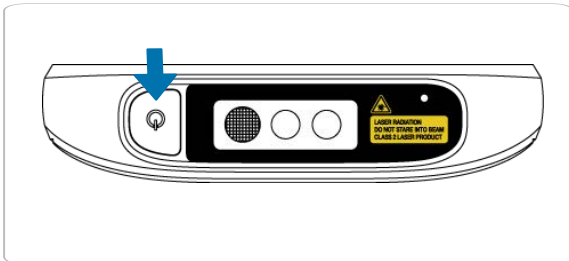

4.1.2 Turning the Device Off

- 1 Press and hold the Power button for a few seconds.
- 2 Tap **Power off**.





 



- To turn the screen on or off, press the Power button.
- Registering the accounts without turning on the Wi-Fi may incur extra charges depending on your data plan.



4.2 Using the Touchscreen

Use finger gestures to use the touchscreen effectively.

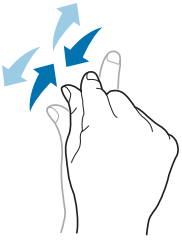
-  Do not touch the screen with any sharp objects.
- Do not apply too much pressure to the touchscreen.

Gesture	Name	Description
	Tap	Briefly touch an item to open, launch, or select it.
	Zoom in or out	Place two fingers on the screen and spread them apart to zoom in. Pull the fingers together to zoom out. You can also double-tap the screen quickly to zoom in or out.
	Tap and hold	Touch an item or the screen for a few seconds to access more detailed menus or options.
	Swipe	Touch the screen and quickly flick in any direction to scroll through menus or pages.
	Drag	Touch an item or the screen for a few seconds and move your finger around the screen to move the item or move through screens.




4.3 Using the Home Screen

  The Home screen is the starting point for all apps and features. It displays icons, shortcuts, and widgets for apps.

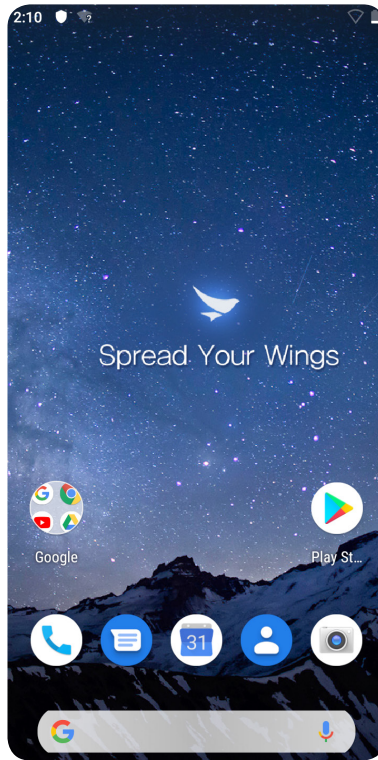

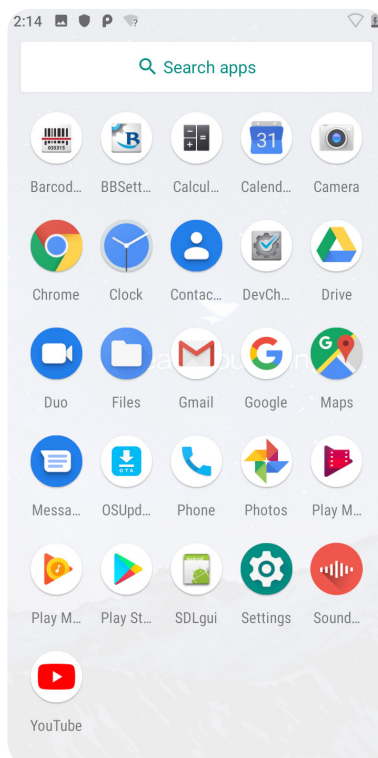

Drag upward from the bottom of the screen. Applications will be displayed on the screen. To view other pages, swipe left or right.





4.4 Connecting to a Wi-Fi Network

Connecting to a Wi-Fi network is an easy way of accessing the Internet. When you are out, you can connect to Wi-Fi networks in public places.

- 1 On the Home screen, tap  >  **Wi-Fi**.
- 2 Make sure to turn Wi-Fi on.
- 3 Tap the network you want to join.
- 4 If necessary, enter the password for the network and tap **CONNECT**.

To disconnect the network connection, turn Wi-Fi off.



 Your device periodically checks for and notifies you of available connections. The notification appears briefly at the top of the screen.

4.5 Connecting to a Bluetooth Device

You can connect wirelessly to various Bluetooth-compatible devices, such as phones, computers, headsets, and car kits. You can also send your photos to Bluetooth-compatible phones or to your computer.

On the Home screen, tap  >  **Bluetooth**.

Because devices with Bluetooth wireless technology communicate using radio waves, they do not need to have a direct line of sight. However, they must be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions, such as walls or from other electronic devices.

-  Paired devices can be connected to your device when Bluetooth turns on.
 -  Other devices can detect your device only if the Bluetooth settings view is open.
-  Do not accept the requests from unknown devices and also do not try to pair with an unknown devices. This helps to protect your device from harmful content.



4.6 Battery Hot Swap

-This device supports Battery Hot Swap function.

-Battery Hot Swap is a function to replace the battery with a spare battery while using the device without Power Off.

Battery hot swap operation procedure:

- 1 Turn the off LCD by pressing the power button.
- 2 Push the battery latches to remove the battery
- 3 After replacing the battery, place the battery into place.
- 4 To use the device, press the power button and check that the LCD is turned on.



- Before hot swap, turn the LCD screen off by using the Power button.
- The hot swap battery required for this function keeps charging while the device is turned on, and it stops when fully charged.
- When you use the device for the first time, it is recommended to use the device after charging it in the Power On mode for at least 3 hours.



- Do not use Hot Swap within 3 minutes of the initial booting of the device.
- After removing the battery used for Hot Swap, replace it with a fully charged spare battery within 2 minutes.
- In case that the battery is not replaced for 10 minutes after removing the battery for Hot Swap, the device will automatically power off to prevent discharge of the hot swap battery. At this time, you need to be careful as data loss may occur.
- Do not replace SIM, SAM, or MicroSD Card while Hot Swap is in progress.
- Re-run at least 15 minutes later after running Battery Hot Swap.

5 Device Specification



Physical Characteristics

Dimensions (W x H x D)	161.26 x75.8 x 14.9mm
Weight	257.5g
Display	5.5" HD+ (1440 x 720)
Imager Window	Corning® Gorilla® Glass
Touchpanel	Capacitive touch panel, support multi-touch, works with gloves and wet fingers
Backlight	LED backlight
Power	User replaceable Battery Standard Battery : 3.85V / 4500mAh BOS™ PowerManager Station Extended Battery : 3.85V / 7000mAh BOS™ PowerManager Station
Hot swap	Supported
Expansion Slot	User Accessible MicroSD up to 512GB
SIM / SAM	WWAN SKU Only : 1 Nano SIM, eSIM
Interface	Rear : 8-PIN communication connector Bottom : USB Type-C Connector 2-pin Charging Connector
Notification	Audible tone; Vibration Scan LED ; Charging LED (multi-color LEDs)
Keypad	On-screen keypad Power Button Volume Up/Down Button Programmable Button dual-action side scan buttons;
Voice and Audio	Dual noise-cancelling microphones; vibrate alert; High-quality Single speaker phone; PTT headset support; Bluetooth wireless headset support, 3.5mm headset jack
PTT Hot Key	Supported - available dual-action side scan triggers



Performance Characteristics

CPU	Qualcomm SM6225 Octa-Core Up to 2.4GHz
Operating System	Android 14 (support for android 16, 18 versions)
Memory	6GB RAM / 64GB UFS Flash 6GB RAM / 128GB UFS Flash (optional)

User Environment Characteristics

Operating Temp	-20°C to 50°C / -4°F to 122°F
Storage Temp	-40°C to 70°C / -40°F to 158°F
Humidity	5% to 95% non condensing
Drop Spec	5 ft./ 1.5 m drop to tile over concrete per MIL-STD 810G across operating temperature
	6 ft./ 1.8 m drop to tile over concrete per MIL-STD 810G across operating temperature with rugged boot
Tumble Spec	600 tumbles, 1.6 ft./0.5 m;
	(Rugged boot) 600 tumbles 3.3 ft./1.0 m tumbles optional protective boot
Sealing	IP68
Vibration	Sine: 4 g's peak, 5 Hz to 2 kHz, 1 hour duration per axis Random: 0.04 g ² /Hz or 6 g RMS, 20 Hz to 2 kHz
Thermal Shock	-40°C to 70°C / -40°F to 158°F
Electrostatic Discharge (ESD)	+/- 15KV air discharge with charger +/- 8KV direct contact discharge with charger +/-8kVdc indirect discharge



Communication Options

WWAN Radio	Worldwide : 4G : LTE-FDD: B1/B2/B3/B4/B5/B7/B8/B19/B20/B28 LTE-TDD: B38/B40/B41 3G : UMTS: B1/B2/B3/B4/B5/B8/B9/B19 2G : GSM: 850/900/1800/1900
WLAN Radio	WLAN 1 × 1 IEEE 802.11 a/b/g/n/ac/d/h/i/r/k/v1/w/ax(ready)
WLAN Data Rates	2.4 GHz: 802.11b/g/n 20 MHz, 40 MHz — up to 150 Mbps 5 GHz: 802.11a/g/n/ac 20 MHz, 40 MHz, 80 MHz - up to 433 Mbp
WPAN Radio	Bluetooth V5.0, BLE, Class 2

Accessories

Accessories	5V/3A Direct Charging Power adapter USB C to A data cable 1 Slot Charging Cradle 4 Slot Charging Cradle Handstrap Rugged boots Trigger Handle RFID bracket/Sled Keypad Protective Film Fiber Tipped Stylus Pen
-------------	--



Please ask your sales representative for the specifications not listed above or for future upgradeable specifications.



The battery does not charge properly.

- Ensure that your device and the charging cable are connected and the charging LED is functioning correctly.
- If the battery does not charge completely, it may be dead or defective. Contact our service center. (The warranty period for battery replacement is six months.)

The battery life got shorter.

When you use network data or peripheral device such as wireless LAN or Bluetooth that require more power, your device may use more battery than usual. If it happens for an extended period of time, your battery may be dead. Then replace it with a new battery.

I dropped the device in water.

Turn off the device. Place the device in a dry place. Let it dry completely for a considerable period of time, and then turn the device back on. If it does not turn back on, contact our service center.

My device gets too hot to touch.

It is normal for the device to warm up while it is receiving a poor signal, performing an intense workload, or charging. It should cool down if you stop using the device for a certain amount of time. If the problem continues, contact the manufacturer. It may result in a burst battery or fire.

How do I get the repair service?

You can contact your local sales representative or you can send the device via a delivery service to Bluebird's Korean headquarters. When sending the package, make sure you pay for the shipping fee in advance. When the repair is finished, Bluebird will cover the shipping cost.



Customer support

Before asking for after-sales service, please back up the data on the device. We do not back up data from the products sent to the Customer Service Center. Therefore, we assume no responsibility for loss/deletion of data.

Customer Service Center

#1103, Gplus Kolon Digital Tower 11F,
Digital-ro 26-gil 123, Guro-gu, Seoul, Republic of Korea(08390)

- Fax: +82-2-6499-2242
- Email: rma@bluebirdcorp.com
- Hours: 9:30 a.m. - 6:30 p.m. (GMT Time: +9 Hours)



The center is closed on Saturdays, Sundays, and Korean national holidays.

Registering for After-Sales Service

- We receive the products for our after-sales service through mail, delivery services and hand delivery only in principle.
- If you bought the product from a party other than Bluebird or an authorized Bluebird reseller, you need to register the product before using our after-sales service.
- Please enclose an evidence of purchase or the product receipt for our after-sales service.
- Please enclose your name, telephone number, address and details of the problem for a prompt service.
- You can ask for our after-sales service by contacting your authorized Bluebird dealer or the Customer Service Center in the head office.
- Do not intentionally damage the label on the product.
- A damaged label may result in a disadvantage to the customer.
- When you return the product to Bluebird for service, please put the product in a protective box.
- The warranty will not cover any damage which occurs during delivery. We advise you to use the box and protective cover supplied with the product.
- Make sure to deliver the product in a safe way. Bluebird assumes no responsibility for the loss of the product during delivery.



Charged services

- In the following cases, it will be charged when requesting for after-sales service.
 - Service request due to inappropriate use of the device by the customer
 - Loss of PIN number
 - Use of programs that might affect the program (over-clock, forceful changes in the input of the system, personal developments)
- Faults caused by the customer.
 - Defect due to inappropriate or careless use of the product (dropping, submersion under water, shock, damage, unreasonable operations, etc.)
 - Defect due to a repair or unauthorized technician
 - Defect caused intentionally or by the carelessness of the customer
 - Defect due to the use of fraudulent parts or components
- Other cases
 - Defect due to nature (damage caused by fire, wind, flooding, etc.)
 - Accessories are out of warranty (accessories like battery/charger/cable/adapter, etc. have a warranty of 6 months)
- Regulations for repairs after charged services
 - If the same fault occurs in the part that has been repaired within a 1 month (30 days), the part will be repaired free of charge.



No refunds will be offered in the following situations:

- The product seal has been removed (if applicable).
- The product has been damaged due to careless use by the customer or due to a natural disaster (floods, rain, fire, etc.).
- Loss of product or other components (manual, connecting cables, etc).
- DOA (Dead on Arrival) policy
If your product is DOA (Dead on Arrival), or has malfunction within 30 days of purchase (DOA period), the product will either be exchanged or provided with after-sales service.



Warranty certificate

Thank you for purchasing a product from Bluebird Inc.

- In case of accessories such as batteries, only those that match the sales list managed by the Customer Service Center will be eligible for customer service.
- A repair or an exchange of batteries that does not match the sales list of the Customer Service Center due to the carelessness of the customer will be fully charged.

Name of Product	Cost Effective Full Touch Handheld Computer
Name of Model	S10
Date of Purchase	
Manufacture Number	
Place of Purchase	
Term of Guarantee	1 year from purchase

Warranty information

- Bluebird Inc. (hereinafter referred to as Bluebird) provides the warranty service for its products in compliance with the Bluebird's warranty program.
- Upon receiving a notification on a defect of its product within the range of warranty during the warranty period, Bluebird will repair or replace the defective product according to its warranty policy.
- If the defective product within the range of warranty is not repairable or replaceable, Bluebird shall refund the purchasing price within a designated period from the date of receiving a notice of defect.
- Bluebird assumes no responsibility for repairing, replacement or refund until it receives the defective product from the customer. The replacement shall be equivalent to a new product in the aspect of performance.
- Bluebird products may contain the recycled products, components or materials equivalent to new products in the aspect of performance.
- This warranty is applied to software products only when the programming commands are not executed. Bluebird does not guarantee interruption-free or error-free performance.



BLUEBIRD

BLUEBIRD CUSTOMER SERVICE

Operating Hours

Monday to Friday 9:30 A.M. - 6:30 P.M.
(GMT Time: +9 Hours)
The center is closed on Saturdays,
Sundays, and Korean national holidays.

Customer Service Center

#1103, Gplus Kolon Digital Tower 11F,
Digital-ro 26-gil 123, Guro-gu, Seoul,
Republic of Korea(08390)

Bluebird constantly strives to bring utmost satisfaction to all our customers.

S10

Premium Enterprise Features at an affordable Price that keeps your business running : Accessory Selection Guide

In today's fast-moving on-demand economy, businesses need a reliable solution to manage growing order volumes with speed and accuracy. The Bluebird S10 mobile computer delivers rugged performance across diverse environments, ensuring seamless data access, extended battery life, and dependable scanning. Empower your workforce with a proven device that offers exceptional value and efficiency.



Bluebird offers a diverse range of accessories designed to enhance convenience and adaptability across various environments, ensuring a more versatile user experience.

Contents

I. Power Accessories

1 Cradles

1.1 [1 Slot & 4 Slot Charging Cradles](#)

2 Batteries

2.1 [Batteries](#)

3 Power Supplies, Cables and Adapters

3.1 [Power Supplies and Cables](#)

3.2 [Country-Specific AC Power Cords \(KR,TW,CH,JP,CN,EU\)](#)

3.3 [Country-Specific AC Power Cords \(NA,UK,AU\)](#)

3.4 [Country-Specific Adapter Plugs](#)

II. Productivity Accessories

4 Vehicle Accessories

4.1 [Vehicle Accessories](#)

5 Other Accessories

5.1 [Hand Strap, Shoulder Strap and Stylus Pen](#)

6 Trigger Handle and Accessories

6.1 [Trigger Handle and Accessories](#)

III. Protective Accessories

7 Holsters, Rugged Boots and Screen Protectors

7.1 [Holster, Rugged Boot and Screen Protectors](#)

I . Power Accessories

1 Slot & 4 Slot Charging Cradles



1 Slot Charging Cradle

Part Name : CRD-C1S1B-S1#&RFR90#-TA-V1

Part # : 204010094

1 Slot Charging Cradle with Spare Battery Charging

- Requires (Power Adapter 9V/3A, [view list](#)) and (Country Specific AC Power Cord, [view list](#)).
- Requires (Shim [1ea]) for compatibility with S10 SKUs without Rugged Boots.



4 Slot Charging Cradle

Part Name : CRD-C4S4B-S1#&RFR90#-TA-V1

Part # : 204020041

4 Slot Charging Cradle with Spare Battery Charging

- Requires (Power Adapter 9V/10A, [view list](#)) and (Country Specific AC Power Cord, [view list](#)).
- Requires (Shims [4ea]) for compatibility with S10 SKUs without Rugged Boots.



Shim

Part Name : CRD-SHIM-S1#-TA-V1

Part # : 501260145

Cradle Shim

- SHIM is required for compatibility with S10 SKUS (without Rugged Boots) to 1-slot, 4-slot cradles.

[Back to Contents](#)

I . Power Accessories

Batteries



Standard Battery

Part Name : BTRY-STD-S1#-TA-V1

Part # : 355040117

Standard capacity 4,500 mAh battery.

- Thoroughly tested for safety, boasting a long life cycle, and ensuring a reliable and durable power source.
- Provides battery management system and applications which improve the performance of a lithium-ion battery.



Extended Battery

Part Name : BTRY-EXT-S1#-TA-V1

Part # : 355040116

Extended capacity 7,000 mAh battery.

- Thoroughly tested for safety, boasting a long life cycle, and ensuring a reliable and durable power source.
- Provides battery management system and applications which improve the performance of a lithium-ion battery.
- Has a higher capacity to store more energy and provide longer use.

[Back to Contents](#)

I . Power Accessories

Power Supplies and Cables

Power Supply



Power Adapter

Part Name : PWR-ADPT-5V3A-TB-V1

Part # : 602010041

5V/3A power adapter Type B.

- Requires Country Specific Adapter Plug and USB Type C to A cable



Power Adapter

Part Name : PWR-ADPT-9V10A-TA-V1

Part # : 602010013

9V/10A power adapter.

- Requires Country Specific ac power cord.



Power Adapter

Part Name : PWR-ADPT-9V3A-TA-V1

Part # : 602010012

9V/3A power adapter.

- Requires Country Specific AC Power Cord.

Cable



Cable

Part Name : CBL-USBA2C-1MUSB3.0-TA-V1

Part # : 603010005

USB A to USB C communications and charging cable.

- Supports USB 3.0.

I . Power Accessories

Country-Specific AC Power Cords (KR,TW,CH,JP,CN,EU)

Country-Specific AC Power Cord



AC Power Cord

Part Name : PWR-CORD-KR-TA-V1

Part # : 14512

Korea

- Power cable.



AC Power Cord

Part Name : PWR-CORD-TW-TA-V1

Part # : 603060004

Taiwan

- Power cable.



AC Power Cord

Part Name : PWR-CORD-CH-TA-V1

Part # : 603060003

Switzerland

- Power cable.



AC Power Cord

Part Name : PWR-CORD-JP-TA-V1

Part # : 16995

Japan

- Power cable.



AC Power Cord

Part Name : PWR-CORD-CN-TA-V1

Part # : 14949

China

- Power cable.



AC Power Cord

Part Name : PWR-CORD-EU-TA-V1

Part # : 14948

Europe

- Power cable.

[Back to Contents](#)

[Back to Cradles](#)

I . Power Accessories

Country-Specific AC Power Cords (NA,UK,AU)

Country-Specific AC Power Cord



AC Power Cord

Part Name : PWR-CORD-AU-TA-V1

Part # : 14515

Australia

- Power cable.



AC Power Cord

Part Name : PWR-CORD-NA-TA-V1

Part # : 14514

North America

- Power cable.



AC Power Cord

Part Name : PWR-CORD-UK-TA-V1

Part # : 14513

United Kingdom

- Power cable.

I . Power Accessories

Country-Specific Adapter Plugs

Country-Specific Adapter Plugs



Adapter Plug

Part Name : PWR-PLUG-5V3AUK-TB-V1

Part # : 602020025

United Kingdom

- Requires 5V/3A power adapter Type B.



Adapter Plug

Part Name : PWR-PLUG-5V3AEU-TB-V1

Part # : 602020024

Europe

- Requires 5V/3A power adapter Type B.



Adapter Plug

Part Name : PWR-PLUG-5V3AAU-TB-V1

Part # : 602020026

Australia

- Requires 5V/3A power adapter Type B.



Adapter Plug

Part Name : PWR-PLUG-5V3ANA-TB-V1

Part # : 602020028

North America

- Requires 5V/3A power adapter Type B.



Adapter Plug

Part Name : PWR-PLUG-5V3AKR-TB-V1

Part # : 602020027

Korea

- Requires 5V/3A power adapter Type B.

[Back to Contents](#)

I . Power Accessories

Country-Specific Adapter Plugs

Country-Specific Adapter Plugs

Adapter Plug

Part Name : PWR-PLUG-5V3ACN-TB-V1

China

- Requires 5V/3A power adapter Type B.

Adapter Plug

Part Name : PWR-PLUG-5V3AJP-TB-V1

Japan

- Requires 5V/3A power adapter Type B.

II. Productivity Accessories

Vehicle Accessories



Cigarette Lighter Adapter

Part Name : PWR-ADPT-CLA5V4A-TA-V1

Part # : 602010023

5V/4A Cigarette Lighter Adapter

- Requires USB-A to USB-C Communication and Charging Cable
- Supports USB A ports (2ea)

II. Productivity Accessories

Hand Strap, Shoulder Strap and Stylus Pen



Hand Strap

Part Name : STRP-HDSTP-S1#&S2#&S5#-TA-V1

Part # : 357010003

Hand strap for convenient wearing.

- Allows device to be easily held in palm of hand.
- Attaches directly to device via a clip-on method.
- Includes loop for holding optional stylus.



Shoulder Strap with Metal Hook

Part Name : STRP-SHDR-1M-TA-V1

Part # : 621040003

Shoulder strap for convenient wearing.

- Includes Metal Hook
- Requires Shared Holster



Stylus Pen

Part Name : STYLUS-FIBER-PSSV-TA-V1

Part # : 626010007

Stylus pen for convenient touchscreen use.

- Fiber Tipped, made from aluminum
- Slip the stylus pen into the hand strap's built-in loop for secure, effortless carry all day long

[Back to Contents](#)

II. Productivity Accessories

Trigger Handles and Accessories



Trigger Handle

Part Name : TRGH-COMBAT-S1#-TA-V1

Part # : 210080027

Trigger Handle for S10 Standard and Extended Battery



Wrist Strap

Part Name : STRP-WRST-SLTHR205MM-TA-V1

Part # : 621020001

Wrist strap for trigger handle.

- Requires Trigger Handle or RFR900/RFR901

[Back to Contents](#)

III. Protective Accessories

Holster, Rugged Boot and Screen Protectors



Shared Holster

Part Name : HLSTR-FABRIC-L175MM-TA-V1

Part # : 622020004

Shared holster for S10 protection.

- Includes Belt Clip



Rugged Boot

Part Name : CASE-RB-S1#-TA-V1

Part # : 351120042

Rugged Boot for S10 protection.

- Increase drop resistance to 1.8m when attached



Screen Protector

Part Name : SCRNP-TGLSAF-S1#-TA-V1

Part # : 624010040

Screen protector providing some defense against minor bumps and drops.

- Tempered glass.
- Includes alcohol wipes, cleaning cloth, and instructions needed for screen protector installation.



Screen Protector

Part Name : SCRNP-FLMAF-S1#-TA-V1

Part # : 624010041

Screen protector providing some defense against minor bumps and drops.

- Anti-Fingerprint / Film
- Includes alcohol wipes, cleaning cloth, and instructions needed for screen protector installation.

[Back to Contents](#)

TSC Auto ID (Corporate Headquarters)

TSC Auto ID Technology Co., Ltd.

Tel: +886 2 2218 6789

E-mail: apac_sales@tscprinters.com

LI ZE PLANT

TSC Auto ID Technology Co., Ltd.

Tel: +886 3 990 6677

E-mail: apac_sales@tscprinters.com

CHINA

Tianjin TSC Auto ID Technology Co., Ltd.

Tel: +86 22 5981 6661

E-mail: apac_sales@tscprinters.com

ASIA PACIFIC

TSC Auto ID Technology Co., Ltd.

Tel: +886 2 2218 6789

E-mail: apac_sales@tscprinters.com

KOREA

TSC Korea Representative Office

Tel: +82 2 852 3322

E-mail: apac_sales@tscprinters.com

INDIA

TSC India Representative Office

Tel: +91 2249 679 315

E-mail: apac_sales@tscprinters.com

EMEA

TSC Auto ID Technology EMEA GmbH

Tel: +49 (0) 8106 37979 000

E-mail: emea_sales@tscprinters.com

RUSSIA

TSC Auto ID Technology EMEA GmbH

Tel: +7 495 646 3538

E-mail: emea_sales@tscprinters.com

MIDDLE EAST

TSC Auto ID Technology ME Ltd, FZE

Tel: +971 4 2533 069

E-mail: emea_sales@tscprinters.com

AMERICAS

TSC Auto ID Technology America Inc.

Tel: +1 657 258 0808

E-mail: americas_sales@tscprinters.com

MEXICO

TSC Mexico Representative Office

Tel: +1 52 (33) 3673 1406

E-mail: americas_sales@tscprinters.com

BRAZIL

TSC Brazil Representative Office

Tel: +55 (11) 3554 7225

E-mail: americas_sales@tscprinters.com