



Roteador TP-Link TL-WR841HP

Com o seu hardware atualizado, o TL-WR841HP supera facilmente os roteadores padrão, fornecendo cobertura sem fio consideravelmente expandida e conexões significativamente mais confiáveis.



User Guide

300Mbps High Power Wireless N Router
TL-WR841HP

Contents

About This Guide	1
 Chapter 1. Get to Know About Your Router	 2
1. 1. Product Overview.....	3
1. 2. Panel Layout.....	3
1. 2. 1.Top View	3
1. 2. 2.The Back Panel.....	5
 Chapter 2. Connect to the Internet	 6
2. 1. Position Your Router	7
2. 2. Connect to the Internet	7
2. 2. 1.Install the Antennas	7
2. 2. 2.Router Mode	7
2. 2. 3.Repeater/Bridge Mode	10
2. 2. 4.Access Point Mode.....	12
 Chapter 3. Log In to Your Router.....	 14
 Chapter 4. Configure the Router as a Standard Wireless Router	 16
4. 1. Status	17
4. 2. Operation Mode	18
4. 3. Network	19
4. 3. 1. WAN.....	19
4. 3. 2. LAN	26
4. 3. 3. IPTV.....	27
4. 3. 4.MAC Clone.....	27
4. 4. Wireless	28
4. 4. 1.Basic Settings.....	28
4. 4. 2. WPS.....	30
4. 4. 3.Wireless Security	31
4. 4. 4.Wireless MAC Filtering	33
4. 4. 5.Wireless Advanced.....	34
4. 4. 6.Wireless Statistics	36
4. 5. Guest Network.....	36
4. 6. DHCP.....	37

4. 6. 1.DHCP Settings	37
4. 6. 2.DHCP Clients List	38
4. 6. 3.Address Reservation	39
4. 7. Forwarding	40
4. 7. 1.Virtual Server	40
4. 7. 2.Port Triggering	41
4. 7. 3. DMZ.....	42
4. 7. 4. UPnP.....	43
4. 8. Security	44
4. 8. 1.Basic Security.....	44
4. 8. 2.Advanced Security	46
4. 8. 3.Local Management.....	47
4. 8. 4.Remote Management	48
4. 9. Parental Controls	49
4. 10. Access Control	50
4. 11. Advanced Routing	52
4. 11. 1.Static Route List	52
4. 11. 2.System Routing Table	53
4. 12. Bandwidth Control	54
4. 12. 1.Control Settings	54
4. 12. 2.Rule List	55
4. 13. IP&MAC Binding	55
4. 13. 1.Binding Settings	56
4. 13. 2.ARP List	56
4. 14. Dynamic DNS.....	57
4. 15. IPv6	60
4. 15. 1.IPv6 Status	60
4. 15. 2.IPv6 WAN.....	60
4. 15. 3.IPv6 LAN.....	64
4. 16. System Tools	65
4. 16. 1.LED Control.....	65
4. 16. 2.Time Settings.....	65
4. 16. 3.Diagnostic	66
4. 16. 4.Firmware Upgrade	68
4. 16. 5.Factory Defaults	68
4. 16. 6.Backup & Restore	69
4. 16. 7.Reboot	69
4. 16. 8.Password	70
4. 16. 9.Language.....	70

4. 16. 10.	System Log	71
4. 17.	Log Out.....	71

Chapter 5. Configure the Router as an Access Point 72

5. 1.	Status	73
5. 2.	Operation Mode	74
5. 3.	Network	74
5. 3. 1.	LAN.....	74
5. 4.	Wireless	75
5. 4. 1.	Basic Settings.....	75
5. 4. 2.	WPS.....	77
5. 4. 3.	Wireless Security	78
5. 4. 4.	Wireless MAC Filtering	80
5. 4. 5.	Wireless Advanced.....	81
5. 4. 6.	Wireless Statistics	83
5. 4. 7.	Throughput Monitor	83
5. 5.	DHCP.....	84
5. 5. 1.	DHCP Settings	84
5. 5. 2.	DHCP Clients List	86
5. 5. 3.	Address Reservation	86
5. 6.	System Tools	87
5. 6. 1.	LED Control	87
5. 6. 2.	Time Settings	87
5. 6. 3.	Diagnostic	89
5. 6. 4.	Firmware Upgrade.....	90
5. 6. 5.	Factory Defaults	90
5. 6. 6.	Backup & Restore	91
5. 6. 7.	Reboot.....	91
5. 6. 8.	Password	92
5. 6. 9.	Language	92
5. 6. 10.	System Log.....	93
5. 7.	Log Out.....	95

Chapter 6. Configure the Router as a Repeater 96

6. 1.	Status	97
6. 2.	Operation Mode	98
6. 3.	Network	98
6. 3. 1.	LAN.....	98
6. 4.	Wireless	99

6. 4. 1.	Connect to Network.....	99
6. 4. 2.	Extended Network	100
6. 4. 3.	Wireless MAC Filtering	101
6. 4. 4.	Wireless Advanced.....	102
6. 4. 5.	Wireless Statistics	104
6. 5.	DHCP.....	104
6. 5. 1.	DHCP Settings	104
6. 5. 2.	DHCP Clients List	105
6. 6.	System Tools	106
6. 6. 1.	LED Control	106
6. 6. 2.	Time Settings	106
6. 6. 3.	Diagnostic	108
6. 6. 4.	Firmware Upgrade.....	109
6. 6. 5.	Factory Defaults	109
6. 6. 6.	Backup & Restore	110
6. 6. 7.	Reboot.....	110
6. 6. 8.	Password	111
6. 6. 9.	Language	111
6. 6. 10.	System Log.....	112
6. 7.	Log Out.....	114
FAQ		116







About This Guide

This guide is a complement of Quick Installation Guide. The Quick Installation Guide instructs you on quick internet setup, and this guide provides details of each function and shows you the way to configure these functions appropriate to your needs.

When using this guide, please notice that features of the router may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
<u>Underlined</u>	Underlined words or phrases are hyperlinks. You can click to redirect to a website or a specific section.
Teal	Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons, etc.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.
symbols on the web page	<ul style="list-style-type: none"> click to edit the corresponding entry. click to delete the corresponding entry. click to enable or disable the corresponding entry. click to view more information about items on the page.

More Info

The latest software, management app and utility can be found at [Download Center](http://www.tp-link.com/support) at <http://www.tp-link.com/support>.

The Quick Installation Guide can be found where you find this guide or inside the package of the router.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at the [Contact Technical Support](http://www.tp-link.com/support) page at <http://www.tp-link.com/support>.

Chapter 1

Get to Know About Your Router

This chapter introduces what the router can do and shows its appearance.

It contains the following sections:

- [Product Overview](#)
- [Panel Layout](#)

1.1. Product Overview

The TP-Link router is designed to fully meet the need of Small Office/Home Office (SOHO) networks and users demanding higher networking performance. The powerful antennas ensure continuous Wi-Fi signal to all your devices while boosting widespread coverage throughout your home, the built-in Ethernet ports supply high-speed connection to your wired devices, and the flexible working modes are capable to meet all your network needs.

Moreover, it is simple and convenient to set up and use the TP-Link router due to its intuitive web interface and the powerful Tether app.

1.2. Panel Layout

1.2.1. Top View



RE button: This button is located on the top panel of the router. Press and hold it for about 3 seconds to change to the Range Extender mode.

The router's LEDs (view from left to right) are located on the front panel. You can check the router's working status by following the LED Explanation table.

LED Explanation

Name	Status	Indication
RE	Blinking	The router is connecting to the host wireless network. This may take up to 2 minutes.
	On	The router is working in Repeater mode and connected to the host wireless network.
Wi-Fi	On	The wireless function is enabled.
	Off	The wireless function is disabled.
PWR	On	Power is on.
	Blinking	The system is starting up or firmware is being upgraded. Do not disconnect or power off the router.
	Off	Power is off.
WAN	Blue On	The internet is available.
	Orange On	The router's WAN port is connected, but the internet is not available.
	Off	The router's WAN port is not connected to a powered-on device.
LAN	On	At least one LAN port is connected to a powered-on device.
	Off	No LAN port is connected to a powered-on device.
WPS	On/Off	This light remains on for 5 minutes when a WPS connection is established, and then turns off.
	Blinking	WPS connection is in progress. This may take up to 2 minutes.

1. 2. 2. The Back Panel



The following parts (view from left to right) are located on the rear panel.

Item	Description
Ethernet Ports (1/2/3/4)	For connecting your PCs or other wired network devices to the router.
WPS	If your devices, such as wireless adapters, that support Wi-Fi Protected Setup, then you can press this button to quickly establish a connection between the router and devices.
WAN Port	For connecting to a DSL/Cable modem, or an Ethernet jack.
Reset Button	Use a pin to press and hold this button until all the LED turn on momentarily to reset the router to its factory default settings.
Wi-Fi On/Off	Press and hold this button about 2 seconds to enable or disable Wireless function.
Power On/Off	For powering on or off the router.
Power Port	For connecting the router to a power socket via the provided power adapter.
Antennas	Used for wireless operation and data transmitting. Upright them for the best Wi-Fi performance.

Chapter 2

Connect to the Internet

This chapter contains the following sections:

- [Position Your Router](#)
- [Connect to the Internet](#)


2. 1. Position Your Router

- The product should not be located in a place where it will be exposed to moisture or excessive heat.
- Place the router in a location where it can be connected to multiple devices as well as to a power source.
- Make sure the cables and power cord are safely placed out of the way so they do not create a tripping hazard.
- The router can be placed on a shelf or desktop.
- Keep the router away from devices with strong electromagnetic interference, such as Bluetooth devices, cordless phones and microwaves.

2. 2. Connect to the Internet

2. 2. 1. Install the Antennas

Please install the antennas first by following the steps shown below before you start.

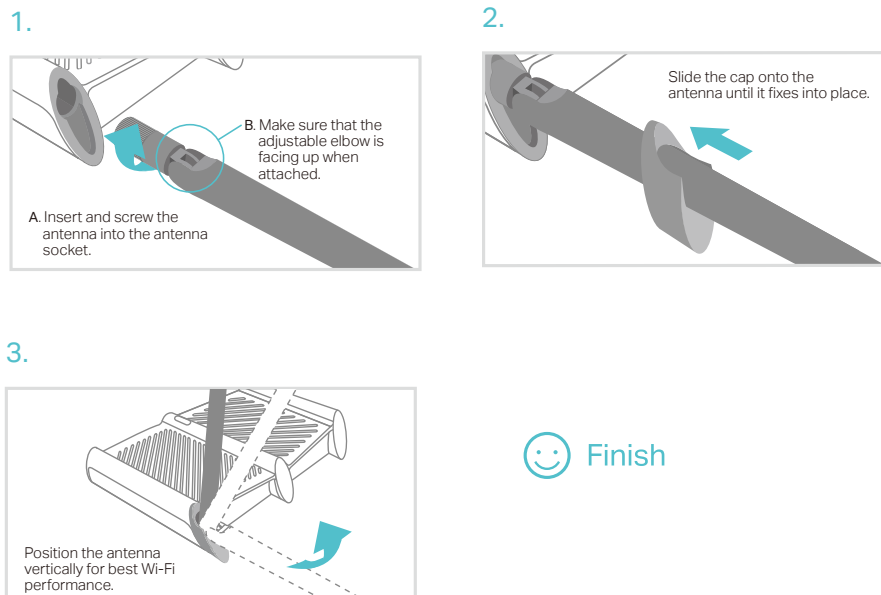


The router provides three working modes: Router, Repeater/Bridge and Access Point. You can choose the mode to better suit your network needs and follow the guide to complete the configuration.

2. 2. 2. Router Mode

This mode enables multiple users to share internet connection via ADSL/Cable Modem.

1. Follow the steps below to connect your router.

If your internet connection is through an Ethernet cable from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable directly to the router's WAN port, and then follow Step 4 and 5 to complete the hardware connection.

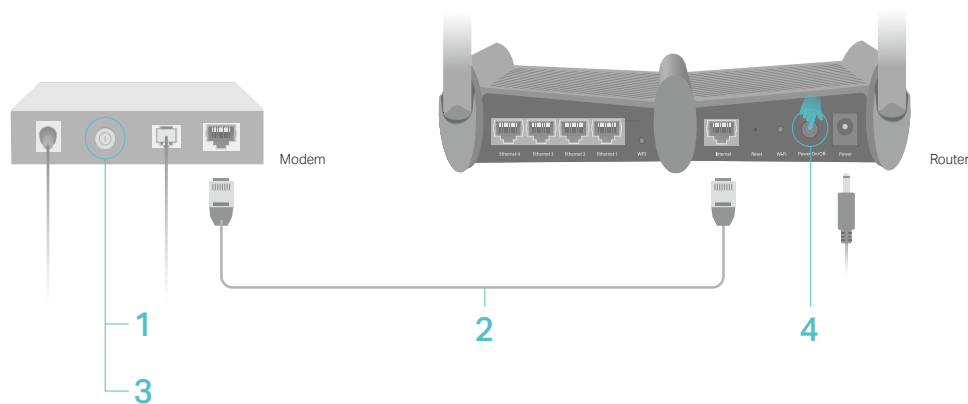

- 1) Turn off the modem, and remove the backup battery if it has one.
- 2) Connect the modem to the WAN port on your router with an Ethernet cable.
- 3) Turn on the modem, and then wait about **2 minutes** for it to restart.
- 4) Connect the power adapter to the router and turn on the router.
- 5) Verify that the hardware connection is correct by checking these LEDs.




 **Tips:** If the Wi-Fi LED is off, press and hold the Wi-Fi On/Off button until it is on.

2. Connect your computer to the router.

• Method 1: Wired


Turn off the Wi-Fi on your computer and connect the devices as shown below.

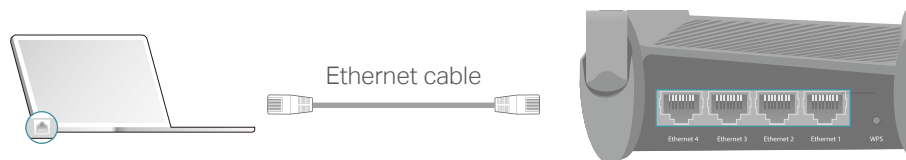

• Method 2: Wirelessly

- 1) Find the SSID (Network Name) and Wireless Password printed on the label at the bottom of the router.

- 2) Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

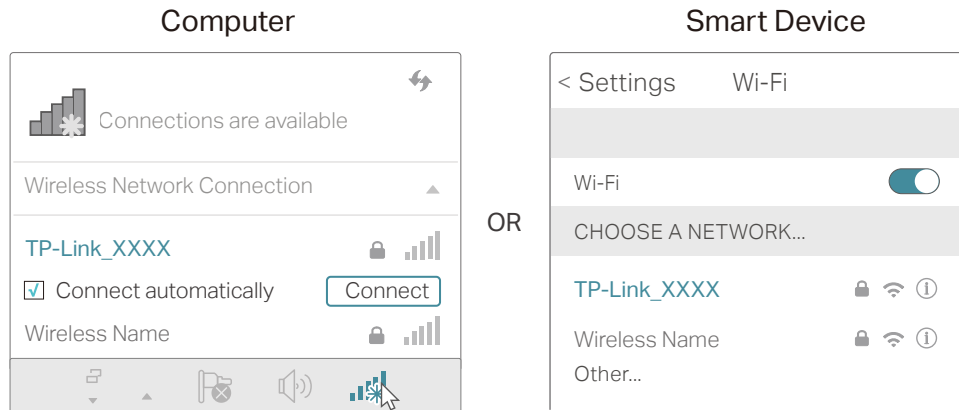


• Method 3: Use the WPS button

Wireless devices that support WPS, including Android phones, tablets, most USB network cards, can be connected to your router through this method (Not supported by iOS devices).

Note: The WPS function cannot be configured if the wireless function of the router is disabled. Also, the WPS function will be disabled if your wireless encryption is WEP. Please make sure the wireless function is enabled and is configured with the appropriate encryption before configuring the WPS.

- 1) Tap the WPS icon on the device's screen.
- 2) Immediately press the WPS button on your router.

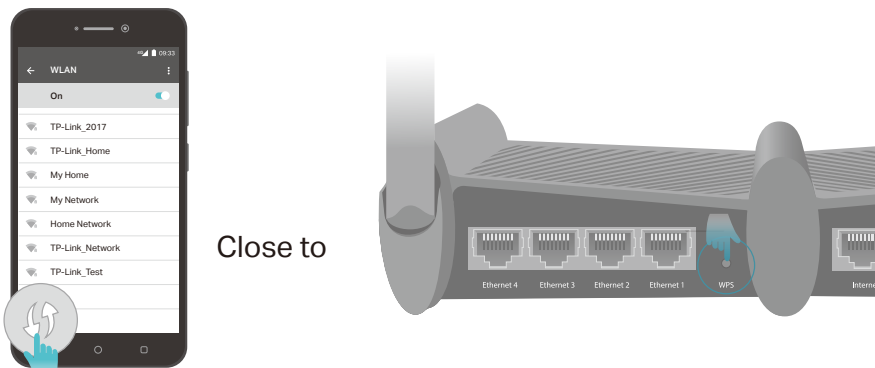

3. Enter <http://tplinkwifi.net> in the address bar of a web browser. Select the language you want to use and then use **admin** for both username and password. Then click **Log In**.

The image shows a web browser window with the address bar displaying `http://tplinkwifi.net`. The main content area has a heading "Please select the language you preferred" in red. Below this is a list of language options: English (highlighted in teal), Español(México), Português(Brasil), 繁體中文, Tiếng Việt, and 한국어. A teal "Next" button is positioned below the list. At the bottom of the page, there is a login section with two input fields labeled "Username" and "Password", each with a corresponding icon (a person and a key respectively). Below these fields is a teal "Log In" button.





■ Note: If the login page does not appear, please refer to the [FAQ](#) section.

4. After successful login, click **Next** to start the Quick Setup. Select **Wireless Router** and follow the step-by-step instructions to complete the initial configuration.
5. **Enjoy!** For wireless devices, you may have to reconnect to the wireless network if you have customized the SSID (network name) and password during the configuration.


2. 2. 3. Repeater/Bridge Mode

This mode boosts your home wireless coverage.

Step 1: Configure


 **Tips:** Using WPS Button is an easy way to extend your host network. We recommend you to use this way if your host router has the WPS button. The button might look like these:  |  | .


- **Option One: Using RE Button**

- 1) Press the WPS button on the host router.
- 2) Press and hold the  (RE button) on the top panel of the router for about 3 seconds within 1 minute. The router will start to reboot.
- 3) Once rebooted, the **RE LED** should change from blinking to a solid state, indicating a successful connection.

- **Option Two: Using Web Browser**

- 1) Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (Network Name) and password printed on the label at the bottom of the router.
- 2) Enter <http://tplinkwifi.net> in the address bar of a web browser. Select the language you want to use and then use **admin** for both username and password. Then click **Log In**.

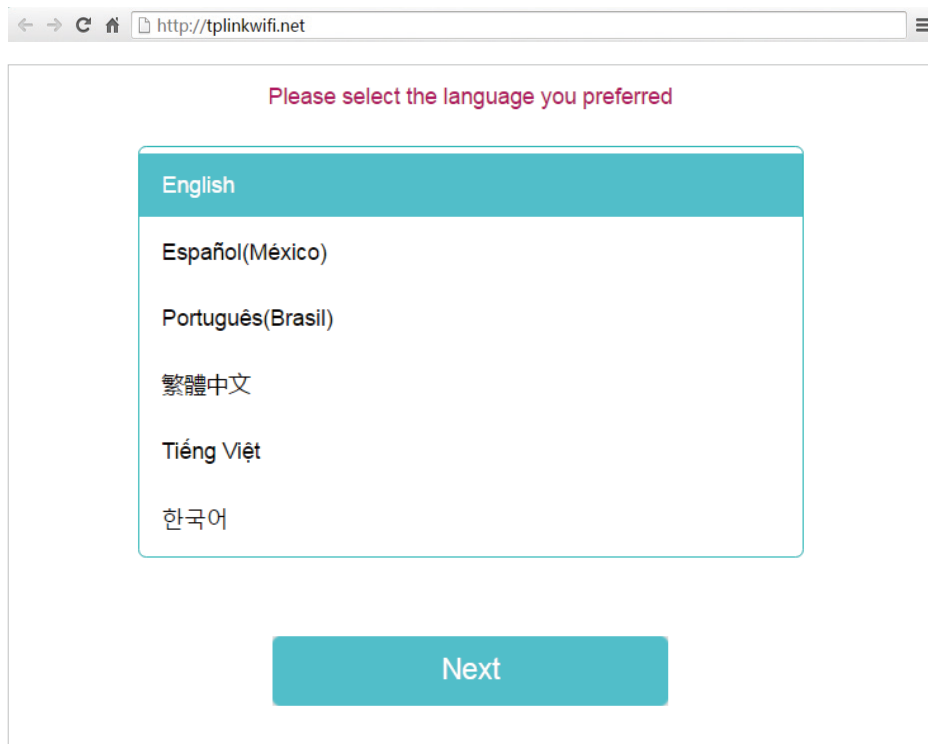


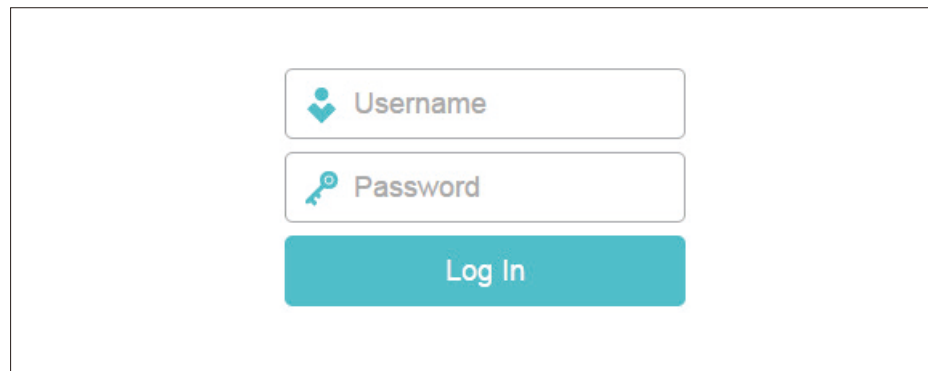

A login form with two input fields: 'Username' and 'Password'. The 'Username' field has a person icon, and the 'Password' field has a key icon. Below the fields is a teal 'Log In' button.

Note: If the login page does not appear, please refer to the FAQ section.


- 3) After successful login, click **Next** to start the Quick Setup. Select **Repeater/Bridge** and follow the step-by-step instructions to complete the initial configuration.
6. **Relocate:** Place the router between your host router and the Wi-Fi dead zone. The location you choose must be within the range of your existing host network.

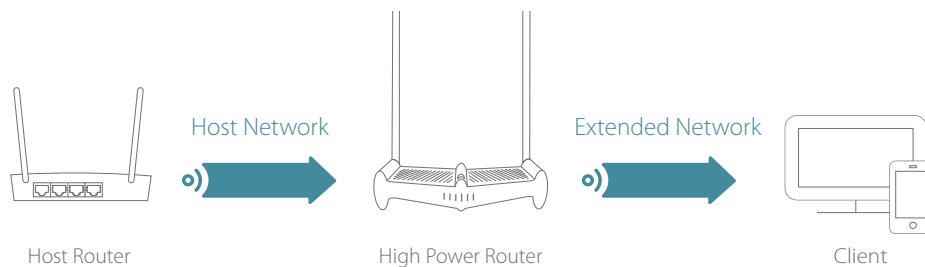

7. **Enjoy!** The extended network shares the same SSID (Network Name) and password as your host network.

2. 2. 4. Access Point Mode

This mode transforms your existing wired network to a wireless one.

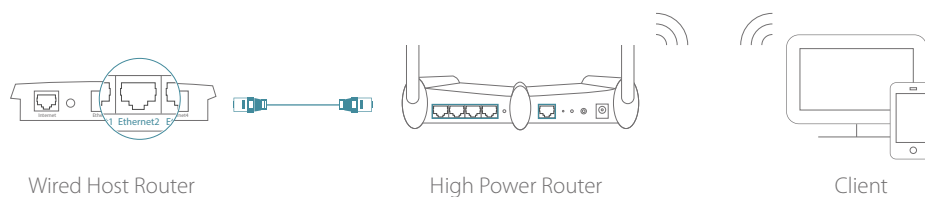

1. Connect the router to your wired host router's Ethernet port via an Ethernet cable as shown above and turn on the router.
2. Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name) and password printed on the bottom label of the router.

3. Enter <http://tplinkwifi.net> in the address bar of a web browser. Select the language you want to use and then use [admin](#) for both username and password. Then click [Log In](#).

← → ↻ 🏠 <http://tplinkwifi.net> ☰

Please select the language you preferred

- English
- Español(México)
- Português(Brasil)
- 繁體中文
- Tiếng Việt
- 한국어

Next

Username

Password

Log In

📌 Note: If the login page does not appear, please refer to the [FAQ](#) section.

4. After successful login, click [Next](#) to start the Quick Setup. Select [Access Point](#) and follow the step-by-step instructions to complete the initial configuration.
5. [Enjoy!](#) Connect to the wireless network by using the SSID (network name) and password of the router.

Chapter 3


Log In to Your Router

This chapter shows how to log in to the web management page of router.

With the web-based utility, it is easy to configure and manage the router. The web-based utility can be used on any Windows, Macintosh or UNIX OS with a Web browser, such as Microsoft the Internet Explorer, Mozilla Firefox or Apple Safari.

Follow the steps below to log in to your router.

1. Set up the TCP/IP Protocol in [Obtain an IP address automatically](#) mode on your computer.
2. Visit <http://tplinkwifi.net>, select the language you want to use and then use [admin](#) for both username and password. Then click [Log In](#).

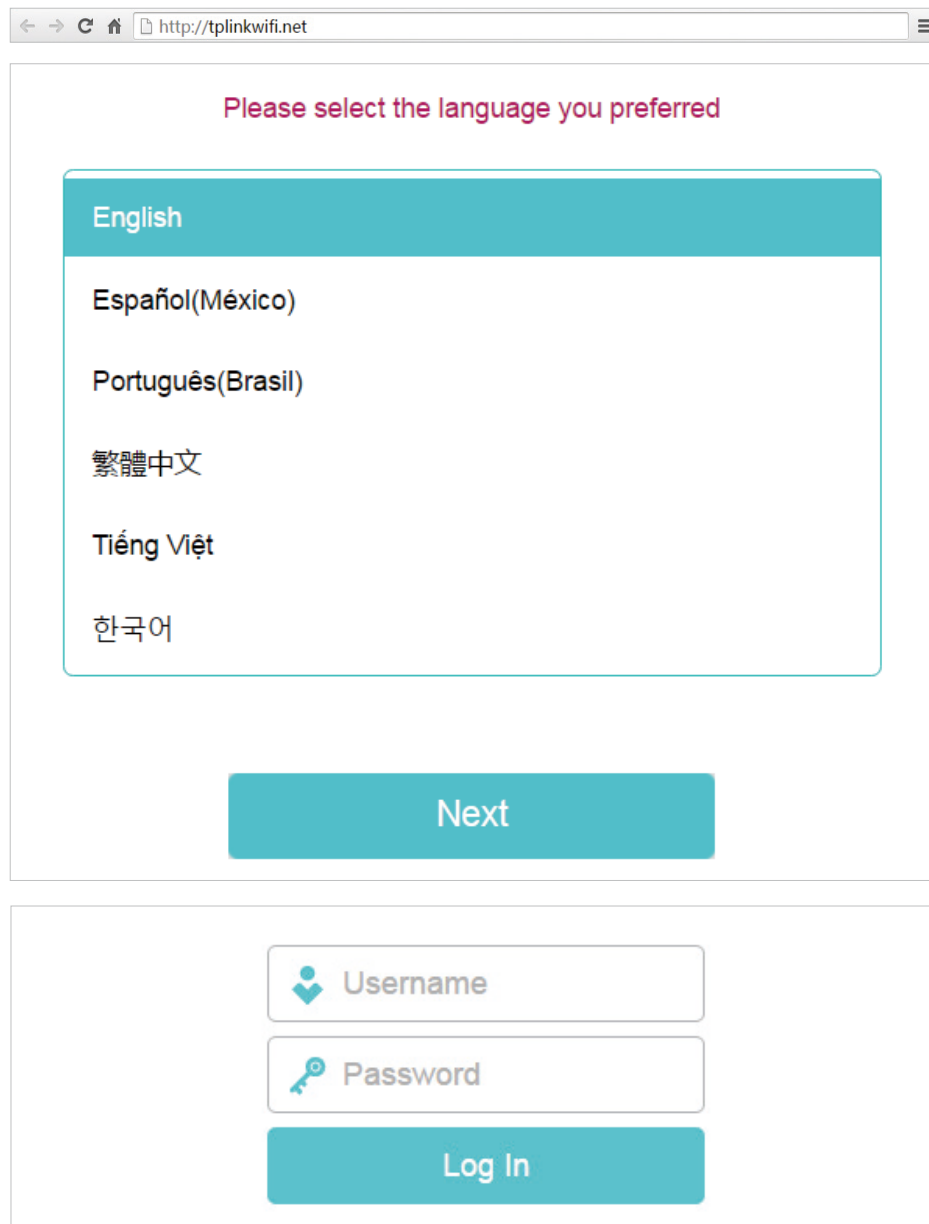

The screenshot shows a web browser window with the address bar displaying <http://tplinkwifi.net>. The main content area has a heading "Please select the language you preferred" in red. Below this is a list of language options: English, Español(México), Português(Brasil), 繁體中文, Tiếng Việt, and 한국어. The "English" option is highlighted with a teal background. Below the list is a teal "Next" button. At the bottom of the page, there are two input fields: "Username" with a user icon and "Password" with a key icon. Below these fields is a teal "Log In" button.

Note:

- If the login window does not appear, please refer to the [FAQ](#) section.
- It's recommended to go to [System Tools](#) > [Password](#) to change the default username and password.

Chapter 4

Configure the Router as a Standard Wireless Router

This chapter presents how to configure the various features of the router working as a standard wireless router.

It contains the following sections:

- [Status](#)
- [Operation Mode](#)
- [Network](#)
- [Wireless](#)
- [Guest Network](#)
- [DHCP](#)
- [Forwarding](#)
- [Security](#)
- [Parental Controls](#)
- [Access Control](#)
- [Advanced Routing](#)
- [Bandwidth Control](#)
- [IP&MAC Binding](#)
- [Dynamic DNS](#)
- [IPv6](#)
- [System Tools](#)
- [Log Out](#)

4.1. Status

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Status](#). You can view the current status information of the router.

Status	
	Firmware Version: 1.0.0.0 Hardware Version: 1.0.0.0
LAN	MAC Address: 00:0A:EB:13:09:69 IP Address: 192.168.0.1 Subnet Mask: 255.255.255.0
Wireless	Operation Mode: Router Wireless Radio: Enabled Name(SSID): TP-Link_XXXXXX Mode: 11bgn mixed Channel: Auto(Channel 1) Channel Width: Auto MAC Address: 00:0A:EB:13:09:69 WDS Status: Disabled
WAN	MAC Address: 00:0A:EB:13:09:6A IP Address: 0.0.0.0(Dynamic IP) Subnet Mask: 0.0.0.0 Default Gateway: 0.0.0.0 DNS Server: 0.0.0.0 0.0.0.0
System Up Time: 0 day(s) 00:08:38 Refresh	


- **Firmware Version** - The version information of the router's firmware.
- **Hardware Version** - The version information of the router's hardware.
- **LAN** - This field displays the current settings of the LAN, and you can configure them on the **Network > LAN** page.
 - **MAC address** - The physical address of the router.
 - **IP address** - The LAN IP address of the router.
 - **Subnet Mask** - The subnet mask associated with the LAN IP address.
- **Wireless** - This field displays the basic information or status of the wireless function, and you can configure them on the **Wireless > Basic Settings** page.
 - **Operation Mode** - The current working mode of the router.
 - **Wireless Radio** - Indicates whether the wireless feature is enabled or not.

- **Name (SSID)** - The wireless network name of the router.
- **Mode** - The current wireless working mode.
- **Channel** - The current wireless channel.
- **Channel Width** - The current wireless channel width.
- **MAC Address** - The physical address of the router.
- **WDS Status** - The status of WDS connection.
- **WAN** - This field displays the current settings of the WAN, and you can configure them on the **Network > WAN** page.
 - **MAC Address** - The physical address of the WAN port.
 - **IP Address** - The current WAN (Internet) IP Address. This field will be blank or 0.0.0.0 if the IP Address is assigned dynamically and there is no internet connection.
 - **Subnet Mask** - The subnet mask associated with the WAN IP Address.
 - **Default Gateway** - The Gateway currently used is shown here. When you use Dynamic IP as the internet connection type, click **Renew** or **Release** here to obtain new IP parameters dynamically from the ISP or release them.
 - **DNS Server** - The IP addresses of DNS (Domain Name System) server.
- **System Up Time** - The length of the time since the router was last powered on or reset.

Click **Refresh** to get the latest status and settings of the router.

4.2. Operation Mode

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Operation Mode**.
3. Select **Wireless Router** and click **Save**.

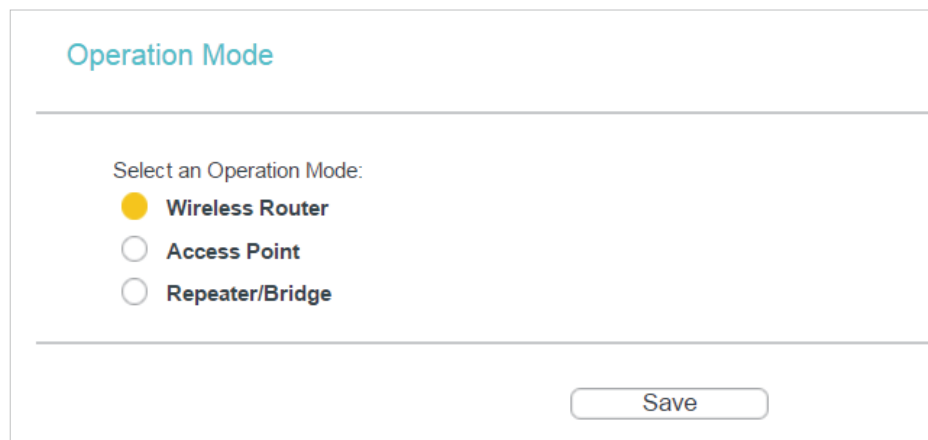

Operation Mode

Select an Operation Mode:

☒ **Wireless Router**

☐ **Access Point**

☐ **Repeater/Bridge**

Save

4.3. Network

4.3.1. WAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Network](#) > [WAN](#).
3. Configure the IP parameters of the WAN and click [Save](#).

Dynamic IP

If your ISP provides the DHCP service, please select [Dynamic IP](#), and the router will automatically get IP parameters from your ISP.

Click [Renew](#) to renew the IP parameters from your ISP.

Click [Release](#) to release the IP parameters.

WAN

WAN Connection Type: Dynamic IP Detect

IP Address:

Subnet Mask:

Default Gateway:

Renew Release

MTU Size (in bytes): 1500 (The default is 1500, do not change unless necessary.)

☐ Use These DNS Servers

Primary DNS: 0.0.0.0

Secondary DNS: 0.0.0.0 (Optional)

Host Name:

☐ Get IP with Unicast DHCP (It is usually not required.)

Save

- [MTU Size](#) - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. It is not recommended that you change the default MTU size unless required by your ISP.
- [Use These DNS Servers](#) - If your ISP provides you one or two DNS addresses, select [Use These DNS Servers](#) and enter the primary and secondary addresses. Otherwise, the DNS servers will be assigned dynamically from your ISP.
- [Host Name](#) - This option specifies the name of the router.

- [Get IP with Unicast DHCP](#) - A few ISPs' DHCP servers do not support the broadcast applications. If you cannot get the IP address normally, you can choose this option. (It is rarely required.)

Static IP

If your ISP provides a static or fixed IP address, subnet mask, default gateway and DNS setting, please select [Static IP](#).

The screenshot shows the WAN configuration interface. At the top, the title 'WAN' is displayed. Below it, the 'WAN Connection Type' is set to 'Static IP' with a dropdown arrow, and a 'Detect' button is next to it. The 'IP Address' field is set to '0.0.0.0'. The 'Subnet Mask' field is set to '0.0.0.0'. The 'Default Gateway' field is set to '0.0.0.0'. The 'MTU Size (in bytes)' field is set to '1500', with a note '(The default is 1500, do not change unless necessary.)'. The 'Primary DNS' field is set to '0.0.0.0'. The 'Secondary DNS' field is set to '0.0.0.0' and is marked as '(Optional)'. A 'Save' button is at the bottom.

- [IP Address](#) - Enter the IP address in dotted-decimal notation provided by your ISP.
- [Subnet Mask](#) - Enter the subnet mask in dotted-decimal notation provided by your ISP. Normally 255.255.255.0 is used as the subnet mask.
- [Default Gateway](#) - Enter the gateway IP address in dotted-decimal notation provided by your ISP.
- [MTU Size](#) - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. It is not recommended that you change the default MTU size unless required by your ISP.
- [Primary/Secondary DNS](#) - (Optional) Enter one or two DNS addresses in dotted-decimal notation provided by your ISP.

PPPoE

If your ISP provides PPPoE connection, select [PPPoE](#).

- **User Name/Password** - Enter the user name and password provided by your ISP. These fields are case-sensitive.
- **Confirm Password** - Enter the Password provided by your ISP again to ensure the password you entered is correct.
- **Secondary Connection** - It's available only for PPPoE connection. If your ISP provides an extra connection type, select **Dynamic IP** or **Static IP** to activate the secondary connection.
- **WAN Connection Mode**
 - **Connect on Demand** - In this mode, the internet connection can be terminated automatically after a specified inactivity period (Max Idle Time) and be re-established when you attempt to access the internet again. If you want to keep your internet connection active all the time, please enter 0 in the **Max Idle Time** field. Otherwise, enter the number of minutes you want to have elapsed before your internet access disconnects.
 - **Connect Automatically** - The connection can be re-established automatically when it is down.
 - **Time-based Connecting** - The connection will only be established in the period from the start time to the end time (both are in HH:MM format).
 - **Connect Manually** - You can click **Connect/Disconnect** to connect/disconnect immediately. This mode also supports the **Max Idle Time** function as **Connect on Demand** mode. The internet connection can be disconnected automatically after a specified inactivity period (Max Idle Time) and not be able to re-establish when you attempt to access the internet again.

Note:

- Only when you have configured the system time on the [System Tools > Time Settings](#) page, will the time-based connecting functions take effect.
- Sometimes the connection cannot be terminated although you have specified the [Max Idle Time](#) because some applications are visiting the internet continually in the background.

If you want to do some advanced configurations, please click [Advanced](#).

PPPoE Advanced Settings

MTU Size (in bytes): (The default is 1480, do not change unless necessary.)

Service Name:

AC Name:

☐ Use IP Address Specified by ISP

ISP Specified IP Address:

Detect Online Interval: Seconds (0 ~ 120 seconds, the default is 0, 0 means not detecting.)

☐ Use The Following DNS Servers

Primary DNS:

Secondary DNS: (Optional)

- **MTU Size** - The default MTU size is 1480 bytes. It is not recommended that you change the default MTU size unless required by your ISP.
- **Service Name/AC Name** - The service name and AC (Access Concentrator) name should not be configured unless you are sure it is necessary for your ISP. In most cases, leaving these fields blank will work.
- **ISP Specified IP Address** - If your ISP does not automatically assign IP addresses to the router, please select [Use IP address specified by ISP](#) and enter the IP address provided by your ISP in dotted-decimal notation.
- **Detect Online Interval** - The router will detect Access Concentrator online at every interval. The default value is 0. You can input the value between 0 and 120. The value 0 means no detect.
- **Primary DNS/Secondary DNS** - If your ISP does not automatically assign DNS addresses to the router, please select [Use the following DNS servers](#) and enter the IP address in dotted-decimal notation of your ISP's primary DNS server. If a secondary DNS server address is available, enter it as well.

BigPond Cable

If your ISP provides BigPond cable connection, please select [BigPond Cable](#).

WAN

WAN Connection Type: BigPond Cable

User Name:

Password:

Auth Server:

Auth Domain:

MTU Size (in bytes): (The default is 1500, do not change unless necessary.)

Connection Mode:

☐ Connect on Demand
Max Idle Time: minutes (0 means remain active at all times.)

☒ Connect Automatically

☐ Connect Manually
Max Idle Time: minutes (0 means remain active at all times.)

Disconnected!

- **User Name/Password** - Enter the user name and password provided by your ISP. These fields are case-sensitive.
- **Auth Server** - Enter the authenticating server IP address or host name.
- **Auth Domain** - Type in the domain suffix server name based on your location.
- **MTU Size** - The default MTU size is 1480 bytes. It is not recommended that you change the default MTU size unless required by your ISP.
- **Connection Mode**
 - **Connect on Demand** - In this mode, the internet connection can be terminated automatically after a specified inactivity period (Max Idle Time) and be re-established when you attempt to access the internet again. If you want to keep your internet connection active all the time, please enter 0 in the **Max Idle Time** field. Otherwise, enter the number of minutes you want to have elapsed before your internet access disconnects.
 - **Connect Automatically** - The connection can be re-established automatically when it is down.
 - **Connect Manually** - You can click **Connect/Disconnect** to connect/disconnect immediately. This mode also supports the **Max Idle Time** function as **Connect on Demand** mode. The internet connection can be disconnected automatically after a specified inactivity period (Max Idle Time) and not be able to re-establish when you attempt to access the internet again.

Note: Sometimes the connection cannot be terminated although you have specified the **Max Idle Time** because some applications are visiting the internet continually in the background.

L2TP

If your ISP provides L2TP connection, please select [L2TP](#).

The screenshot shows the WAN configuration interface for an L2TP connection. The title 'WAN' is in the top left. The 'WAN Connection Type' is set to 'L2TP/Russia L2TP'. Below this are fields for 'User Name', 'Password', and 'Confirm Password'. There are 'Connect' and 'Disconnect' buttons, with a 'Disconnected!' status indicator. The 'Dynamic IP' radio button is selected, and the 'Static IP' radio button is unselected. Below these are fields for 'Server IP Address/Name', 'IP Address', 'Subnet Mask', 'Gateway', and 'DNS'. Further down are fields for 'Internet IP Address' and 'Internet DNS'. The 'MTU Size (in bytes)' is set to 1460, and the 'Max Idle Time' is set to 15 minutes. The 'Connection Mode' has three options: 'Connect on Demand', 'Connect Automatically' (selected), and 'Connect Manually'. A 'Save' button is at the bottom.

WAN

WAN Connection Type: [L2TP/Russia L2TP](#)

User Name:

Password:

Confirm Password:

[Connect](#) [Disconnect](#) **Disconnected!**

☒ Dynamic IP ☐ Static IP

Server IP Address/Name:

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Gateway: 0.0.0.0

DNS: 0.0.0.0 , 0.0.0.0

Internet IP Address: 0.0.0.0

Internet DNS: 0.0.0.0 , 0.0.0.0

MTU Size (in bytes): (The default is 1460, do not change unless necessary.)

Max Idle Time: minutes (0 means remain active at all times.)

Connection Mode: ☐ Connect on Demand ☒ Connect Automatically ☐ Connect Manually

[Save](#)

- [User Name/Password](#) - Enter the user name and password provided by your ISP. These fields are case-sensitive.
- [Confirm Password](#) - Enter the Password provided by your ISP again to ensure the password you entered is correct.
- [Connect/Disconnect](#) - Click this button to connect or disconnect immediately.
- [Dynamic IP/ Static IP](#) - Select either as required by your ISP. If [Static IP](#) is selected, please enter the IP address, subnet marsk, gateway and DNS also provided by your ISP.
- [Internet IP Address/ Internet DNS](#) - The internet IP address and DNS server address assigned by L2TP server.
- [Connection Mode](#)
 - [Connect on Demand](#) - In this mode, the internet connection can be terminated automatically after a specified inactivity period (Max Idle Time) and be re-established when you attempt to access the internet again. If you want to keep your internet connection active all the time, please enter 0 in the [Max Idle Time](#)

field. Otherwise, enter the number of minutes you want to have elapsed before your internet access disconnects.

- **Connect Automatically** - The connection can be re-established automatically when it is down.
- **Connect Manually** - You can click **Connect/Disconnect** to connect/disconnect immediately. This mode also supports the **Max Idle Time** function as **Connect on Demand** mode. The internet connection can be disconnected automatically after a specified inactivity period (Max Idle Time) and not be able to re-establish when you attempt to access the internet again.

Note: Sometimes the connection cannot be terminated although you have specified the **Max Idle Time** because some applications are visiting the internet continually in the background.

PPTP

If your ISP provides PPTP connection, please select **PPTP**.

WAN

WAN Connection Type:

PPTP/Russia PPTP

User Name:

Password:

Confirm Password:

Connect

Disconnect

Disconnected!

☒ Dynamic IP
 ☐ Static IP

Server IP Address/Name:

IP Address:

0.0.0.0

Subnet Mask:

0.0.0.0

Gateway:

0.0.0.0

DNS:

0.0.0.0, 0.0.0.0

Internet IP Address:

0.0.0.0

Internet DNS:

0.0.0.0, 0.0.0.0

MTU Size (in bytes):

1420

(The default is 1420, do not change unless necessary.)

Max Idle Time:

15

minutes (0 means remain active at all times.)

Connection Mode:

☐ Connect on Demand
 ☒ Connect Automatically
 ☐ Connect Manually

Save

- **User Name/Password** - Enter the user name and password provided by your ISP. These fields are case-sensitive.
- **Confirm Password** - Enter the Password provided by your ISP again to ensure the password you entered is correct.

- **Connect/Disconnect** - Click this button to connect or disconnect immediately.
- **Dynamic IP/ Static IP** - Select either as required by your ISP. If **Static IP** is selected, please enter the IP address, subnet mask, gateway and DNS also provided by your ISP.
- **Internet IP Address/ Internet DNS** - The internet IP address and DNS server address assigned by L2TP server.
- **Connection Mode**
 - **Connect on Demand** - In this mode, the internet connection can be terminated automatically after a specified inactivity period (Max Idle Time) and be re-established when you attempt to access the internet again. If you want to keep your internet connection active all the time, please enter 0 in the **Max Idle Time** field. Otherwise, enter the number of minutes you want to have elapsed before your internet access disconnects.
 - **Connect Automatically** - The connection can be re-established automatically when it is down.
 - **Connect Manually** - You can click **Connect/Disconnect** to connect/disconnect immediately. This mode also supports the **Max Idle Time** function as **Connect on Demand** mode. The internet connection can be disconnected automatically after a specified inactivity period (Max Idle Time) and not be able to re-establish when you attempt to access the internet again.

Note: Sometimes the connection cannot be terminated although you have specified the **Max Idle Time** because some applications are visiting the internet continually in the background.

4.3.2. LAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Network > LAN**.
3. Configure the IP parameters of the LAN and click **Save**.

LAN Settings	
MAC Address:	00:0A:EB:13:09:69
IP Address:	<input type="text" value="192.168.0.1"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
<input type="button" value="Save"/>	

- **MAC Address** - The physical address of the LAN ports. The value can not be changed.
- **IP Address** - Enter the IP address in dotted-decimal notation of your router (factory default - [192.168.0.1](#)).

- **Subnet Mask** - An address code that determines the size of the network. Normally 255.255.255.0 is used as the subnet mask.

Note:

- If you have changed the IP address, you must use the new IP address to log in.
- If the new IP address you set is not in the same subnet as the old one, the IP address pool in the DHCP Server will be configured automatically, but the Virtual Server and DMZ Host will not take effect until they are re-configured.

4.3.3. IPTV

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Network > IPTV**.

The screenshot shows the 'IPTV Settings' page. It includes the following configuration options:

- IGMP Snooping:** ☒ Enable
- IGMP Proxy:** ☒ Enable
- IGMP Version:** V3 (selected from a dropdown)
- IPTV:** ☐ Enable IPTV
- LAN1:** Internet (selected from a dropdown)
- LAN2:** Internet (selected from a dropdown)
- LAN3:** Internet (selected from a dropdown)
- LAN4:** Internet (selected from a dropdown)

A 'Save' button is located at the bottom right of the settings area.

- **IGMP Snooping** - IGMP snooping is designed to prevent hosts on a local network from receiving traffic for a multicast group they have not explicitly joined. IGMP snooping is especially useful for bandwidth-intensive IP multicast applications such as IPTV.
- **IGMP Proxy** - Select to enable IGMP Proxy.
- **IGMP Version** - Select the IGMP(Internet Group Management Protocol) Proxy Version, either V2 or V3, according to your ISP.
- **IPTV** - Select to enable the IPTV feature.
- **Mode** - Select the appropriate mode according to your ISP.
- **LAN 1/2/3/4** - Assign your LAN port to whether function as the Internet supplier or as the IPTV supplier.

4.3.4. MAC Clone

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.

2. Go to [Network > MAC Clone](#).
3. Configure the WAN MAC address and click [Save](#).

MAC Clone

WAN MAC Address:	<input type="text" value="0C-4A-08-45-F3-61"/>	Restore Factory MAC
Your PC's MAC Address:	<input type="text" value="74-D4-35-98-42-A8"/>	Clone MAC Address

[Save](#)

- [WAN MAC Address](#) - This field displays the current MAC address of the WAN port. If your ISP requires you to register the MAC address, please enter the correct MAC address in this field. Click [Restore Factory MAC](#) to restore the MAC address of WAN port to the factory default value.
- [Your PC's MAC Address](#) - This field displays the MAC address of the PC that is managing the router. If the MAC address is required, you can click [Clone MAC Address](#) and this MAC address will be filled in the [WAN MAC Address](#) field.


Note:

- You can only use the MAC Address Clone function for PCs on the LAN.
- If you have changed the WAN MAC address when the WAN connection is PPPoE, it will not take effect until the connection is re-established.


4. 4. Wireless

4. 4. 1. Basic Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless > Basic Settings](#).
3. Configure the basic settings for the wireless network and click [Save](#).

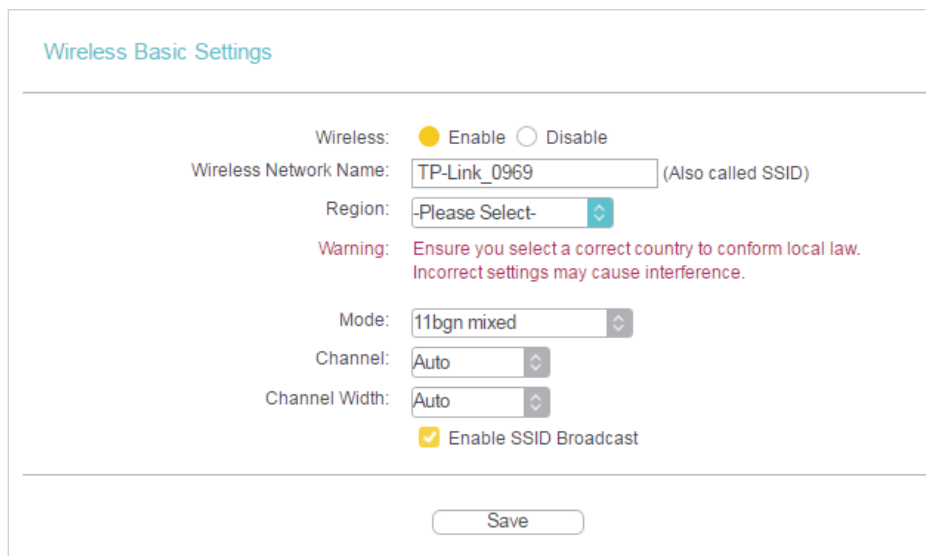

The image shows a screenshot of the 'Wireless Basic Settings' page on a router's web interface. The page has a light blue header with the title 'Wireless Basic Settings'. Below the header, there are several configuration options. At the top, there is a 'Wireless' section with two radio buttons: 'Enable' (selected) and 'Disable'. Below this is a text field for 'Wireless Network Name' containing 'TP-Link_0969', with a note '(Also called SSID)' to its right. Next is a 'Region' dropdown menu showing '-Please Select-'. A red warning message follows: 'Warning: Ensure you select a correct country to conform local law. Incorrect settings may cause interference.' Below the warning are three more dropdown menus: 'Mode' set to '11bgn mixed', 'Channel' set to 'Auto', and 'Channel Width' set to 'Auto'. At the bottom of these settings is a checked checkbox for 'Enable SSID Broadcast'. A 'Save' button is located at the very bottom of the form.

- **Wireless** - Enable or disable wireless function as needed.
- **Wireless Network Name** - Enter a string of up to 32 characters. The default SSID is TP-Link_XXXX (XXXX indicates the last unique four numbers of each router's MAC address). It is strongly recommended that you change your network name (SSID). This value is case-sensitive. For example, TEST is NOT the same as test.
- **Region** - Select your region from the pull-down list. This field specifies the region where the wireless function of the Router can be used. It may be illegal to use the wireless function of the Router in a region other than one of those specified in this filed. If your country or region is not listed, please contact your local government agency for assistance.
- **Mode** - Select the desired mode. It is strongly recommended that you keep the default setting **11bgn mixed**, so that all 802.11b/g/n wireless devices can connect to the router.
 **Note:** If 11bg mixed mode is selected, the **Channel Width** field will turn grey and the value will become 20M, and cannot be changed.
- **Channel** - This field determines which operating frequency will be used. The default channel is set to **Auto**. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.
- **Channel Width** - Select any channel width from the drop-down list. The default setting is **Auto**, which can automatically adjust the channel width for your clients.
- **Enable SSID Broadcast** - If enabled, the router will broadcast the wireless network name (SSID).

4.4.2. WPS


WPS (Wi-Fi Protected Setup) can help you to quickly and securely connect to a wireless network. This section will guide you to add a new wireless device to your router's network via WPS.

Note: The WPS function cannot be performed if the wireless function of the router is disabled. Please make sure the wireless function is enabled before configuration.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [WPS](#).
3. Follow one of the following three methods to connect your client device to the router's Wi-Fi network.

Method ONE: Press the WPS Button on Your Client Device

1. Keep the WPS Status as [Enabled](#) and click [Add Device](#).

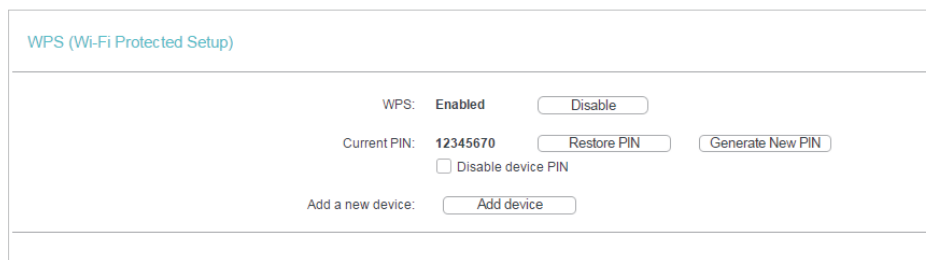

WPS (Wi-Fi Protected Setup)


WPS: **Enabled** [Disable](#)

Current PIN: **12345670** [Restore PIN](#) [Generate New PIN](#)

☐ Disable device PIN

Add a new device: [Add device](#)

2. Select [Press the WPS button of the new device in two minutes](#) and click [Connect](#).



WPS Settings

☐ Enter new device PIN.

PIN:

☒ Press the WPS button of the new device within the next two minutes.

[Connect](#) [Back](#)

3. Within two minutes, press the WPS button on your client device.
4. A success message will appear on the WPS page if the client device has been successfully added to the router's network.

Method TWO: Enter the Client's PIN

1. Keep the WPS Status as [Enabled](#) and click [Add Device](#).

WPS (Wi-Fi Protected Setup)

WPS: **Enabled**

Current PIN: **12345670**

☐ Disable device PIN

Add a new device:

2. Select [Enter the new device's PIN](#), enter your client device's current PIN in the [PIN](#) field and click [Connect](#).

WPS Settings

☒ Enter new device PIN.

PIN:

☐ Press the WPS button of the new device within the next two minutes.

3. A success message will appear on the WPS page if the client device has been successfully added to the router's network.

Method Three: Enter the Router's PIN

1. Keep the WPS Status as [Enabled](#) and get the [Current PIN](#) of the router.

WPS (Wi-Fi Protected Setup)

WPS: **Enabled**

Current PIN: **12345670**

☐ Disable device PIN

Add a new device:

2. Enter the router's current PIN on your client device to join the router's Wi-Fi network.

4. 4. 3. Wireless Security

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless](#) > [Wireless Security](#).
3. Configure the security settings of your wireless network and click [Save](#).

Wireless Security Settings

Note: WEP security, WPA/WPA2 - Enterprise authentication and TKIP encryption are not supported with WPS enabled. For network security, it is strongly recommended to enable wireless security and select WPA2-PSK AES encryption.

☐ Disable Wireless Security

☒ WPA/WPA2 - Personal(Recommended)

Version: WPA2-PSK

Encryption: AES

Wireless Password: 12345670

Group Key Update Period: 0

☐ WPA/WPA2 - Enterprise

Version: Auto

Encryption: Auto

RADIUS Server IP:

RADIUS Server Port: 1812 (1-65535, 0 stands for default port 1812)

RADIUS Server Password:

Group Key Update Period: 0

☐ WEP

Authentication Type: Open System

WEP Key Format: Hexadecimal

Selected Key: WEP Key

Key	Key Type
Key 1: <input checked="" type="radio"/>	Disabled
Key 2: <input type="radio"/>	Disabled
Key 3: <input type="radio"/>	Disabled
Key 4: <input type="radio"/>	Disabled

Save

- **Disable Security** - The wireless security function can be enabled or disabled. If disabled, wireless clients can connect to the router without a password. It's strongly recommended to choose one of the following modes to enable security.
- **WPA-PSK/WPA2-Personal** - It's the WPA/WPA2 authentication type based on pre-shared passphrase.
 - **Version** - Select **Automatic**, **WPA-PSK** or **WPA2-PSK**.
 - **Encryption** - Select **Automatic**, **TKIP** or **AES**.
 - **Wireless Password** - Enter ASCII or Hexadecimal characters. For Hexadecimal, the length should be between 8 and 64 characters; for ASCII, the length should be between 8 and 63 characters.
 - **Group Key Update Period** - Specify the group key update interval in seconds. The value can be 0 or at least 30. Enter 0 to disable the update.
- **WPA /WPA2-Enterprise** - It's based on Radius Server.
 - **Version** - Select **Automatic**, **WPA** or **WPA2**.
 - **Encryption** - Select **Automatic**, **TKIP** or **AES**.
 - **Radius Server IP** - Enter the IP address of the Radius server.
 - **Radius Port** - Enter the port that Radius server used.
 - **Radius Password** - Enter the password for the Radius server.

- **Group Key Update Period** - Specify the group key update interval in seconds. The value should be 30 or above. Enter 0 to disable the update.
- **WEP** - It is based on the IEEE 802.11 standard.
 - **Type** - The default setting is **Automatic**, which can select Shared Key or Open System authentication type automatically based on the wireless client's capability and request.
 - **WEP Key Format** - Hexadecimal and ASCII formats are provided here. Hexadecimal format stands for any combination of hexadecimal digits (0-9, a-f, A-F) in the specified length. ASCII format stands for any combination of keyboard characters in the specified length.
 - **WEP Key (Password)** - Select which of the four keys will be used and enter the matching WEP key. Make sure these values are identical on all wireless clients in your network.
 - **Key Type** - Select the WEP key length (64-bit, 128-bit or 152-bit) for encryption. **Disabled** means this WEP key entry is invalid.
 - **64-bit** - Enter 10 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 5 ASCII characters.
 - **128-bit** - Enter 26 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 13 ASCII characters.
 - **152-bit** - Enter 32 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 16 ASCII characters.

4. 4. 4. Wireless MAC Filtering

Wireless MAC Filtering is used to deny or allow specific wireless client devices to access your network by their MAC addresses.

I want to:

Deny or allow specific wireless client devices to access my network by their MAC addresses.

For example, you want the wireless client A with the MAC address 00-0A-EB-B0-00-0B and the wireless client B with the MAC address 00-0A-EB-00-07-5F to access the router, but other wireless clients cannot access the router.

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless MAC Filtering**.
3. Click **Enable** to enable the Wireless MAC Filtering function.

4. Select [Allow the stations specified by any enabled entries in the list to access](#) as the filtering rule.
5. Delete or disable all entries if there are any entries already.
6. Click [Add New](#) and fill in the blanks.

Add or Modify Wireless MAC Address Filtering entry

MAC Address:

Description:

Status:

- 1) Enter the MAC address 00-0A-EB-B0-00-0B/00-0A-EB-00-07-5F in the MAC Address field.
 - 2) Enter wireless client A/B in the Description field.
 - 3) Leave the status as [Enabled](#).
 - 4) Click [Save](#) and click [Back](#).
7. The configured filtering rules should be listed as the picture shows below.

Filtering Rules

☐ Deny the stations specified by any enabled entries in the list to access.

☒ Allow the stations specified by any enabled entries in the list to access.

ID	MAC Address	Status	Description	Modify
1	00-0A-EB-B0-00-0B	Enabled	Client A	Modify Delete
2	00-0A-EB-00-07-5F	Enabled	Client B	Modify Delete

Done!

Now only client A and client B can access your network.

4.4.5. Wireless Advanced

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless > Wireless Advanced](#).
3. Configure the advanced settings of your wireless network and click [Save](#).

Note: If you are not familiar with the setting items on this page, it's strongly recommended to keep the provided default values; otherwise it may result in lower wireless network performance.

Wireless Advanced

Transmit Power: 100%

Beacon Interval: 100 (40-1000)

RTS Threshold: 2346 (1-2346)

Fragmentation Threshold: 2346 (256-2346)

DTIM Interval: 1 (1-15)

☒ Enable Short GI

☐ Enable Client Isolation

☒ Enable WMM

Save

- **Transmit Power** - Select **High**, **Middle** or **Low** which you would like to specify for the router. **High** is the default setting and recommended.
- **Beacon Interval** - Enter a value between 40-1000 milliseconds for Beacon Interval here. Beacon Interval value determines the time interval of the beacons. The beacons are the packets sent by the router to synchronize a wireless network. The default value is 100.
- **RTS Threshold** - Here you can specify the RTS (Request to Send) Threshold. If the packet is larger than the specified RTS Threshold size, the router will send RTS frames to a particular receiving station and negotiate the sending of a data frame. The default value is 2346.
- **Fragmentation Threshold** - This value is the maximum size determining whether packets will be fragmented. Setting a low value for the Fragmentation Threshold may result in poor network performance because of excessive packets. 2346 is the default setting and is recommended.
- **DTIM Interval** - This value determines the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. You can specify the value between 1-255 Beacon Intervals. The default value is 1, which indicates the DTIM Interval is the same as Beacon Interval.
- **Enable Short GI** - It is recommended to enable this function, for it will increase the data capacity by reducing the guard interval time.
- **Enable Client Isolation** - This function isolates all connected wireless stations so that wireless stations cannot access each other through WLAN. This function will be disabled if WDS / Bridge is enabled.
- **Enable WMM** - WMM function can guarantee the packets with high-priority messages being transmitted preferentially. It is strongly recommended to enable this function.

4.4.6. Wireless Statistics

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless Statistics** to check the data packets sent and received by each client device connected to the router.

Current Connected Wireless Stations numbers: 1 <input type="button" value="Refresh"/>					
ID	MAC Address	Current Status	Received Packets	Sent Packets	Configure
1	D0-51-62-27-C0-42	WPA2-PSK	65	33	<input type="button" value="Deny"/>
<input type="button" value="Previous"/> <input type="button" value="Next"/>					

- **MAC Address** - The MAC address of the connected wireless client.
- **Current Status** - The running status of the connected wireless client.
- **Received Packets** - Packets received by the wireless client.
- **Sent Packets** - Packets sent by the wireless client.
- **Configure** - The button is used for loading the item to the Wireless MAC Filtering list.
 - **Allow** - If the Wireless MAC Filtering function is enabled, click this button to allow the client to access your network.
 - **Deny** - If the Wireless MAC Filtering function is enabled, click this button to deny the client to access your network.

4.5. Guest Network

Guest Network allows you to provide Wi-Fi access for guests without disclosing your host network. When you have guests in your house, apartment, or workplace, you can create a guest network for them. In addition, you can customize guest network settings to ensure network security and privacy.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Guest Network**.
3. Enable the **Guest Network** function.
4. Create a network name for your guest network.
5. Select the **Security** type and create the **Password** of the guest network.
6. Select **Schedule** from the **Access Time** drop-down list and customize it for the guest network.
7. Click **Save**.

Guest Network

Allow Guests To Access My Local Network:

Guest Network Isolation:

Guest Network Bandwidth Control:

Guest Network: ☐ Enable ☒ Disable

Network Name:

Max Guests number:

Security:

Access Time:

Click the schedule table or use the 'Add' button to choose the period on which you need the guest network off automatically!
The Schedule is based on the time of the Router. The time can be set in "System Tools -> Time Settings".

Wireless Schedule: ☐ Enable ☒ Disable

Apply To:

Start Time:

End Time:

Time	0:00	1:00	2:00	3:00	4:00	5:00	6:00	7:00	8:00	9:00	10:00	11:00	12:00	13:00	14:00
Sun.															
Mon.															
Tues.															
Wed.															
Thur.															
Fri.															
Sat.															

- **Allow Guest To Access My Local Network** - If enabled, guests can access the local network and manage it.
- **Guest Network Isolation** - If enabled, guests are isolated from each other.
- **Enable Guest Network Bandwidth Control** - If enabled, the Guest Network Bandwidth Control rules will take effect.

Note: The range of bandwidth for guest network is calculated according to the setting of Bandwidth Control on the [Bandwidth Control > Control Settings](#) page.


4.6. DHCP

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the router acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of DHCP Server if necessary, and you can reserve LAN IP addresses for specified client devices.

4.6.1. DHCP Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Settings**.

3. Specify DHCP server settings and click [Save](#).

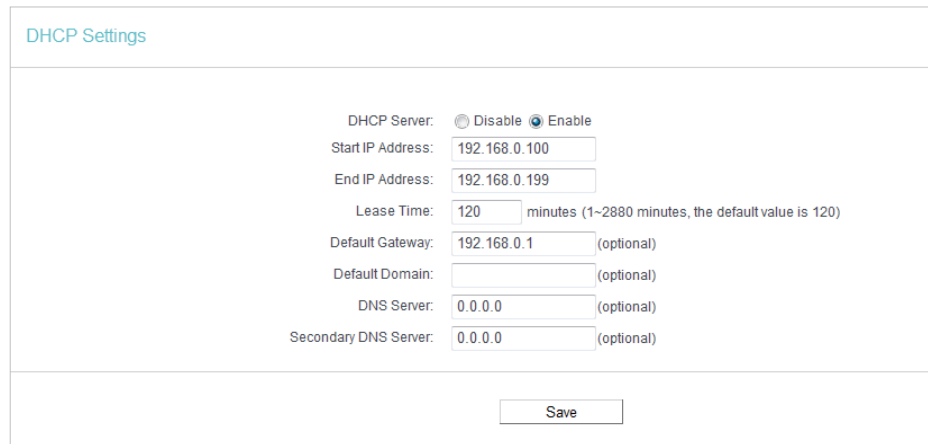

DHCP Settings

DHCP Server: ☐ Disable ☒ Enable

Start IP Address:

End IP Address:

Lease Time: minutes (1~2880 minutes, the default value is 120)

Default Gateway: (optional)

Default Domain: (optional)

DNS Server: (optional)

Secondary DNS Server: (optional)

- **DHCP Server** - Enable or disable the DHCP server. If disabled, you must have another DHCP server within your network or else you must configure the computer manually.
- **Start IP Address** - Specify an IP address for the DHCP Server to start with when assigning IP addresses. 192.168.0.100 is the default start address.
- **End IP Address** - Specify an IP address for the DHCP Server to end with when assigning IP addresses. 192.168.0.199 is the default end address.
- **Address Lease Time** - The Address Lease Time is the amount of time a network user will be allowed to connect to the router with the current dynamic IP Address. When time is up, the user will be automatically assigned a new dynamic IP address. The range of the time is 1 ~ 2880 minutes. The default value is 120.
- **Default Gateway (Optional)** - It is suggested to input the IP address of the LAN port of the router. The default value is 192.168.0.1.
- **Default Domain (Optional)** - Input the domain name of your network.
- **DNS Server (Optional)** - Input the DNS IP address provided by your ISP.
- **Secondary DNS Server (Optional)** - Input the IP address of another DNS server if your ISP provides two DNS servers.

■ **Note:** To use the DHCP server function of the router, you must configure all computers on the LAN as [Obtain an IP Address automatically](#).

4. 6. 2. DHCP Clients List

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Clients List** to view the information of the clients connected to the router.

DHCP Clients List				
This page displays information of all DHCP clients on the network.				
ID	Client Name	MAC Address	Assigned IP	Lease Time
1	Camille	40:8D:5C:89:74:B5	192.168.0.100	00:00:32
2	iPhone	34:E2:FD:14:1D:0D	192.168.0.101	00:00:55
Refresh				

- **Client Name** - The name of the DHCP client.
- **MAC Address** - The MAC address of the DHCP client.
- **Assigned IP** - The IP address that the router has allocated to the DHCP client.
- **Lease Time** - The time of the DHCP client leased. After the dynamic IP address has expired, a new dynamic IP address will be automatically assigned to the user.

You cannot change any of the values on this page. To update this page and show the current attached devices, click [Refresh](#).

4.6.3. Address Reservation

You can reserve an IP address for a specific client. When you specify a reserved IP address for a PC on the LAN, this PC will always receive the same IP address each time when it accesses the DHCP server.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > Address Reservation**.
3. Click **Add New** and fill in the blanks.

DHCP Address Reservation				
This page displays the static IP address assigned by the DHCP Server and allows you to adjust these configurations by clicking the corresponding fields.				
<input type="checkbox"/>	MAC Address	IP Address	Status	Edit
<input type="checkbox"/>	40:8D:5C:89:74:B5	192.168.0.100	Disabled	Edit
Add New Enable Selected Disable Selected Delete Selected				
Refresh				

- 1) Enter the MAC address (in XX-XX-XX-XX-XX-XX format.) of the client for which you want to reserve an IP address.
- 2) Enter the IP address (in dotted-decimal notation) which you want to reserve for the client.
- 3) Leave the **Status** as **Enabled**.
- 4) Click **Save**.

4.7. Forwarding

The router's NAT (Network Address Translation) feature makes the devices on the LAN use the same public IP address to communicate in the internet, which protects the local network by hiding IP addresses of the devices. However, it also brings about the problem that external hosts cannot initiatively communicate with the specified devices in the local network.

With the forwarding feature, the router can traverse the isolation of NAT so that clients on the internet can reach devices on the LAN and realize some specific functions.

The TP-Link router includes four forwarding rules. If two or more rules are set, the priority of implementation from high to low is Virtual Servers, Port Triggering, UPNP and DMZ.

4.7.1. Virtual Server


When you build up a server in the local network and want to share it on the internet, Virtual Servers can realize the service and provide it to internet users. At the same time virtual servers can keep the local network safe as other services are still invisible from the internet.

Virtual Servers can be used to set up public services in your local network, such as HTTP, FTP, DNS, POP3/SMTP and Telnet. Different service uses different service port. Port 80 is used in HTTP service, port 21 in FTP service, port 25 in SMTP service and port 110 in POP3 service. Please verify the service port number before the configuration.

I want to:

Share my personal website I've built in local network with my friends through the internet.

For example, the personal website has been built in my home PC (192.168.0.100). I hope that my friends on the internet can visit my website in some way. My PC is connected to the router with the WAN IP address 218.18.232.154.

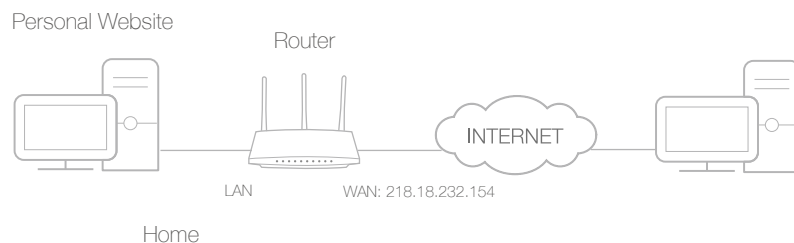

1. Set your PC to a static IP address, for example 192.168.0.100.
2. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
3. Go to **Forwarding > Virtual Server**.

- Click **Add New**. Select **HTTP** from the **Common Service Port** list. The service port, internal port and protocol will be automatically filled in. Enter the PC's IP address 192.168.0.100 in the **IP Address** field.

Virtual Server

Service Port:	80	(XX-XX or XX)
IP Address:	192.168.0.100	
Internal Port:	80	(XX or keep empty. If it's empty, internal port equals to Service port)
Protocol:	TCP	
Status:	Enabled	
Common Service Port:	HTTP	

Save Back

- Leave the status as **Enabled** and click **Save**.

Note:

- It is recommended to keep the default settings of **Internal Port** and **Protocol** if you are not clear about which port and protocol to use.
- If the service you want to use is not in the **Common Service Port** list, you can enter the corresponding parameters manually. You should verify the port number that the service needs.
- You can add multiple virtual server rules if you want to provide several services in a router. Please note that the **Service Port** should not be overlapped.

Done!

Users on the internet can enter **http:// WAN IP** (in this example: **http:// 218.18.232.154**) to visit your personal website.

Note:

- If you have changed the default **Service Port**, you should use **http:// WAN IP: Service Port** to visit the website.
- Some specific service ports are forbidden by the ISP, if you fail to visit the website, please use another service port.

4.7.2. Port Triggering

Port triggering can specify a triggering port and its corresponding external ports. When a host in the local network initiates a connection to the triggering port, all the external ports will be opened for subsequent connections. The router can record the IP address of the host. When the data from the internet return to the external ports, the router can forward them to the corresponding host. Port triggering is mainly applied to online games, VoIPs, video players and common applications including MSN Gaming Zone, Dialpad, Quick Time 4 players and more.

Follow the steps below to configure the port triggering rules:

- Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
- Go to **Forwarding > Port Triggering**.

3. Click [Add New](#). Select the desired application from the [Common Applications](#) list. The trigger port and incoming ports will be automatically filled in. The following picture takes application [MSN Gaming Zone](#) as an example.

4. Leave the status as [Enabled](#) and click [Save](#).

Note:

- You can add multiple port triggering rules as needed.
- The triggering ports can not be overlapped.
- If the application you need is not listed in the [Common Applications](#) list, please enter the parameters manually. You should verify the incoming ports the application uses first and enter them in [Open Port](#) field. You can input at most 5 groups of ports (or port sections). Every group of ports must be set apart with ",". For example, 2000-2038, 2050-2051, 2085, 3010-3030.

4.7.3. DMZ

When a PC is set to be a DMZ (Demilitarized Zone) host in the local network, it is totally exposed to the Internet, which can realize the unlimited bidirectional communication between internal hosts and external hosts. The DMZ host becomes a virtual server with all ports opened. When you are not clear about which ports to open in some special applications, such as IP camera and database software, you can set the PC to be a DMZ host.

Note: DMZ is more applicable in the situation that users are not clear about which ports to open. When it is enabled, the DMZ host is totally exposed to the internet, which may bring some potential safety hazards. If DMZ is not in use, please disable it in time.

I want to:


Make the home PC join the internet online game without port restriction.

[For example](#), due to some port restriction, when playing the online games, you can log in normally but cannot join a team with other players. To solve this problem, set your PC as a DMZ host with all ports opened.

How can I do that?

1. Assign a static IP address to your PC, for example 192.168.0.100.

2. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
3. Go to [Forwarding > DMZ](#).
4. Select [Enable](#) and enter the IP address 192.168.0.100 in the [DMZ Host IP Address](#) field.

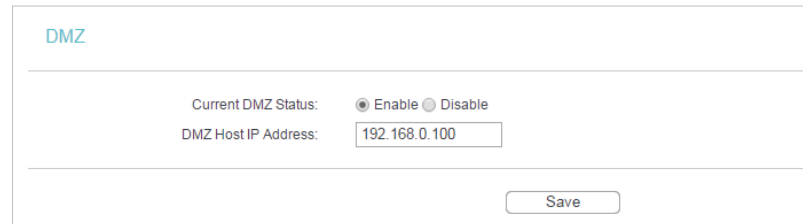

DMZ

Current DMZ Status: ☒ Enable ☐ Disable

DMZ Host IP Address:

Save

5. Click [Save](#).

Done!

You've set your PC to a DMZ host and now you can make a team to game with other players.


4.7.4. UPnP

The UPnP (Universal Plug and Play) protocol allows the applications or host devices to automatically find the front-end NAT device and send request to it to open the corresponding ports. With UPnP enabled, the applications or host devices on the local network and the internet can freely communicate with each other realizing the seamless connection of the network. You may need to enable the UPnP if you want to use applications for multiplayer gaming, peer-to-peer connections, real-time communication (such as VoIP or telephone conference) or remote assistance, etc.

🔗 Tips:

- UPnP is enabled by default in this router.
- Only the application supporting UPnP protocol can use this feature.
- UPnP feature needs the support of operating system (e.g. Windows Vista/ Windows 7/ Windows 8, etc. Some of operating system need to install the UPnP components).

For example, when you connect your Xbox to the router which is connected to the internet to play online games, UPnP will send request to the router to open the corresponding ports allowing the following data penetrating the NAT to transmit. Therefore, you can play Xbox online games without a hitch.

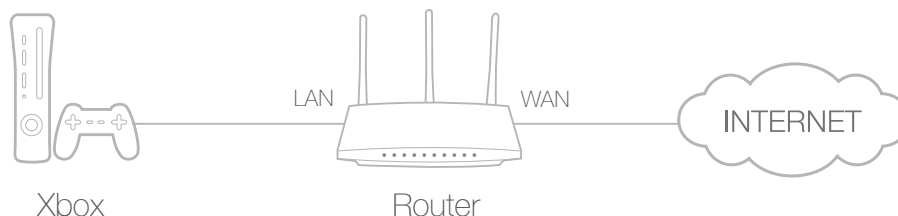

If necessary, you can follow the steps to change the status of UPnP.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Forwarding > UPnP**.
3. Click **Disable** or **Enable** according to your needs.

UPnP

Current UPnP Status: **Enabled**

Current UPnP Settings List

ID	App Description	External Port	Protocol	Internal Port	IP Address	Status

4.8. Security

This function allows you to protect your home network from cyber attacks and unauthorized users by implementing these network security functions.

4.8.1. Basic Security

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Security > Basic Security**, and you can enable or disable the security functions.

Basic Security

Firewall

SPI Firewall: ☒ Enable ☐ Disable

VPN

PPTP Passthrough: ☒ Enable ☐ Disable

L2TP Passthrough: ☒ Enable ☐ Disable

IPSec Passthrough: ☒ Enable ☐ Disable

ALG

FTP ALG: ☒ Enable ☐ Disable

TFTP ALG: ☒ Enable ☐ Disable

H323 ALG: ☒ Enable ☐ Disable

RTSP ALG: ☒ Enable ☐ Disable

SIP ALG: ☒ Enable ☐ Disable

Save

- **Firewall** - A firewall protects your network from internet attacks.
 - **SPI Firewall** - SPI (Stateful Packet Inspection, also known as dynamic packet filtering) helps to prevent cyber attacks by tracking more state per session. It validates that the traffic passing through the session conforms to the protocol. SPI Firewall is enabled by default.
- **VPN** - VPN Passthrough must be enabled if you want to allow VPN tunnels using IPSec, PPTP or L2TP protocols to pass through the router's firewall.
 - **PPTP Passthrough** - Point-to-Point Tunneling Protocol (PPTP) allows the Point-to-Point Protocol (PPP) to be tunneled through an IP network. If you want to allow PPTP tunnels to pass through the router, you can keep the default (Enabled).
 - **L2TP Passthrough** - Layer 2 Tunneling Protocol (L2TP) is the method used to enable Point-to-Point sessions via the internet on the Layer 2 level. If you want to allow L2TP tunnels to pass through the router, you can keep the default (Enabled).
 - **IPSec Passthrough** - Internet Protocol Security (IPSec) is a suite of protocols for ensuring private, secure communications over Internet Protocol (IP) networks, through the use of cryptographic security services. If you want to allow IPSec tunnels to pass through the router, you can keep the default (Enabled).
- **ALG** - It is recommended to enable Application Layer Gateway (ALG) because ALG allows customized Network Address Translation (NAT) traversal filters to be plugged into the gateway to support address and port translation for certain application layer "control/data" protocols such as FTP, TFTP, H323 etc.

- **FTP ALG** - To allow FTP clients and servers to transfer data across NAT, keep the default **Enable**.
- **TFTP ALG** - To allow TFTP clients and servers to transfer data across NAT, keep the default **Enable**.
- **H323 ALG** - To allow Microsoft NetMeeting clients to communicate across NAT, keep the default **Enable**.
- **RTSP ALG** - To allow some media player clients to communicate with some streaming media servers across NAT, click **Enable**.
- **SIP ALG** - To allow some multimedia clients to communicate across NAT, click **Enable**.

3. Click **Save**.

4. 8. 2. Advanced Security

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Security** > **Advanced Security**, and you can protect the router from being attacked by ICMP-Flood, UDP Flood and TCP-SYN Flood.

Advanced Security

DoS Protection: ☐ Enable ☒ Disable

☐ Enable ICMP-Flood Attack Filtering
ICMP-Flood Packets Threshold (5~3600): packets/second

☐ Enable UDP-Flood Attack Filtering
UDP-Flood Packets Threshold (5~3600): packets/second

☐ Enable TCP-SYN-Flood Attack Filtering
TCP-SYN-Flood Packets Threshold (5~3600): packets/second

☒ Forbid Ping Packet From WAN Port
☐ Forbid Ping Packet From LAN Port

- **DoS Protection** - Denial of Service protection. Select Enable or Disable to enable or disable the DoS protection function. Only when it is enabled, will the flood filters be enabled.

■ **Note:** Dos Protection will take effect only when the Statistics in **System Tool** > **Statistics** is enabled.

- **Enable ICMP-FLOOD Attack Filtering** -Tick the checkbox to enable or disable this function.

- **ICMP-FLOOD Packets Threshold (5~3600)** - The default value is 50. Enter a value between 5 ~ 3600. When the number of the current ICMP-FLOOD packets is beyond the set value, the router will startup the blocking function immediately.
- **Enable UDP-FLOOD Filtering** - Tick the checkbox to enable or disable this function.
- **UDP-FLOOD Packets Threshold (5~3600)** - The default value is 500. Enter a value between 5 ~ 3600. When the number of the current UPD-FLOOD packets is beyond the set value, the router will startup the blocking function immediately.
- **Enable TCP-SYN-FLOOD Attack Filtering** -Tick the checkbox to enable or disable this function.
- **TCP-SYN-FLOOD Packets Threshold (5~3600)** - The default value is 50. Enter a value between 5 ~ 3600. When the number of the current TCP-SYN-FLOOD packets is beyond the set value, the router will startup the blocking function immediately.
- **Forbid Ping Packet From WAN Port** - The default setting is enable. If disabled, the ping packet from the internet can access the router.
- **Forbid Ping Packet From LAN Port** - The default setting is disabled. If enabled, the ping packet from LAN cannot access the router. This function can be used to defend against some viruses.

3. Click **Save**.

4. Click **Blocked DoS Host List** to display the DoS host table by blocking.

4. 8. 3. Local Management

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Security > Local Management**, and you can block computers on the LAN from accessing the router.

The screenshot shows the 'Local Management' section of a router's web interface. It contains a 'Management Rules' section with two radio button options: 'All the PCs on the LAN are allowed to access the Router's Web-Based Utility' (which is selected) and 'Only the PCs listed can browse the built-in web pages to perform Administrator tasks'. Below these rules, there is a 'MAC:' label followed by an empty text input field. Underneath that, it says 'Your PC's MAC Address:' followed by a text box containing '40:8D:5C:89:74:B5' and a 'Set' button. At the bottom right of the form is a 'Save' button.

For example, if you want to allow PCs with specific MAC addresses to access the router's web management page locally from inside the network, please follow the instructions below:

- 1) Select [Only the PCs listed can browse the built-in web pages to perform Administrator tasks](#).
- 2) Enter the MAC address of each PC separately. The format of the MAC address is XX-XX-XX-XX-XX-XX (X is any hexadecimal digit). Only the PCs with the listed MAC addresses can use the password to browse the built-in web pages to perform administrator tasks.
- 3) Click [Add](#), and your PC's MAC address will also be listed.
- 4) Click [Save](#).

■ **Note:** If your PC is blocked but you want to access the router again, press and hold the [Reset](#) button to reset the router to the factory defaults.

4.8.4. Remote Management

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Security](#) > [Remote Management](#), and you can manage your router from a remote device via the internet.



Remote Management

Web Management Port:

Remote Management IP Address: (Enter 255.255.255.255 for all)

- **Web Management Port** - Web browser access normally uses the standard HTTP service port 80. This router's default remote management web port number is 80. For higher security, you can change the remote management web port to a custom port by entering a number between 1 and 65534 but do not use the number of any common service port.
- **Remote Management IP Address** - This is the address you will use when accessing your router via a remote device. This function is disabled when the IP address is set to the default value of 0.0.0.0. To enable this function, change 0.0.0.0 to a valid IP address. If it is set to 255.255.255.255, then all the remote devices can access the router from the internet.

■ **Note:**

- To access the router, enter your router's WAN IP address in your browser's address bar, followed by a colon and the custom port number. For example, if your router's WAN address is 202.96.12.8, and the port number used is 8080, please enter <http://202.96.12.8:8080> in your browser. Later, you may be asked for the router's password. After successfully entering the username and password, you will be able to access the router's web management page.
- Be sure to change the router's default password for security purposes.

4.9. Parental Controls

Parental Controls allows you to block inappropriate and malicious websites, and control access to specific websites at specific time for your children's devices.

For example, you want the children's PC with the MAC address 00-11-22-33-44-AA can access www.tp-link.com on Saturday only while the parent PC with the MAC address 00-11-22-33-44-BB is without any restriction.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Parental Controls](#).
3. Check the [Enable Parental Controls](#) box and enter the MAC address 00:11:22:33:44:BB in the MAC Address of Parental PC field.
4. Enter 00:11:22:33:44:AA in the [MAC Address 1](#) field.
5. Create a new schedule with [Day](#) is Sat and [Time](#) is all day-24 hours. Click [Add](#)
6. Enter www.tp-link.com in the [Add URL](#) field. Click [Add](#).
7. Click [Save](#).

Then you will see the page as shown in figure below.

Parental Controls

Parental Controls can be used to administer all Internet activity including limiting usage and/or access to specific websites to all clients on the network for a specified period of time. The Schedule is based on the time of the Router. The time can be set in "System Tools -> Time Settings".

☒ Enable Parental Controls

MAC Address Of Parental PC: 00:11:22:33:44:BB

MAC Address of Current PC: 40:8D:5C:89:74:B5 [Copy to Above](#)

Save

MAC Address - 1: 00:11:22:33:44:AA

MAC Address - 2:

MAC Address - 3:

MAC Address - 4:

MAC Address in current LAN: 40:8D:5C:89:74:B5 [Copy to](#) --Please Select--

Apply To: Each Day

Start Time: 00:00

End Time: 24:00

Add

Time

0	001	002	003	004	005	006	007	008	009	010	011	012	013	014	0
Sun.															
Mon.															
Tues.															
Wed.															
Thur.															
Fri.															
Sat.															

Clear Schedule

Add URL: Add

Details

www.tp-link.com

Delete Selected

(Will not take effect until you save these changes)

Save

49

4. 10. Access Control


Access Control is used to deny or allow specific client devices to access your network with access time and content restrictions.

I want to: Deny or allow specific client devices to access my network with access time and content restrictions.

For example, If you want to restrict the internet activities of host with MAC address 00-11-22-33-44-AA on the LAN to access www.tp-link.com only, please follow the steps below:

**How
can I do
that?**

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Access Control](#) > [Host](#) and configure the host settings:
 - 1) Click [Add New](#).
 - 2) Select [MAC Address](#) as the mode type. Create a unique description (e.g. [host_1](#)) for the host in the [Description](#) field and enter 00-11-22-33-44-AA in the [MAC Address](#) field.

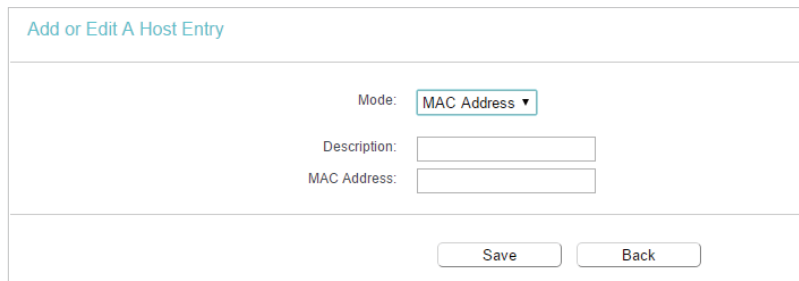

The screenshot shows a web form titled "Add or Edit A Host Entry". It contains three input fields: "Mode" (a dropdown menu currently showing "MAC Address"), "Description" (a text input field), and "MAC Address" (a text input field). At the bottom right of the form, there are two buttons labeled "Save" and "Back".

- 3) Click [Save](#).
3. Go to [Access Control](#) > [Target](#) and configure the target settings:
 - 1) Click [Add New](#).
 - 2) Select [URL Address](#) as the mode type. Create a unique description (e.g. [target_1](#)) for the target in the [Target Description](#) field and enter the domain name, either the full name or the keywords (for example TP-Link) in the [Add URL Address](#) field.

Note:

Any URL address with keywords in it (e.g. www.tp-link.com) will be blocked or allowed.

Add or Edit A Target Entry

Mode: URL Address

Description:

Add URL Address: Add

☐ Detail

Delete (Will not take effect until you save these changes)

Save Back

3) Click [Save](#).

4. Go to [Access Control](#) > [Schedule](#) and configure the schedule settings:

1) Click [Add New](#).

2) Create a unique description (e.g. [schedule_1](#)) for the schedule in the [Schedule Description](#) field and set the day(s) and time period.

Add or Edit A Schedule Entry

The Schedule is based on the time of the Router. The time can be set in "System Tools -> [Time Settings](#)".

Description:

Apply To: Each Day

Start Time: 00:00

End Time: 24:00 Add

Time	0.00	1.00	2.00	3.00	4.00	5.00	6.00	7.00	8.00	9.00	10.00	11.00	12.00	13.00	14.00
Sun.															
Mon.															
Tues.															
Wed.															
Thur.															
Fri.															
Sat.															

Clear Schedule

Save Back

3) Click [Save](#).

5. Go to [Access Control](#) > [Rule](#) and add a new access control rule.

1) Click [Add New](#).

2) Give a name for the rule in the [Description](#) field. Select [host_1](#) from the LAN host drop-down list; select [target_1](#) from the target drop-down list; select [schedule_1](#) from the schedule drop-down list.

Add Internet Access Control Entry

Description:

LAN Host: [Add LAN Host](#)

Target: [Add Target](#)

Schedule: [Add Schedule](#)

Rule:

Status:

Direction:

- 3) Leave the status as **Enabled** as click **Save**.
6. Select **Enable Internet Access Control** to enable Access Control function.
7. Select **Allow the packets specified by any enabled access control policy to pass through the Router** as the default filter policy and click **Save**.

Access Control Rule Management

This device can restrict Internet activity for specified LAN hosts. You can set and combine access control rules to effectively manage your network.

☒ Enable Internet access control

Default Filtering Rules:

☒ **Allow** the packets not specified by any filtering rules to passthrough this device.

☐ **Deny** the packets not specified by any filtering rules to passthrough this device.

Done!

Now only the specific host(s) can visit the target(s) within the scheduled time period.

4. 11. Advanced Routing

Static Routing is a form of routing that is configured manually by a network administrator or a user by adding entries into a routing table. The manually-configured routing information guides the router in forwarding data packets to the specific destination.

4. 11. 1. Static Route List

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Advanced Routing > Static Route List**.

➤ To add static routing entries:

1. Click [Add New](#).

Static Route

Destination IP Address:

Subnet Mask:

Gateway:

Interface: (optional)

Status:

2. Enter the following information.

- [Destination IP Address](#) - The Destination Network is the address of the network or host that you want to assign to a static route.
- [Subnet Mask](#) - The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion.
- [Gateway](#) - This is the IP address of the default gateway device that allows the contact between the router and the network or host.

3. Select [Enabled](#) or [Disabled](#) for this entry on the [Status](#) drop-down list.

4. Click [Save](#).

You can also do the following operations to modify the current settings.

- Click [Delete](#) to delete the entry.
- Click [Enable All](#) to enable all the entries.
- Click [Disable All](#) to disable all the entries.
- Click [Delete All](#) to delete all the entries.
- Click [Previous](#) to view the information on the previous screen and [Next](#) to view the information on the next screen.

4. 11. 2. System Routing Table

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Advanced Routing](#) > [System Routing Table](#), and you can view all the valid route entries in use.

System Routing Table

ID	Destination Network	Subnet Mask	Gateway	Interface
1	192.168.0.0	255.255.255.0	0.0.0.0	LAN & WLAN

Refresh

- **Destination Network** - The Destination Network is the address of the network or host to which the static route is assigned.
- **Subnet Mask** - The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion.
- **Gateway** - This is the IP address of the gateway device that allows for contact between the Router and the network or host.
- **Interface** - This interface tells you whether the Destination IP Address is on the LAN & WLAN (internal wired and wireless networks), or the WAN (Internet).

Click [Refresh](#) to refresh the data displayed.

4. 12. Bandwidth Control

4. 12. 1. Control Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Bandwidth Control](#).
3. Configure the bandwidth as needed and click [Save](#).

Bandwidth Control

☒ Enable Bandwidth Control

Egress Bandwidth: Kbps

Ingress Bandwidth: Kbps

Save

The values you configure for the Egress Bandwidth and Ingress Bandwidth should be less than 100,000Kbps. For optimal control of the bandwidth, please select the right Line Type and consult your ISP for the total egress and ingress bandwidth.

- **Enable Bandwidth Control** - Tick the checkbox so that the Bandwidth Control settings can take effect.
- **Egress Bandwidth** - The upload speed through the WAN port.
- **Ingress Bandwidth** - The download speed through the WAN port.

4.12.2. Rule List

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Bandwidth Control** and you can view and configure the Bandwidth Control rules.

	Description	Priority	Egress Bandwidth		Ingress Bandwidth		Status	Edit
			Min	Max	Min	Max		
<input type="checkbox"/>								

- **Description** - This is the information about the rules such as address range.
- **Egress Bandwidth** - This field displays the max and min upload bandwidth through the WAN port. The default is 0.
- **Ingress Bandwidth** - This field displays the max and min download bandwidth through the WAN port. The default is 0.
- **Status** - This field displays the status of the rule.
- **Modify** - Click **Modify/Delete** to edit/delete the rule.

➤ **To add a Bandwidth control rule:**

1. Click **Add New**.
2. Enter the information as needed.

Bandwidth Control

Enable: ☒

IP Range: --

Port Range: --

Protocol: **ALL**

Priority: **5** (1 meaning highest priority)

	Min Bandwidth(Kbps)	Max Bandwidth(Kbps)
Egress Bandwidth:	<input type="text"/>	<input type="text"/>
Ingress Bandwidth:	<input type="text"/>	<input type="text"/>


3. Click **Save**.

4.13. IP&MAC Binding

IP & MAC Binding, namely, ARP (Address Resolution Protocol) Binding, is used to bind a network device's IP address to its MAC address. This will prevent ARP spoofing and other ARP attacks by denying network access to a device with a matching IP address in the ARP list, but with an unrecognized MAC address.

4. 13. 1. Binding Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **IP & MAC Binding > Binding Settings**.
3. Select **Enable** for ARP Binding.

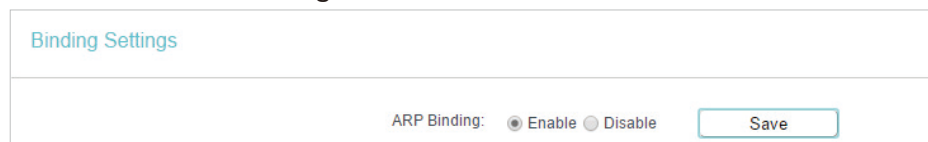


The screenshot shows the 'Binding Settings' page. At the bottom, there is a section for 'ARP Binding' with two radio buttons: 'Enable' (which is selected) and 'Disable'. To the right of these buttons is a 'Save' button.

4. Click **Save**.

➤ **To add IP & MAC Binding entries:**

1. Click **Add New**.
2. Select the **Bind** checkbox.
3. Enter the MAC address and IP address.

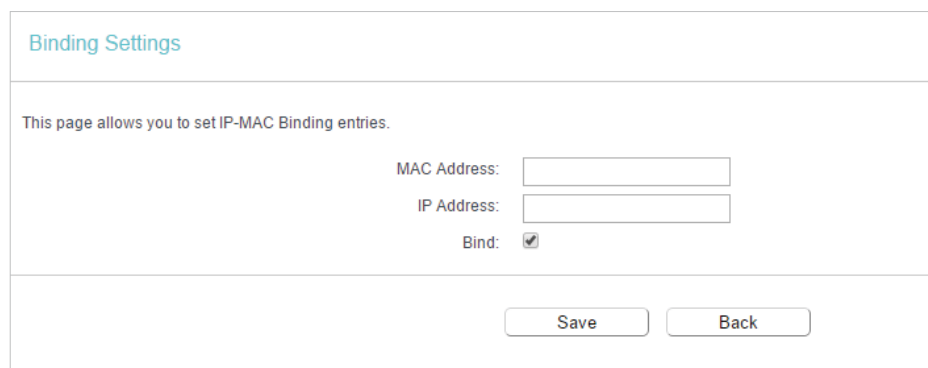

The screenshot shows the 'Binding Settings' page with the instruction: 'This page allows you to set IP-MAC Binding entries.' Below this, there are two input fields: 'MAC Address:' and 'IP Address:'. Below these fields is a 'Bind:' checkbox, which is checked. At the bottom right, there are two buttons: 'Save' and 'Back'.

4. Click **Save**.

➤ **To modify or delete an existing entry:**

1. Select the desired entry in the table.
2. Click **Edit** or **Delete Selected**.

4. 13. 2. ARP List

To manage a device, you can observe the device on the LAN by checking its MAC address and IP address on the ARP list, and you can also configure the items. This page displays the ARP list which shows all the existing IP & MAC Binding entries.

ARP List

<input type="checkbox"/>	MAC Address	IP Address	Status
<input type="checkbox"/>	00:E0:4C:00:07:BE	192.168.0.4	Bound
<input type="checkbox"/>	40:8D:5C:89:74:B5	192.168.0.100	Unloaded

- **MAC Address** - The MAC address of the listed computer on the LAN.
- **IP Address** - The assigned IP address of the listed computer on the LAN.
- **Status** - Indicates whether or not the MAC and IP addresses are bound.
- Click the **Load Selected** button to load the selected items to the IP & MAC Binding list.
- Click the **Delete Selected** button to delete the selected items to the IP & MAC Binding list.
- Click the **Refresh** button to refresh all items.

Note: An item can not be loaded to the IP & MAC Binding list if the IP address of the item has been loaded before. Error warning will prompt as well.


4. 14. Dynamic DNS

The router offers the DDNS (Dynamic Domain Name System) feature, which allows the hosting of a website, FTP server, or e-mail server with a fixed domain name (named by yourself) and a dynamic IP address. Thus your friends can connect to your server by entering your domain name no matter what your IP address is. Before using this feature, you need to sign up for DDNS service providers such as www.comexe.cn, www.dyndns.org, or www.noip.com. The Dynamic DNS client service provider will give you a password or key.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Dynamic DNS**.

Dyndns DDNS

If the dynamic DNS Service Provider you select is www.dyn.com, the following page will appear.

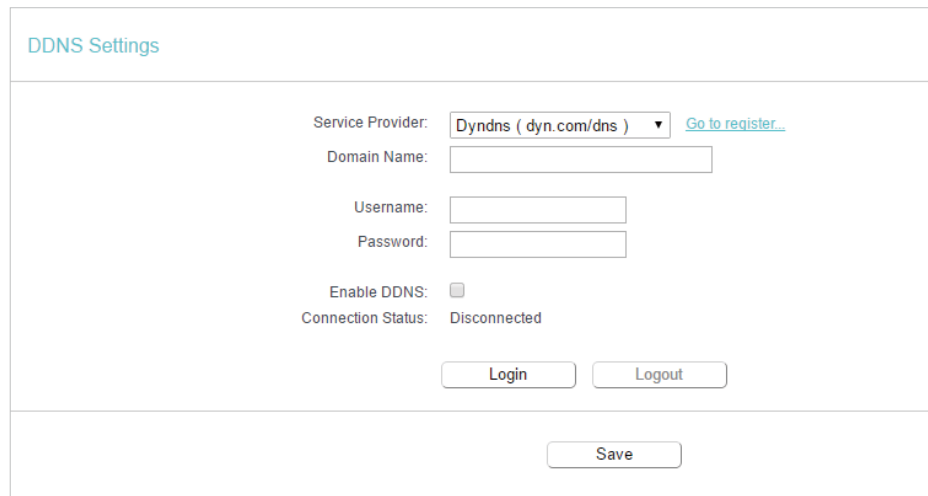

The screenshot shows the 'DDNS Settings' page. At the top, the title 'DDNS Settings' is in blue. Below it, the 'Service Provider' dropdown is set to 'DynDNS (dyn.com/dns)' with a 'Go to register...' link. The 'Domain Name', 'Username', and 'Password' fields are empty. The 'Enable DDNS' checkbox is unchecked, and the 'Connection Status' is 'Disconnected'. At the bottom, there are 'Login', 'Logout', and 'Save' buttons.


To set up for DDNS, follow these instructions:

1. Enter the [Domain Name](#) you received from dynamic DNS service provider here.
2. Enter the [Username](#) for your DDNS account.
3. Enter the [Password](#) for your DDNS account.
4. Click [Login](#).
5. Click [Save](#).

- [Connection Status](#) - The status of the DDNS service connection is displayed here.
- [Logout](#) - Click [Logout](#) to log out of the DDNS service.

No-IP DDNS

If the dynamic DNS Service Provider you select is www.noip.com, the following page will appear.

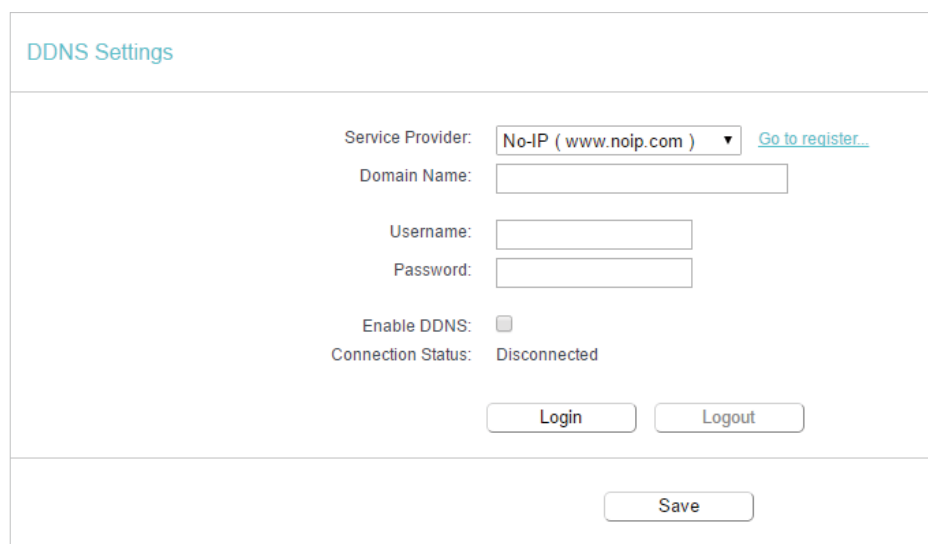

The screenshot shows the 'DDNS Settings' page with 'No-IP (www.noip.com)' selected in the 'Service Provider' dropdown. The 'Domain Name', 'Username', and 'Password' fields are empty. The 'Enable DDNS' checkbox is unchecked, and the 'Connection Status' is 'Disconnected'. At the bottom, there are 'Login', 'Logout', and 'Save' buttons.

To set up for DDNS, follow these instructions:

1. Enter the [Domain Name](#) you received from dynamic DNS service provider.
 2. Enter the [User Name](#) for your DDNS account.
 3. Enter the [Password](#) for your DDNS account.
 4. Click [Login](#).
 5. Click [Save](#).
- [Connection Status](#) - The status of the DDNS service connection is displayed here.
 - [Logout](#) - Click [Logout](#) to log out of the DDNS service.

Comexe DDNS

If the dynamic DNS Service Provider you select is www.comexe.cn, the following page will appear.

The screenshot shows the 'DDNS Settings' page. At the top, the title 'DDNS Settings' is displayed. Below it, the 'Service Provider' is set to 'Comexe (www.comexe.cn)' with a dropdown arrow and a link 'Go to register..'. There are five input fields for 'Domain Name1' through 'Domain Name5'. Below these are input fields for 'Username' and 'Password'. An 'Enable DDNS' checkbox is currently unchecked. The 'Connection Status' is shown as 'Disconnected'. At the bottom right, there are 'Login' and 'Logout' buttons. At the very bottom center, there is a 'Save' button.

To set up for DDNS, follow these instructions:

1. Enter the [Domain Name](#) received from your dynamic DNS service provider.
 2. Enter the [Username](#) for your DDNS account.
 3. Enter the [Password](#) for your DDNS account.
 4. Click [Login](#).
 5. Click [Save](#).
- [Connection Status](#) - The status of the DDNS service connection is displayed here.
 - [Logout](#) - Click [Logout](#) to log out of the DDNS service.

4. 15. IPv6

This function allows you to enable IPv6 function and set up the parameters of the router's Wide Area Network (WAN) and Local Area Network (LAN).

4. 15. 1. IPv6 Status

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **IPv6 > IPv6 Status**, and you can view the current IPv6 status information of the router.

IPv6 Status	
WAN	
Connection Type:	DHCPv6
IPv6 Address:	
IPv6 Default Gateway:	
Primary IPv6 DNS:	
Secondary IPv6 DNS:	
LAN	
IPv6 Address Assign Type:	RADVD
IPv6 Address:	
Link-local Address:	fe80::e4a:8ff:fe45:f360/64

- **WAN** - This section shows the current IPv6 information of the router's WAN port, including **Connection Type**, **IPv6 Address** information, **IPv6 Default Gateway**, **Primary IPv6 DNS** and **Secondary IPv6 DNS**.
- **LAN** - This section shows the current IPv6 information of the router's LAN port, including **IPv6 Address Assign Type**, **IPv6 Address** and **Link-local Address**.

4. 15. 2. IPv6 WAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **IPv6 > IPv6 WAN**.

3. Select the **WAN Connection Type** according to your ISP network topology:
- **Dynamic IPv6** - Connections which use dynamic IPv6 address assignment.
 - **Static IPv6** - Connections which use static IPv6 address assignment.
 - **PPPoEv6** - Connections which use PPPoEV6 that requires a username and password.
 - **Tunnel 6to4** - Connections which use 6to4 address assignment.

Dynamic IPv6

- **IPv6 Address** - The IPv6 address assigned by your ISP dynamically.
- **Prefix Length** - The length of IPv6 address prefix.
- **IPv6 Gateway** - Enter the default gateway provided by your ISP.
- **Addressing Type** - There are two types of assignment for IPv6 address: SLAAC (Stateless address auto-configuration) and DHCPv6 (Dynamic Host Configuration Protocol for IPv6) Server.
- **MTU(Bytes)** - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. For some ISPs, you may need to modify the

MTU. But this is rarely required, and should not be done unless you are sure it is necessary for your ISP connection.

If your ISP gives you one or two DNS IPv6 addresses, select Set IPv6 DNS Server manually and enter the IPv6 DNS Server and Secondary IPv6 DNS Server into the correct fields. Otherwise, the DNS servers will be assigned from ISP dynamically.

- **Enable MLD Proxy** - Enable the Multicast Listener Discovery (MLD) Proxy function if you need.
- **IPv6 DNS Server** - Enter the DNS IPv6 address provided by your ISP.
- **Secondary IPv6 DNS Server** - Enter another DNS IPv6 address provided by your ISP.

Note: If you get Address not found error when you access a website, it is likely that your DNS servers are set up improperly. You should contact your ISP to get DNS server addresses.

Static IPv6

- **IPv6 Address** - Enter the IPv6 address provided by your ISP.
- **Prefix Length** - The length of IPv6 address prefix.
- **IPv6 Gateway** - Enter the default gateway provided by your ISP.
- **IPv6 DNS Server** - Enter the DNS IPv6 address provided by your ISP.
- **Secondary IPv6 DNS Server** - Enter another DNS IPv6 address provided by your ISP.
- **MTU(Bytes)** - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. For some ISPs, you may need to modify the MTU. But this is rarely required, and should not be done unless you are sure it is necessary for your ISP connection.
- **Enable MLD Proxy** - Enable the Multicast Listener Discovery (MLD) Proxy function if you need.

PPPoEv6

The screenshot shows the 'IPv6 WAN' configuration page. At the top, 'Enable IPv6' is checked. 'Connection Type' is set to 'PPPoEv6'. There is an unchecked checkbox for 'PPPoE same session with IPv4 connection'. Below are input fields for 'PPP Username', 'PPP Password', and 'Confirm password'. 'Authentication Type' is set to 'AUTO_AUTH' and 'Addressing Type' is set to 'DHCPv6'. A horizontal line separates these from the bottom section. Below the line, there are input fields for 'Service Name' and 'Server Name', both with a note '(do not change unless necessary)'. The 'MTU(Bytes)' is set to '1480' with a note '(1480 as default, do not change unless necessary)'. At the bottom, there are three unchecked checkboxes: 'Enable MLD Proxy', 'Use IPv6 address specified by ISP', and 'Set IPv6 DNS Server manually'. A 'Save' button is at the very bottom.

- **PPP Username/Password** - Enter the User Name and Password provided by your ISP. These fields are case-sensitive.
- **Authentication Type** – Choose one authentication type from AUTO-AUTH, PAP, CHAP and MS-CHAP.
- **Addressing Type** - There are two types of assignation for IPv6 address: SLAAC (Stateless address auto-configuration) and DHCPv6 (Dynamic Host Configuration Protocol for IPv6) Server.
- **MTU(Bytes)** - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1480 Bytes. It is not recommended that you change the default MTU size unless required by your ISP.
- **Enable MLD Proxy** - Enable the Multicast Listener Discovery (MLD) Proxy function if you need.
- **Use IPv6 address specified by ISP** - Input a static IPv6 address from the ISP.
- **Set IPv6 DNS Server manually** - Enter the IP address of the IPv6 DNS server and secondary IPv6 DNS server.

Tunnel 6to4

IPv6 WAN

Enable IPv6: ☒

Connection Type: Tunnel 6to4 ▼

WAN Connection: [blurred]

Save

- [WAN Connection](#) - Display the available WAN connection.

4. Click [Save](#).

4. 15. 3. IPv6 LAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [IPv6](#) > [IPv6 LAN](#).

IPv6 LAN Settings

The parameters of IPv6 LAN can be configured on this page when IPv6 enabled.
Note: Only the default group will support IPv6 at this moment.

Group: **Default**

Address Auto-Configuration Type: ☒ RADVD ☐ DHCPv6 Server

Enable RDNSS: ☐

Enable ULA Prefix: ☐

Site Prefix Configuration Type: ☒ Delegated ☐ Static

Prefix Delegated WAN Connection: ewan_ipoev6_d

Save

3. Select the [Address Auto-Configuration Type](#) which determines the way how the router assigns IPv6 address for PCs on the LAN:
 - [Address Auto-Configuration Type](#) - RADAD (Router Advertisement Daemon) and DHCPv6 (Dynamic Host Configuration Protocol for IPv6) Server.
 - [Site Prefix Configuration Type](#) - The type of IPv6 address prefix.

- **Delegated** - Get the IPv6 address prefix from the ISP automatically, and the device will delegate it to the LAN.
- **Static** - Configure the **Site Prefix** and **Site Prefix Length** manually. Please contact your ISP to get more information before you configure them.

🔗 **Tips:** If your IPv6 wan connection type is "Tunnel 6to4", the Site Prefix Configuration Type should be "Static" to make sure "Tunnel 6to4" works properly.

4. Click **Save**.

4. 16. System Tools

4. 16. 1. LED Control

The LED control feature allows you to turn off or on the LEDs of the router automatically when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > LED Control**.
3. Tick **Night Mode** and select the **LED Off Time** from the pull-down lists. Then click **Save**.

LED Control

Night Mode ☒

LED Off Time 21 : 00 - 09 : 00

Before enabling the LED Control, make sure [System Time](#) is correct.

Save

4. 16. 2. Time Settings

This page allows you to set the time manually or to configure automatic time synchronization. The Router can automatically update the time from an NTP server via the internet.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Time Settings**.

Time Settings

Time Settings:

Time Zone: (GMT-08:00) Pacific Time (US & Canada); Tijuana

Date: 1970 Year 1 Month 1 Day

Time 0 Hour 42 Minute 40 Second

NTP Server 1: (optional)

NTP Server 2: (optional)

(Only when the Internet connection is active).

➤ **To set time manually:**

1. Select your local **Time Zone**.
2. Enter the **Date** in Month/Day/Year format.
3. Enter the **Time** in Hour/Minute/Second format.
4. Click **Save**.

➤ **To set time automatically:**

1. Select your local **Time Zone**.
2. Enter the address or domain of the **NTP Server I** or **NTP Server II**.
3. Click **Get GMT** to get time from the internet if you have connected to the internet.

➤ **To set Daylight Saving Time:**

1. Select **Enable DaylightSaving**.
2. Select the start time from the drop-down list in the **Start** field.
3. Select the end time from the drop-down list in the **End** field.
4. Click **Save**.

■ **Note:** This settings will be used for some time-based functions such as firewall. You must specify your time zone once you log in to the router successfully; otherwise, time-based functions will not take effect.

4. 16. 3. Diagnostic

Diagnostic is used to test the connectivity between the router and the host or other network devices.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Diagnostic**.

Diagnostic Tools

Diagnostic Parameters

Diagnostic Tool: ☒ Ping ☐ Traceroute

IP address/Domain name:

Ping Count: ping(1 - 50)

Ping Packet Size: (0 - 65500 Bytes)

Ping Timeout: (1 - 60 Seconds)

Traceroute Max TTL: (1 - 30)

Diagnostic Results

- **Diagnostic Tool** - Select one diagnostic tool.
 - **Ping** - This diagnostic tool troubleshoots connectivity, reachability, and name resolution to a given host or gateway.
 - **Tracerouter** - This diagnostic tool tests the performance of a connection.

Note: You can use ping/traceroute to test both numeric IP address or domain name. If pinging/tracerouting the IP address is successful, but pinging/tracerouting the domain name is not, you might have a name resolution problem. In this case, ensure that the domain name you are specifying can be resolved by using Domain Name System (DNS) queries.

- **IP Address/Domain Name** - Enter the destination IP address (such as 192.168.0.1) or Domain name (such as www.tp-link.com).
 - **Pings Count** - The number of Ping packets for a Ping connection.
 - **Ping Packet Size** - The size of Ping packet.
 - **Ping Timeout** - Set the waiting time for the reply of each Ping packet. If there is no reply in the specified time, the connection is overtime.
 - **Traceroute Max TTL** - The max number of hops for a Traceroute connection.
3. Click **Start** to check the connectivity of the internet.
 4. The **Diagnostic Results** page displays the diagnosis result. If the result is similar to the following figure, the connectivity of the internet is fine.

```
Diagnostic Results

Pinging 192.168.0.1 with 64 bytes of data:

Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=1
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=2
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=3
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=4

Ping statistics for 192.168.0.1
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss)
    Approximate round trip times in milliseconds:
        Minimum = 1, Maximum = 1, Average = 1
```

Note: Only one user can use this tool at one time. Options "Number of Pings", "Ping Size" and "Ping Timeout" are used for the Ping function. Option "Tracert Hops" is used for the Tracert function.

4. 16. 4. Firmware Upgrade

TP-Link is dedicated to improving and enriching the product features, giving users a better network experience. We will release the latest firmware at TP-Link official website. You can download the latest firmware file from the [Support](#) page of our website www.tp-link.com and upgrade the firmware to the latest version.

1. Download the latest firmware file for the router from our website www.tp-link.com.
2. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
3. Go to [System Tools > Firmware Upgrade](#).
4. Click [Choose File](#) to locate the downloaded firmware file, and click [Upgrade](#).

Firmware Upgrade

Firmware File Path:

Choose File

No file chosen

 
Firmware version:

Hardware version:

Upgrade

4. 16. 5. Factory Defaults

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [System Tools > Factory Defaults](#). Click [Restore](#) to reset all settings to the default values.

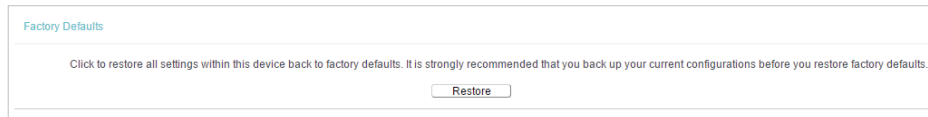


- The default **Username**: admin
- The default **Password**: admin
- The default **IP Address**: 192.168.0.1
- The default **Subnet Mask**: 255.255.255.0

4. 16. 6. Backup & Restore

The configuration settings are stored as a configuration file in the router. You can backup the configuration file in your computer for future use and restore the router to the previous settings from the backup file when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Backup & Restore**.

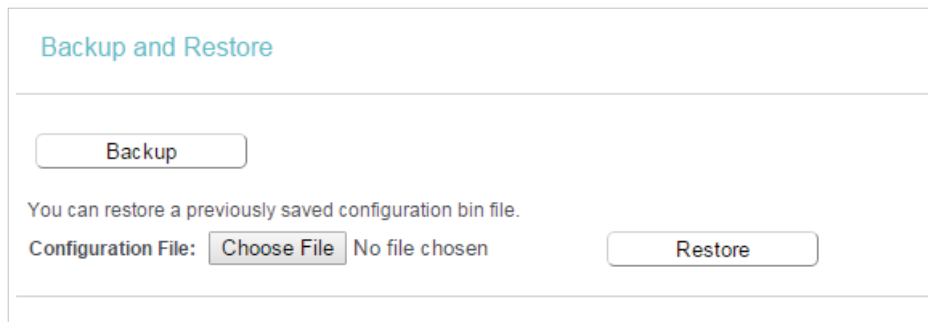

➤ **To backup configuration settings:**

Click **Backup** to save a copy of the current settings in your local computer. A “.bin” file of the current settings will be stored in your computer.

➤ **To restore configuration settings:**

1. Click **Choose File** to locate the backup configuration file stored in your computer, and click **Restore**.
2. Wait a few minutes for the restoring and rebooting.

■ **Note:** During the restoring process, do not power off or reset the router

4. 16. 7. Reboot

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Reboot**, and you can restart your router.

Some settings of the router will take effect only after rebooting, including:

- Change the LAN IP Address (system will reboot automatically).
- Change the DHCP Settings.
- Change the Working Modes.
- Change the Web Management Port.
- Upgrade the firmware of the router (system will reboot automatically).
- Restore the router to its factory defaults (system will reboot automatically).
- Update the configuration with the file (system will reboot automatically).

4. 16. 8. Password

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Password**, and you can change the factory default username and password of the router.

Password

Username and password can contain between 1 - 15 characters and may not include spaces.

Old User Name:

Old Password:

New User Name:

New Password:

Confirm password:

Save Clear All

It is strongly recommended that you change the default username and password of the router, for all users that try to access the router's web-based utility or Quick Setup will be prompted for the router's username and password.

■ **Note:** The new username and password must not exceed 15 characters and not include any spacing.

3. Click **Save**.

4. 16. 9. Language

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Language**.
3. Select the language you prefer from the pull-down list, and then click **Save**.

Language

Language:

Save

4. 16. 10. System Log

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools** > **System Log**, and you can view the logs of the router.

System Log

Log Type: Log Level:

Index	Time	Type	Level	Content
1	1970-01-01 00:00:08	DHCPD	Notice	Send ACK to 192.168.0.100
2	1970-01-01 00:00:08	DHCPD	Notice	Recv REQUEST from 40:8D:5C:89:74:B5

Refresh Clear Log Save Log Log Settings

- **Log Type** - By selecting the log type, only logs of this type will be shown.
- **Log Level** - By selecting the log level, only logs of this level will be shown.
- **Refresh** - Refresh the page to show the latest log list.
- **Clear Log** - All the logs will be deleted from the router permanently, not just from the page.

4. 17. Log Out

Click **Logout** at the bottom of the main menu, and you will log out of the web page and be directed to the login window.

Chapter 5

Configure the Router as an Access Point

This chapter presents how to configure the various features of the router working as an Access Point.

It contains the following sections:

- [Status](#)
- [Operation Mode](#)
- [Network](#)
- [Wireless](#)
- [DHCP](#)
- [System Tools](#)
- [Log Out](#)

5.1. Status

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Status](#). You can view the current status information of the router in Access Point Mode.

Status

Firmware Version: 1.0.0.0 (Build 1000) (Release Date: 10/10/2010)

Hardware Version: 1.0 (Build 1000)

LAN

MAC Address: 00:0A:EB:13:09:69

IP Address: 192.168.0.1

Subnet Mask: 255.255.255.0

Wireless

Operation Mode: Access Point

Wireless Radio: Enabled

Name(SSID): TP-Link_XXXXXX

Mode: 11bgn mixed

Channel: Auto(Channel 1)

Channel Width: Auto

MAC Address: 00:0A:EB:13:09:69

System Up Time: 0 day(s) 15:02:25

Refresh


- **Firmware Version** - The version information of the router's firmware.
- **Hardware Version** - The version information of the router's hardware.
- **LAN** - This field displays the current settings of the LAN, and you can configure them on the **Network > LAN** page.
 - **MAC address** - The physical address of the router.
 - **IP address** - The LAN IP address of the router.
 - **Subnet Mask** - The subnet mask associated with the LAN IP address.
- **Wireless** - This field displays the basic information or status of the wireless function, and you can configure them on the **Wireless > Basic Settings** page.
 - **Operation Mode** - The current wireless working mode in use.
 - **Wireless Radio** - Indicates whether the wireless feature is enabled or disabled.

- **Name(SSID)** - The wireless network name of the router.
- **Mode** - The current wireless mode which the router works on.
- **Channel** - The current wireless channel.
- **Channel Width** - The current wireless channel width.
- **MAC Address** - The physical address of the router.
- **System Up Time** - The length of the time since the router was last powered on or reset.

Click **Refresh** to get the latest status and settings of the router.

5.2. Operation Mode

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Operation Mode**.
3. Select **Access Point** and click **Save**.

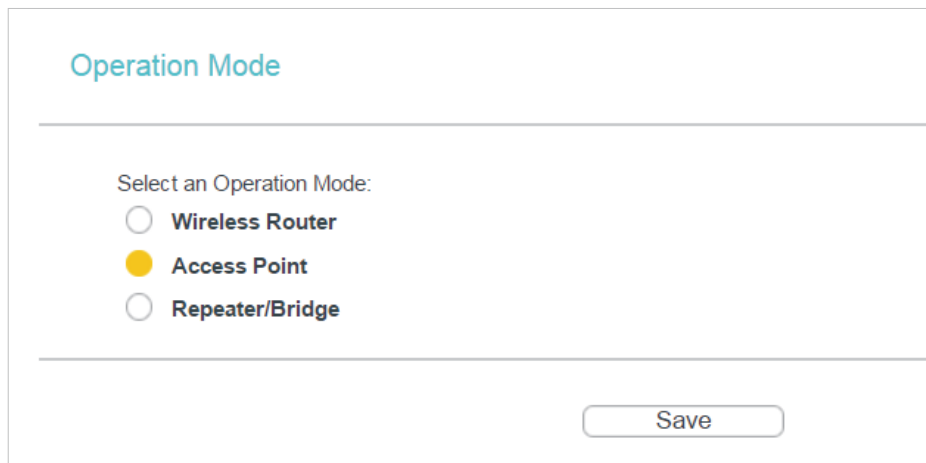

Operation Mode

Select an Operation Mode:

☐ Wireless Router

☒ Access Point

☐ Repeater/Bridge

Save

5.3. Network

5.3.1. LAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Network > LAN**.
3. Configure the IP parameters of the LAN and click **Save**.

LAN

Type: Smart IP(DHCP)

Note: The IP parameters cannot be configured if you have chosen Smart IP(DHCP)

(In this situation the device will help you configure the IP parameters automatically as you need).

MAC Address: 00:0A:EB:13:09:69

IP Address: 192.168.0.1

Subnet Mask: 255.255.255.0

Save

- **Type** - Either select **Smart IP(DHCP)** to get IP address from DHCP server, or **Static IP** to configure IP address manually.
- **MAC Address** - The physical address of the LAN ports. The value can not be changed.
- **IP Address** - Enter the IP address in dotted-decimal notation if your select **Static IP** (factory default - 192.168.0.1).
- **Subnet Mask** - An address code that determines the size of the network. Normally 255.255.255.0 is used as the subnet mask.


Note:

- If you have changed the IP address, you must use the new IP address to log in.
- If you select **Smart IP(DHCP)**, the DHCP server of the router will not start up.
- If the new IP address you set is not in the same subnet as the old one, the IP Address pool in the DHCP Server will be configured automatically, but the Virtual Server and DMZ Host will not take effect until they are re-configured.

5. 4. Wireless


5. 4. 1. Basic Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Basic Settings**.
3. Configure the basic settings for the wireless network and click **Save**.

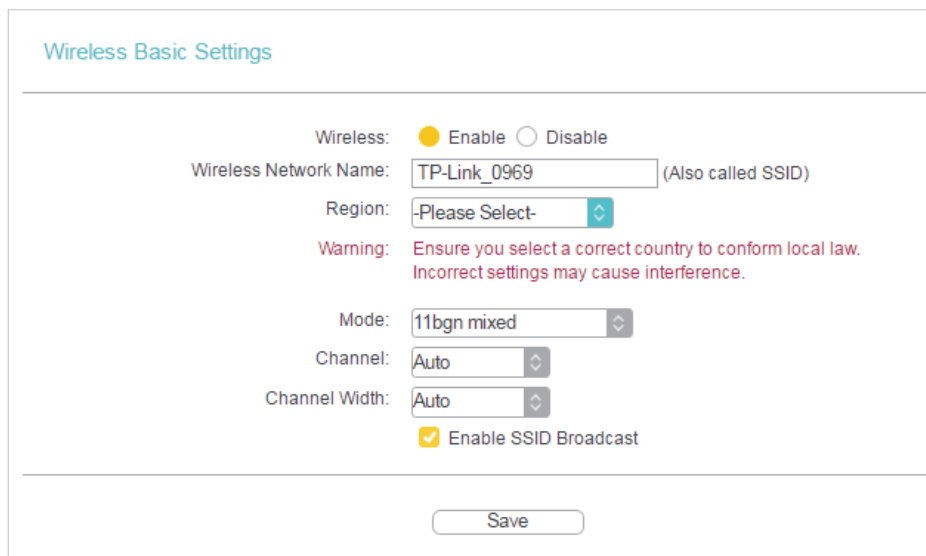

The image shows a web-based configuration page titled "Wireless Basic Settings". It contains several fields for configuring the wireless network:

- Wireless:** A toggle switch with a yellow circle next to "Enable" and a white circle next to "Disable".
- Wireless Network Name:** A text input field containing "TP-Link_0969". To its right is the text "(Also called SSID)".
- Region:** A dropdown menu showing "-Please Select-".
- Warning:** A red text message: "Ensure you select a correct country to conform local law. Incorrect settings may cause interference."
- Mode:** A dropdown menu showing "11bgn mixed".
- Channel:** A dropdown menu showing "Auto".
- Channel Width:** A dropdown menu showing "Auto".
- Enable SSID Broadcast:** A checked checkbox.
- Save:** A button at the bottom of the form.

- **Wireless** - Enable or disable wireless function as needed.
- **Wireless Network Name** - Enter a string of up to 32 characters. The default SSID is TP-Link_XXXX (XXXX indicates the last unique four numbers of each router's MAC address). It is strongly recommended that you change your network name (SSID). This value is case-sensitive. For example, TEST is NOT the same as test.
- **Region** - Select your region from the pull-down list. This field specifies the region where the wireless function of the Router can be used. It may be illegal to use the wireless function of the Router in a region other than one of those specified in this filed. If your country or region is not listed, please contact your local government agency for assistance.
- **Mode** - Select the desired mode. It is strongly recommended that you keep the default setting **11bgn mixed**, so that all 802.11b/g/n wireless devices can connect to the router.
 **Note:** If 11bg mixed mode is selected, the **Channel Width** field will turn gray and the value will become 20M and cannot be changed.
- **Channel** - This field determines which operating frequency will be used. The default channel is set to **Auto**. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.
- **Channel Width** - Select any channel width from the drop-down list. The default setting is **Auto**, which can automatically adjust the channel width for your clients.
- **Enable SSID Broadcast** - If enabled, the router will broadcast the wireless network name (SSID).

5.4.2. WPS

WPS (Wi-Fi Protected Setup) can help you to quickly and securely connect to a wireless network. This section will guide you to add a new wireless device to your router's network quickly via WPS.


Note:

The WPS function cannot be performed if the wireless function of the router is disabled. Please make sure the wireless function is enabled before configuration.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [WPS](#).
3. Follow one of the following three methods to connect your client device to the router's Wi-Fi network.

Method ONE: Press the WPS Button on Your Client Device

1. Keep the WPS Status as [Enabled](#) and click [Add Device](#).

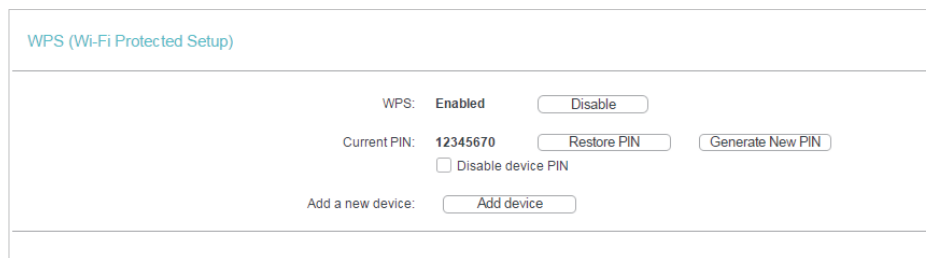

WPS (Wi-Fi Protected Setup)

WPS: **Enabled** [Disable](#)

Current PIN: **12345670** [Restore PIN](#) [Generate New PIN](#)

☐ Disable device PIN

Add a new device: [Add device](#)

2. Select [Press the WPS button of the new device in two minutes](#) and click [Connect](#).



WPS Settings

☐ Enter new device PIN.

PIN:

☒ Press the WPS button of the new device within the next two minutes.

[Connect](#) [Back](#)

3. Within two minutes, press the WPS button on your client device.
4. A success message will appear on the WPS page if the client device has been successfully added to the router's network.

Method TWO: Enter the Client's PIN

1. Keep the WPS Status as [Enabled](#) and click [Add Device](#).

WPS (Wi-Fi Protected Setup)

WPS: **Enabled**

Current PIN: **12345670**

☐ Disable device PIN

Add a new device:

2. Select **Enter the new device PIN**, enter your client device's current PIN in the **PIN** field and click **Connect**.

WPS Settings

☒ Enter new device PIN.

PIN:

☐ Press the WPS button of the new device within the next two minutes.

3. A success message will appear on the WPS page if the client device has been successfully added to the router's network.

Method Three: Enter the Router's PIN

1. Keep the WPS Status as **Enabled** and get the **Current PIN** of the router.

WPS (Wi-Fi Protected Setup)

WPS: **Enabled**

Current PIN: **12345670**

☐ Disable device PIN

Add a new device:

2. Enter the router's current PIN on your client device to join the router's Wi-Fi network.

5. 4. 3. Wireless Security

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless Security**.
3. Configure the security settings of your wireless network and click **Save**.

Wireless Security Settings

Note: WEP security, WPA/WPA2 - Enterprise authentication and TKIP encryption are not supported with WPS enabled. For network security, it is strongly recommended to enable wireless security and select WPA2-PSK AES encryption.

☐ Disable Wireless Security

☒ WPA/WPA2 - Personal(Recommended)

Version: WPA2-PSK

Encryption: AES

Wireless Password: 12345670

Group Key Update Period: 0

☐ WPA/WPA2 - Enterprise

Version: Auto

Encryption: Auto

RADIUS Server IP:

RADIUS Server Port: 1812 (1-65535, 0 stands for default port 1812)

RADIUS Server Password:

Group Key Update Period: 0

☐ WEP

Authentication Type: Open System

WEP Key Format: Hexadecimal

Selected Key: WEP Key

Key	Key Type
Key 1: <input checked="" type="radio"/>	Disabled
Key 2: <input type="radio"/>	Disabled
Key 3: <input type="radio"/>	Disabled
Key 4: <input type="radio"/>	Disabled

Save

- **Disable Wireless Security** - The wireless security function can be enabled or disabled. If disabled, wireless clients can connect to the router without a password. It's strongly recommended to choose one of the following modes to enable security.
- **WPA-PSK/WPA2-Personal** - It's the WPA/WPA2 authentication type based on pre-shared passphrase.
 - **Version** - Select **Automatic**, **WPA-PSK** or **WPA2-PSK**.
 - **Encryption** - Select **Automatic**, **TKIP** or **AES**.
 - **Wireless Password** - Enter ASCII or Hexadecimal characters. For Hexadecimal, the length should be between 8 and 64 characters; for ASCII, the length should be between 8 and 63 characters.
 - **Group Key Update Period** - Specify the group key update interval in seconds. The value can be 0 or at least 30. Enter 0 to disable the update.
- **WPA /WPA2-Enterprise** - It's based on Radius Server.
 - **Version** - Select **Automatic**, **WPA** or **WPA2**.
 - **Encryption** - Select **Automatic**, **TKIP** or **AES**.
 - **Radius Server IP** - Enter the IP address of the Radius server.
 - **Radius Port** - Enter the port that Radius server used.
 - **Radius Password** - Enter the password for the Radius server.

- **Group Key Update Period** - Specify the group key update interval in seconds. The value should be 30 or above. Enter 0 to disable the update.
- **WEP** - It is based on the IEEE 802.11 standard.
 - **Authentication Type** - The default setting is **Automatic**, which can select Shared Key or Open System authentication type automatically based on the wireless client's capability and request.
 - **WEP Key Format** - Hexadecimal and ASCII formats are provided here. Hexadecimal format stands for any combination of hexadecimal digits (0-9, a-f, A-F) in the specified length. ASCII format stands for any combination of keyboard characters in the specified length.
 - **WEP Key (Password)** - Select which of the four keys will be used and enter the matching WEP key. Make sure these values are identical on all wireless clients in your network.
 - **Key Type** - Select the WEP key length (64-bit, 128-bit or 152-bit) for encryption. **Disabled** means this WEP key entry is invalid.
 - **64-bit** - Enter 10 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 5 ASCII characters.
 - **128-bit** - Enter 26 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 13 ASCII characters.
 - **152-bit** - Enter 32 hexadecimal digits (any combination of 0-9, a-f and A-F. Null key is not permitted) or 16 ASCII characters.

5. 4. 4. Wireless MAC Filtering

Wireless MAC Filtering is used to deny or allow specific wireless client devices to access your network by their MAC addresses.

I want to:

Deny or allow specific wireless client devices to access my network by their MAC addresses.

For example, you want the wireless client A with the MAC address 00-0A-EB-B0-00-0B and the wireless client B with the MAC address 00-0A-EB-00-07-5F to access the router, but other wireless clients cannot access the router

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless MAC Filtering**.
3. Click **Enable** to enable the Wireless MAC Filtering function.

4. Select [Allow the stations specified by any enabled entries in the list to access](#) as the filtering rule.
5. Delete all or disable all entries if there are any entries already.
6. Click [Add New](#) and fill in the blank.

Add or Modify Wireless MAC Address Filtering entry

MAC Address:

Description:

Status:

- 1) Enter the MAC address 00-0A-EB-B0-00-0B/00-0A-EB-00-07-5F in the MAC Address field.
 - 2) Enter wireless client A/B in the Description field.
 - 3) Select [Enabled](#) in the Status drop-down list.
 - 4) Click [Save](#) and click [Back](#).
7. The configured filtering rules should be listed as the picture shows below.

Filtering Rules

☐ Deny the stations specified by any enabled entries in the list to access.

☒ Allow the stations specified by any enabled entries in the list to access.

ID	MAC Address	Status	Description	Modify
1	00-0A-EB-B0-00-0B	Enabled	Client A	Modify Delete
2	00-0A-EB-00-07-5F	Enabled	Client B	Modify Delete

Done!

Now only client A and client B can access your network.

5.4.5. Wireless Advanced

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless > Wireless Advanced](#).
3. Configure the advanced settings of your wireless network and click [Save](#).

Note: If you are not familiar with the setting items on this page, it's strongly recommended to keep the provided default values; otherwise it may result in lower wireless network performance.

The image shows a web-based configuration interface for a router, specifically the 'Wireless Advanced' section. The settings are as follows:

Setting	Value	Range
Transmit Power:	100%	
Beacon Interval:	100	(40-1000)
RTS Threshold:	2346	(1-2346)
Fragmentation Threshold:	2346	(256-2346)
DTIM Interval:	1	(1-15)

Below the input fields, there are three checkboxes:

- ☒ Enable Short GI
- ☐ Enable Client Isolation
- ☒ Enable WMM

A 'Save' button is located at the bottom right of the configuration area.

- **Transmit Power** - Select **High**, **Middle** or **Low** which you would like to specify for the router. **High** is the default setting and recommended.
- **Beacon Interval** - Enter a value between 40-1000 milliseconds for Beacon Interval here. Beacon Interval value determines the time interval of the beacons. The beacons are the packets sent by the router to synchronize a wireless network. The default value is 100.
- **RTS Threshold** - Here you can specify the RTS (Request to Send) Threshold. If the packet is larger than the specified RTS Threshold size, the router will send RTS frames to a particular receiving station and negotiate the sending of a data frame. The default value is 2346.
- **Fragmentation Threshold** - This value is the maximum size determining whether packets will be fragmented. Setting a low value for the Fragmentation Threshold may result in poor network performance because of excessive packets. 2346 is the default setting and is recommended.
- **DTIM Interval** - This value determines the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. You can specify the value between 1-255 Beacon Intervals. The default value is 1, which indicates the DTIM Interval is the same as Beacon Interval.
- **Enable Short GI** - It is recommended to enable this function, for it will increase the data capacity by reducing the guard interval time.
- **Enable Client Isolation** - This function isolates all connected wireless stations so that wireless stations cannot access each other through WLAN. This function will be disabled if WDS/Bridge is enabled.
- **Enable WMM** - WMM function can guarantee the packets with high-priority messages being transmitted preferentially. It is strongly recommended to enable this function.

5.4.6. Wireless Statistics


1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless** > **Wireless Statistics** to check the data packets sent and received by each client device connected to the router.

ID	MAC Address	Current Status	Received Packets	Sent Packets	Configure
1	D0-51-62-27-C0-42	WPA2-PSK	65	33	<div>Deny</div>

- **MAC Address** - The MAC address of the connected wireless client.
- **Current Status** - The running status of the connected wireless client.
- **Received Packets** - Packets received by the wireless client.
- **Sent Packets** - Packets sent by the wireless client.
- **Configure** - The button is used for loading the item to the Wireless MAC Filtering list.
 - **Allow** - If the Wireless MAC Filtering function is enabled, click this button to allow the client to access your network.
 - **Deny** - If the Wireless MAC Filtering function is enabled, click this button to deny the client to access your network.

5.4.7. Throughput Monitor

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless** > **Throughput Monitor** to view the wireless throughput information.

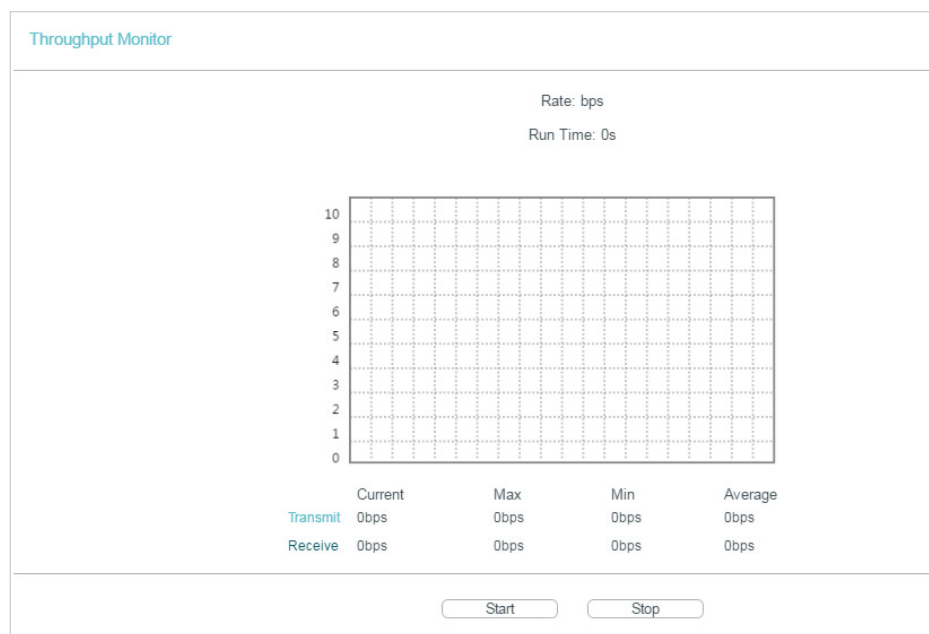

- **Rate** - The unit for the Throughput.
- **Run Time** - How long the Throughput Monitor runs.
- **Transmit** - Wireless transmit rate information.
- **Receive** - Wireless receive rate information.

Click **Start** / **Stop** to start or stop wireless throughput monitor.

5. 5. DHCP

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the router acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of DHCP Server if necessary, and you can reserve LAN IP addresses for specified client devices.

5. 5. 1. DHCP Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Settings**.
3. Specify DHCP server settings and click **Save**.

DHCP Settings

DHCP Server: ☐ Disable ☒ Enable

Start IP Address:

End IP Address:

Address Lease Time: minutes (1~2880 minutes, the default value is 1)

Default Gateway: (optional)

Default Domain: (optional)

DNS Server: (optional)

Secondary DNS Server: (optional)

Save

- **DHCP Server** - Enable or disable the DHCP server. If disabled, you must have another DHCP server within your network or else you must configure the computer manually.
- **Start IP Address** - Specify an IP address for the DHCP Server to start with when assigning IP addresses. 192.168.0.100 is the default start address.
- **End IP Address** - Specify an IP address for the DHCP Server to end with when assigning IP addresses. 192.168.0.199 is the default end address.
- **Address Lease Time** - The Address Lease Time is the amount of time a network user will be allowed to connect to the router with the current dynamic IP Address. When time is up, the user will be automatically assigned a new dynamic IP address. The range of the time is 1 ~ 2880 minutes. The default value is 120.
- **Default Gateway (Optional)** - It is suggested to input the IP address of the LAN port of the router. The default value is 192.168.0.1.
- **Default Domain (Optional)** - Input the domain name of your network.
- **DNS Server (Optional)** - Input the DNS IP address provided by your ISP.
- **Secondary DNS Server (Optional)** - Input the IP address of another DNS server if your ISP provides two DNS servers.

Note:

- To use the DHCP server function of the router, you must configure all computers on the LAN as [Obtain an IP Address automatically](#).
- When you choose **Smart IP (DHCP)** in **Network > LAN**, the DHCP Server function will be disabled. You will see the page as below.

DHCP Settings

DHCP Server:
☐ Disable
☒ Enable

Start IP Address:

End IP Address:

Address Lease Time:
 minutes (1~2880 minutes, the default value is 1)

Default Gateway:
 (optional)

Default Domain:
 (optional)

DNS Server:
 (optional)

Secondary DNS Server:
 (optional)

Note: The DHCP Settings function cannot be configured if you have chosen Smart IP (DHCP) in [Network->LAN](#) (in this situation the device will help you configure the DHCP automatically as you need).

5. 5. 2. DHCP Clients List

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Clients List** to view the information of the clients connected to the router.

DHCP Clients List

This page displays information of all DHCP clients on the network.

ID	Client Name	MAC Address	Assigned IP	Lease Time
1	win7-PC	74:D4:35:98:42:A8	192.168.0.100	00:00:48

- **Client Name** - The name of the DHCP client.
- **MAC Address** - The MAC address of the DHCP client.
- **Assigned IP** - The IP address that the router has allocated to the DHCP client.
- **Lease Time** - The time of the DHCP client leased. After the dynamic IP address has expired, a new dynamic IP address will be automatically assigned to the user.

You cannot change any of the values on this page. To update this page and show the current attached devices, click [Refresh](#).

5. 5. 3. Address Reservation

You can reserve an IP address for a specific client. When you specify a reserved IP address for a PC on the LAN, this PC will always receive the same IP address each time when it accesses the DHCP server.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.

2. Go to [DHCP > Address Reservation](#).
3. Click [Add New](#) and fill in the blank.

DHCP Address Reservation

This page displays the static IP address assigned by the DHCP Server and allows you to adjust these configurations by clicking the corresponding fields.

<input type="checkbox"/>	MAC Address	IP Address	Status	Edit
<input type="checkbox"/>	74:D4:35:98:42:A8	192.168.0.110	Enabled	Edit

[Add New](#)
[Enable Selected](#)
[Disable Selected](#)
[Delete Selected](#)

[Refresh](#)

- 1) Enter the MAC address (in XX-XX-XX-XX-XX-XX format.) of the client for which you want to reserve an IP address.
- 2) Enter the IP address (in dotted-decimal notation) which you want to reserve for the client.
- 3) Leave the [Status](#) as [Enabled](#).
- 4) Click [Save](#).

5. 6. System Tools

5. 6. 1. LED Control

The LED control feature allows you to turn off or on the LEDs of the router automatically when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [System Tools > LED Control](#).
3. Tick [Night Mode](#) and select the [LED Off Time](#) from the pull-down lists. Then click [Save](#).

LED Control

Night Mode ☒

LED Off Time 21 : 00 - 09 : 00

Before enabling the LED Control, make sure [System Time](#) is correct.

[Save](#)

5. 6. 2. Time Settings

This page allows you to set the time manually or to configure automatic time synchronization. The Router can automatically update the time from an NTP server via the internet.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Time Settings**.

Time Settings

Time Settings:

Time Zone: -Please Select-

Date: 1970 Year 1 Month 1 Day

Time: 21 Hour 21 Minute 38 Second Get from PC

NTP Server 1: (optional)

NTP Server 2: (optional)

Get GMT (Only when the Internet connection is active).

Save

Daylight Saving:

Enable Daylight Saving: ☐

Start: Mar 2nd Sun 02:00

End: Nov First Sun 02:00

Save

➤ **To set time manually:**

1. Select your local **Time Zone**.
2. Enter the **Date** in Month/Day/Year format.
3. Enter the **Time** in Hour/Minute/Second format.
4. Click **Save**.

➤ **To set time automatically:**

1. Select your local **Time Zone**.
2. Enter the address or domain of the **NTP Server I** or **NTP Server II**.
3. Click **Get GMT** to get time from the internet if you have connected to the internet.

➤ **To set Daylight Saving Time:**

1. Select **Enable DaylightSaving**.
2. Select the start time from the drop-down list in the **Start** field.
3. Select the end time from the drop-down list in the **End** field.
4. Click **Save**.

■ **Note:** This settings will be used for some time-based functions such as firewall. You must specify your time zone once you log in to the router successfully; otherwise, time-based functions will not take effect.

5.6.3. Diagnostic

Diagnostic is used to test the connectivity between the router and the host or other network devices.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Diagnostic**.

The screenshot shows the 'Diagnostic Tools' section of the router's web interface. It features a 'Diagnostic Parameters' section with the following settings:

- Diagnostic Tool:** Radio buttons for 'Ping' (selected) and 'Traceroute'.
- IP Address/ Domain Name:** An empty text input field.
- Ping Count:** A numeric input field with '4' and a range '(1-50)'.
- Ping Packet Size:** A numeric input field with '64' and a range '(4-1472 Bytes)'.
- Ping Timeout:** A numeric input field with '800' and a range '(100-2000 Milliseconds)'.
- Traceroute Max TTL:** A numeric input field with '20' and a range '(1-30)'.


Below the parameters is a 'Diagnostic Results' section with a dashed border containing the text 'This device is ready.' At the bottom right is a 'Start' button.

- **Diagnostic Tool** - Select one diagnostic tool.
 - **Ping** - This diagnostic tool troubleshoots connectivity, reachability, and name resolution to a given host or gateway.
 - **Tracerouter** - This diagnostic tool tests the performance of a connection.

■ **Note:** You can use ping/traceroute to test both numeric IP address or domain name. If pinging/tracerouting the IP address is successful, but pinging/tracerouting the domain name is not, you might have a name resolution problem. In this case, ensure that the domain name you are specifying can be resolved by using Domain Name System (DNS) queries.

- **IP Address/Domain Name** - Enter the destination IP address (such as 192.168.0.1) or Domain name (such as www.tp-link.com).
- **Pings Count** - The number of Ping packets for a Ping connection.
- **Ping Packet Size** - The size of Ping packet.
- **Ping Timeout** - Set the waiting time for the reply of each Ping packet. If there is no reply in the specified time, the connection is overtime.
- **Traceroute Max TTL** - The max number of hops for a Traceroute connection.

3. Click [Start](#) to check the connectivity of the internet.
4. The [Diagnostic Results](#) page displays the diagnosis result. If the result is similar to the following figure, the connectivity of the internet is fine.

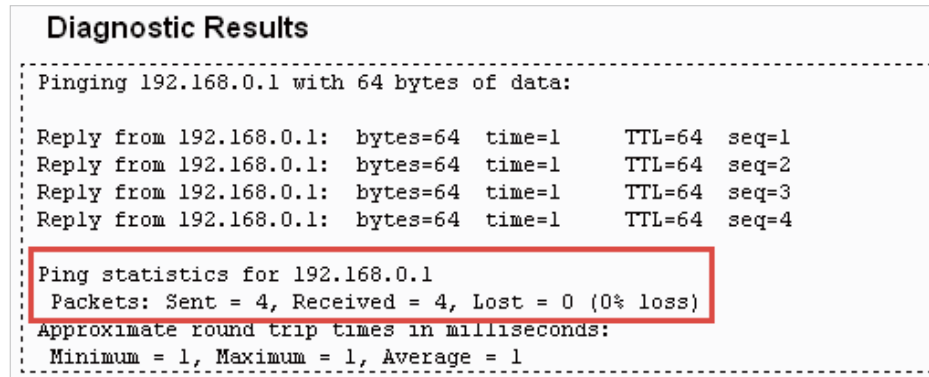


Note: Only one user can use this tool at one time. Options "Number of Pings", "Ping Size" and "Ping Timeout" are used for the Ping function. Option "Tracert Hops" is used for the Tracert function.

5.6.4. Firmware Upgrade


TP-Link is dedicated to improving and enriching the product features, giving users a better network experience. We will release the latest firmware at TP-Link official website. You can download the latest firmware file from the [Support](#) page of our website www.tp-link.com and upgrade the firmware to the latest version.

1. Download the latest firmware file for the router from our website www.tp-link.com.
2. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
3. Go to [System Tools](#) > [Firmware Upgrade](#).
4. Click [Browse](#) to locate the downloaded firmware file, and click [Upgrade](#).

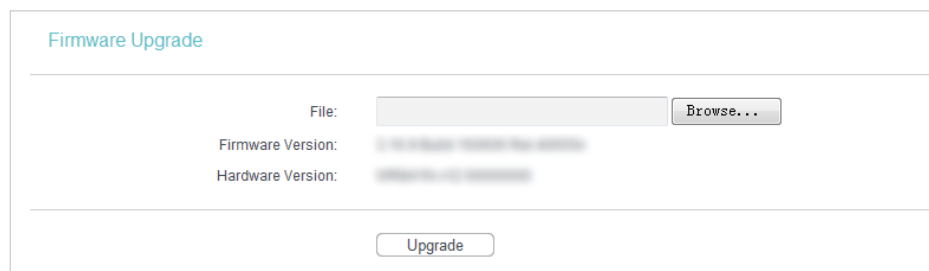

5.6.5. Factory Defaults

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [System Tools](#) > [Factory Defaults](#). Click [Restore](#) to reset all settings to the default values.

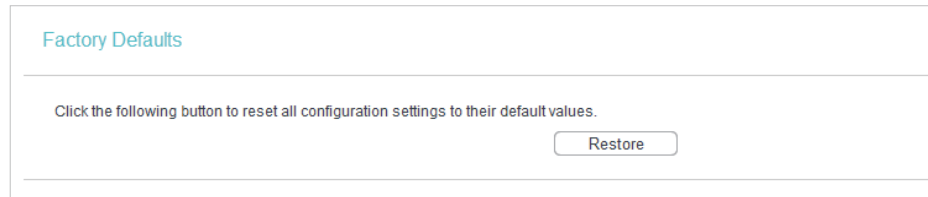
A screenshot of the 'Factory Defaults' section in a router's web interface. It features a title 'Factory Defaults' in blue. Below the title is a horizontal line, followed by a text instruction: 'Click the following button to reset all configuration settings to their default values.' At the bottom right of this section is a button labeled 'Restore'.

- The default **Username**: admin
- The default **Password**: admin
- The default **IP Address**: 192.168.0.1
- The default **Subnet Mask**: 255.255.255.0

5.6.6. Backup & Restore

The configuration settings are stored as a configuration file in the router. You can backup the configuration file in your computer for future use and restore the router to the previous settings from the backup file when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Backup & Restore**.

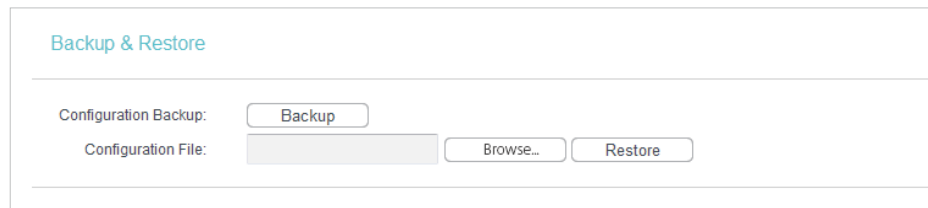A screenshot of the 'Backup & Restore' section in a router's web interface. It has a title 'Backup & Restore' in blue. Below the title is a horizontal line. There are two rows of controls. The first row is labeled 'Configuration Backup:' and contains a 'Backup' button. The second row is labeled 'Configuration File:' and contains a text input field, a 'Browse...' button, and a 'Restore' button.

➤ **To backup configuration settings:**

Click **Backup** to save a copy of the current settings in your local computer. A ".bin" file of the current settings will be stored in your computer.


➤ **To restore configuration settings:**

1. Click **Choose File** to locate the backup configuration file stored in your computer, and click **Restore**.
2. Wait a few minutes for the restoring and rebooting.

■ **Note:** During the restoring process, do not power off or reset the router.

5.6.7. Reboot

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Reboot**, and you can restart your router.

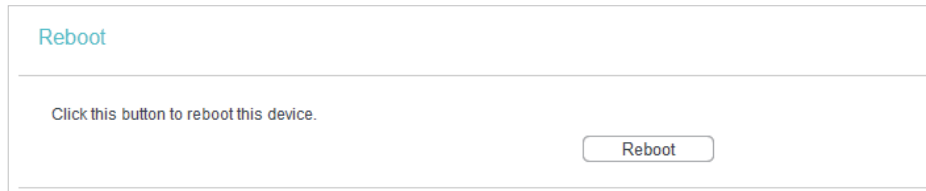The image shows a web interface for rebooting a device. At the top, the word "Reboot" is displayed in a blue header. Below this, a message states "Click this button to reboot this device." To the right of this message is a button labeled "Reboot".

Reboot

Click this button to reboot this device.


Reboot

Some settings of the router will take effect only after rebooting, including:

- Change the LAN IP address (the system will reboot automatically).
- Change the DHCP settings.
- Change the Working Modes.
- Change the Web Management Port.
- Upgrade the firmware of the router (the system will reboot automatically).
- Restore the router to its factory defaults (the system will reboot automatically).
- Update the configuration with the file (the system will reboot automatically).

5. 6. 8. Password

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Password**, and you can change the username and password.

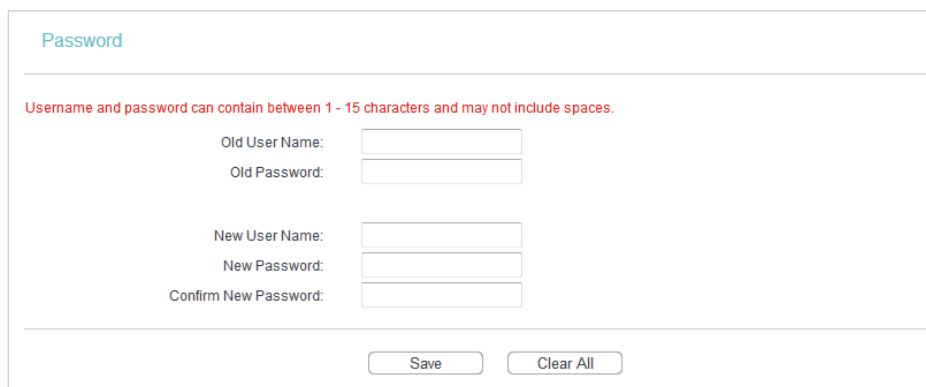The image shows a web interface for changing the router's password. The title "Password" is in a blue header. Below it, a red note states: "Username and password can contain between 1 - 15 characters and may not include spaces." There are four input fields: "Old User Name:", "Old Password:", "New User Name:", and "New Password:". Below these is a "Confirm New Password:" field. At the bottom, there are two buttons: "Save" and "Clear All".

Password

Username and password can contain between 1 - 15 characters and may not include spaces.

Old User Name:

Old Password:

New User Name:

New Password:

Confirm New Password:


Save Clear All

■ **Note:** The new username and password must not exceed 15 characters and not include any spacing.

3. Click **Save**.


5. 6. 9. Language

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Language**.
3. Select the language you prefer from the pull-down list, and then click **Save**.

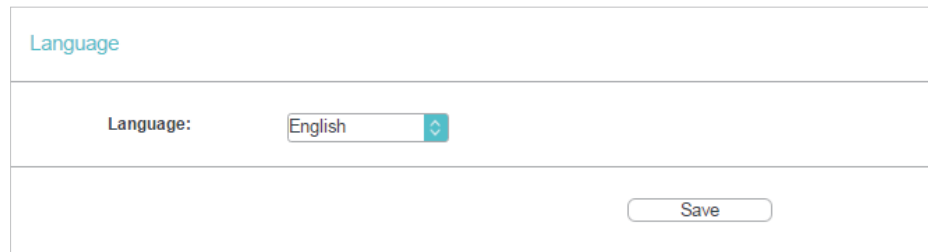


5.6.10. System Log

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools** > **System Log**, and you can view the logs of the router.

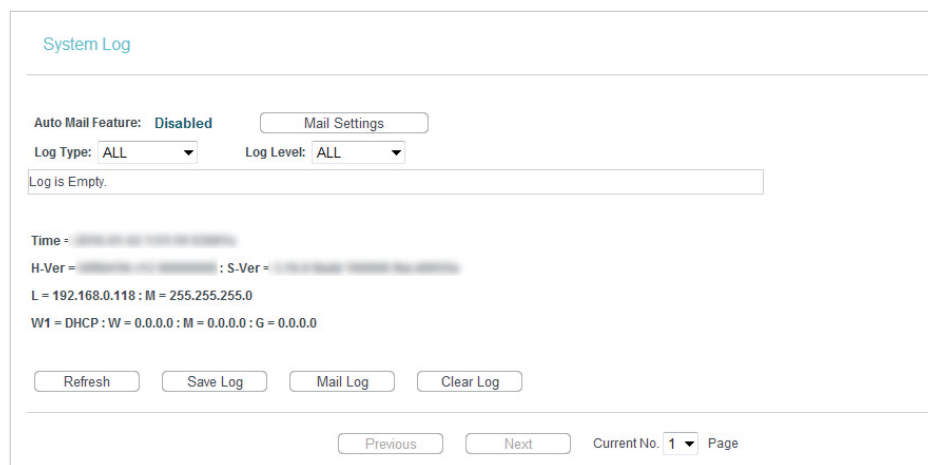

- **Auto Mail Feature** - Indicates whether the auto mail feature is enabled or not.
- **Mail Settings** - Set the receiving and sending mailbox address, server address, validation information as well as the timetable for Auto Mail Feature.

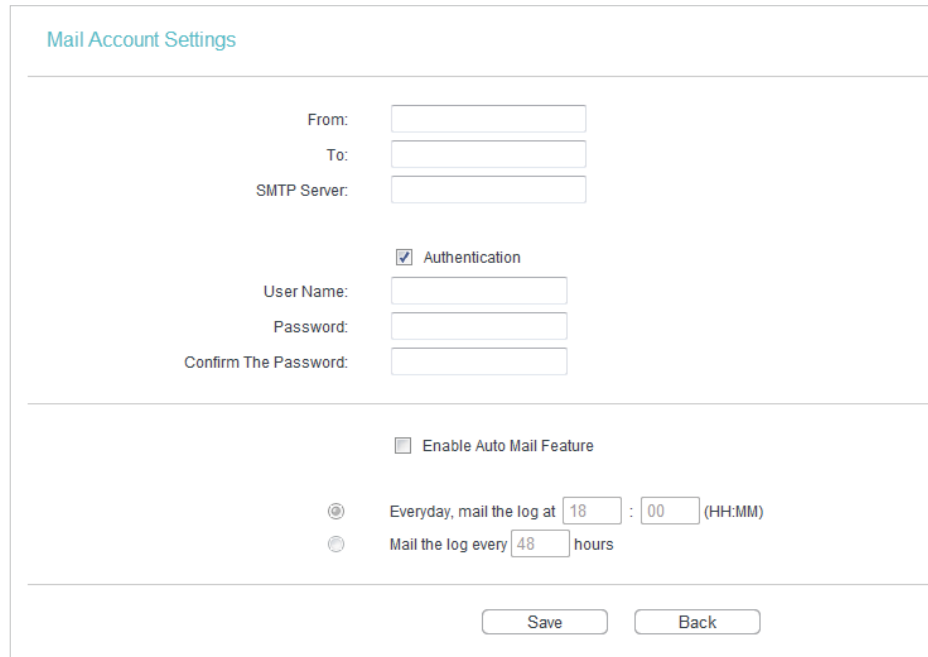

The image shows a web form titled "Mail Account Settings". It contains several input fields and checkboxes. The fields are: "From:" (text input), "To:" (text input), "SMTP Server:" (text input), "User Name:" (text input), "Password:" (text input), and "Confirm The Password:" (text input). There are two checkboxes: "Authentication" (checked) and "Enable Auto Mail Feature" (unchecked). Below the "Enable Auto Mail Feature" checkbox, there are two radio button options. The first option is "Everyday, mail the log at 18 : 00 (HH:MM)" and the second option is "Mail the log every 48 hours". At the bottom of the form, there are two buttons: "Save" and "Back".

- **From** - Your mail box address. The router will connect it to send logs.
- **To** - Recipient's mail address. The destination mailbox which will receive logs.
- **SMTP Server** - Your smtp server. It corresponds with the mailbox filled in the **From** field. You can log on the relevant website for help if you are not clear with the address.
- **Authentication** - Most SMTP Server requires Authentication. It is required by most mailboxes that need user name and password to log in.

Note: Only when you select Authentication, do you have to enter the user name and password in the following fields.

- **User Name** - Your mail account name filled in the From field. The part behind @ is included.
- **Password** - Your mail account password.
- **Confirm The Password** - Enter the password again to confirm.
- **Enable Auto Mail Feature** - Select it to mail logs automatically. You could mail the current logs either at a specified time everyday or by intervals, but only one could be the current effective rule. Enter the desired time or intervals in the corresponding field.

Click **Save** to apply your settings.

Click **Back** to return to the previous page.

- **Log Type** - By selecting the log type, only logs of this type will be shown.
- **Log Level** - By selecting the log level, only logs of this level will be shown.
- **Refresh** - **Refresh** the page to show the latest log list.
- **Save Log** - Click to save all the logs in a txt file.

- [Mail Log](#) - Click to send an email of current logs manually according to the address and validation information set in Mail Settings.
- [Clear Log](#) - All the logs will be deleted from the router permanently, not just from the page.

Click [Next](#) to go to the next page, or click [Previous](#) to return to the previous page.

5.7. Log Out

Click [Logout](#) at the bottom of the main menu, and you will log out of the web page and return to the login window.

Chapter 6

Configure the Router as a Repeater

This chapter presents how to configure the various features of the router working as a Repeater.

It contains the following sections:

- [Status](#)
- [Operation Mode](#)
- [Network](#)
- [Wireless](#)
- [DHCP](#)
- [System Tools](#)
- [Log Out](#)

6.1. Status

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Status](#). You can view the current status information of the router in Repeater Mode.

Status

Firmware Version: TL-WR841N v4.0.0.0 (Build 120610) New Version: TL-WR841N v4.0.0.0 (Build 120610)

LAN

MAC Address: 00:0A:EB:13:09:69

IP Address: 192.168.0.1

Subnet Mask: 255.255.255.0

Wireless

Operation Mode: Repeater

Wireless Radio: Enabled

Name(SSID) of Root AP: TP-Link_

Name(SSID): TP-Link_

Mode: 11bgn mixed

Channel: Auto(Channel 1)

Channel Width: Auto

MAC Address: 00:0A:EB:13:09:69

WDS Status: Enabled

System Up Time: 0 day(s) 00:16:51

Refresh


- **Firmware Version** - The version information of the router's firmware.
- **Hardware Version** - The version information of the router's hardware.
- **LAN** - This field displays the current settings of the LAN, and you can configure them on the **Network > LAN** page.
 - **MAC address** - The physical address of the router.
 - **IP address** - The LAN IP address of the router.
 - **Subnet Mask** - The subnet mask associated with the LAN IP address.
- **Wireless** - This field displays the basic information or status of the wireless function, and you can configure them on the **Wireless > Wireless Settings** page.
 - **Operation Mode** - The current wireless working mode in use.
 - **Wireless Radio** - Indicates whether the wireless feature is enabled or disabled.
 - **Wireless Name of Root AP** - The SSID of the root router.
 - **Name(SSID)** - The wireless network name of the router.
 - **Mode** - The current wireless working mode.

- **Channel** - The current wireless channel.
 - **Channel Width** - The current wireless channel width.
 - **MAC Address** - The physical address of the router.
 - **WDS Status** - The status of the WDS connection is displayed.
- **System Up Time** - The length of the time since the router was last powered on or reset.

Click **Refresh** to get the latest status and settings of the router.

6.2. Operation Mode

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Operation Mode**.
3. Select **Repeater/Bridge** and click **Save**.

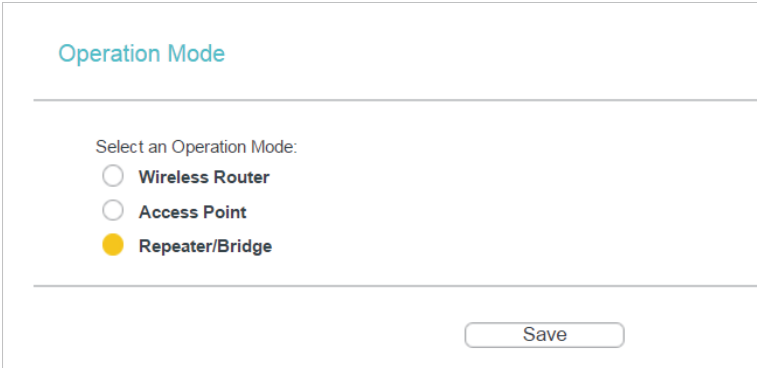

Operation Mode

Select an Operation Mode:

☐ Wireless Router

☐ Access Point

☒ Repeater/Bridge

Save

6.3. Network

6.3.1. LAN

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Network > LAN**.
3. Configure the IP parameters of the LAN and click **Save**.

LAN

Type: Smart IP(DHCP)

Note: The IP parameters cannot be configured if you have chosen Smart IP(DHCP)

(In this situation the device will help you configure the IP parameters automatically as you need).

MAC Address: 00:0A:EB:13:09:69

IP Address: 192.168.0.1

Subnet Mask: 255.255.255.0

Save

- **Type** - Either select **Smart IP(DHCP)** to get IP address from DHCP server, or **Static IP** to configure IP address manually.
- **MAC Address** - The physical address of the LAN ports. The value can not be changed.
- **IP Address** - Enter the IP address in dotted-decimal notation if your select **Static IP** (factory default - 192.168.0.1).
- **Subnet Mask** - An address code that determines the size of the network. Normally 255.255.255.0 is used as the subnet mask.

Note:

- If you have changed the IP address, you must use the new IP address to log in.
- If you select **Smart IP(DHCP)**, the DHCP server of the router will not start up.
- If the new IP address you set is not in the same subnet as the old one, the IP Address pool in the DHCP Server will be configured automatically, but the Virtual Server and DMZ Host will not take effect until they are re-configured.

6.4. Wireless

6.4.1. Connect to Network

In this page, you can connect to an existing wireless network in your home for boosting the wireless network coverage.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Basic Settings** and focus on the **Connect to Host Network** section.
3. Click **Scan**, select the wireless network you want to extend from the AP List and click **Connect**.

Connect to Host Network

SSID(to be bridged):

MAC Address(to be bridged):

Security:

The configuration modified here will be automatically synchronized to the extended network settings

AP List

The scanned APs within the area:

APs: 39

ID	BSSID	SSID	Signal strength	Channel	Encryption	Connect
1		CN_UX_App_p2p	35	1	WPA2-PSK/AES	Connect
2		TP-LINK_02D6	34	1	WPA2-PSK/AES	Connect
3		TP-Link_283C	54	1	WPA2-PSK/AES	Connect
4		nina	37	1	WPA2-PSK/AES	Connect
5		google test	35	3	WPA-PSK/AES	Connect
6		Almond-2.4	31	6	WPA2-PSK/AES	Connect
7		CN_UX_App_Cloud	37	6	WPA2-PSK/AES	Connect
8		Linksys070921	34	6	WPA2-PSK/AES	Connect
9		STBL_NVR_P2P_1	33	6	WPA2-PSK/AES	Connect
10		STBL_NVR_P2P_2	34	6	WPA2-PSK/AES	Connect
11		STBL_NVR_Relay_2	33	6	WPA2-PSK/AES	Connect
12		TP-LINK_0057	33	6	None	Connect
13		TP-LINK_60C4	51	6	WPA2-PSK/AES	Connect
14		TP-LINK_0061	54	7	WPA2-PSK/AES	Connect
15			35	8	WPA2-PSK/AES	Connect

4. The SSID and MAC Address of the network will be filled automatically in the corresponding fields. Enter its password if any and click [Save](#).

Connect to Host Network

SSID(to be bridged):

MAC Address(to be bridged):

Security:

Password:

The configuration modified here will be automatically synchronized to the extended network settings

6.4.2. Extended Network

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless > Basic Settings](#) and focus on the [Extended Network Settings](#) section.
3. Configure the extended network settings and click [Save](#).

- **Extended SSID** - Either use the **Copy Host SSID** button to automatically copy the main router/AP's SSID or enter a new one (up to 32 characters long). This field is case-sensitive.
- **Copy Host SSID** - Click to copy the SSID of the host router/AP. When selected, the extended network will share the SSID of your host network.
- **Extended Security** - Select one of the security options to set local extended wireless network.
 - **No Security** - This option disables the wireless security.
 - **WPA-PSK/WPA2-PSK** - This option supports multiple implementation of the WPA (Wi-Fi Protected Access) standard, such as WPA and WPA2.
 - **WEP** - This option is the most basic form of wireless security that can be used if your client devices can only access wireless using WEP (Wired Equivalent Privacy).

6.4.3. Wireless MAC Filtering

Wireless MAC Filtering is used to deny or allow specific wireless client devices to access your network by their MAC addresses.

I want to:

Deny or allow specific wireless client devices to access my network by their MAC addresses.

How can I do that?

For example, you want the wireless client A with the MAC address 00-0A-EB-B0-00-0B and the wireless client B with the MAC address 00-0A-EB-00-07-5F to access the router, but other wireless clients cannot access the router

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless MAC Filtering**.
3. Click **Enable** to enable the Wireless MAC Filtering function.
4. Select **Allow the stations specified by any enabled entries in the list to access** as the filtering rule.

5. Delete all or disable all entries if there are any entries already.
6. Click [Add New](#) and fill in the blank.

Add or Modify Wireless MAC Address Filtering entry

MAC Address: 00-0A-EB-00-07-5F

Description: Client B

Status: Enabled

Save Back

- 1) Enter the MAC address 00-0A-EB-B0-00-0B/00-0A-EB-00-07-5F in the MAC Address field.
 - 2) Enter wireless client A/B in the Description field.
 - 3) Leave the status as [Enabled](#).
 - 4) Click [Save](#) and click [Back](#).
7. The configured filtering rules should be listed as the picture shows below.

Filtering Rules

☒ Deny the stations specified by any enabled entries in the list to access.

☐ Allow the stations specified by any enabled entries in the list to access.

ID	MAC Address	Status	Description	Modify
1	00-0A-EB-B0-00-0B	Enabled	Client A	Modify Delete
2	00-0A-EB-00-07-5F	Enabled	Client B	Modify Delete

Add New... Enable All Disable All Delete All

Previous Next

Done!

Now only client A and client B can access your network.

6. 4. 4. Wireless Advanced

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [Wireless](#) > [Wireless Advanced](#).
3. Configure the advanced settings of your wireless network and click [Save](#).

Note: If you are not familiar with the setting items on this page, it's strongly recommended to keep the provided default values; otherwise it may result in lower wireless network performance.

The image shows a web-based configuration interface for a router, specifically the 'Wireless Advanced' section. The settings are as follows:

Setting	Value	Range
Transmit Power:	100%	
Beacon Interval:	100	(40-1000)
RTS Threshold:	2346	(1-2346)
Fragmentation Threshold:	2346	(256-2346)
DTIM Interval:	1	(1-15)

Below the input fields, there are three checkboxes:

- ☒ Enable Short GI
- ☐ Enable Client Isolation
- ☒ Enable WMM

A 'Save' button is located at the bottom right of the configuration area.

- **Transmit Power** - Select **High**, **Middle** or **Low** which you would like to specify for the router. **High** is the default setting and recommended.
- **Beacon Interval** - Enter a value between 40-1000 milliseconds for Beacon Interval here. Beacon Interval value determines the time interval of the beacons. The beacons are the packets sent by the Router to synchronize a wireless network. The default value is 100.
- **RTS Threshold** - Here you can specify the RTS (Request to Send) Threshold. If the packet is larger than the specified RTS Threshold size, the Router will send RTS frames to a particular receiving station and negotiate the sending of a data frame. The default value is 2346.
- **Fragmentation Threshold** - This value is the maximum size determining whether packets will be fragmented. Setting a low value for the Fragmentation Threshold may result in poor network performance because of excessive packets. 2346 is the default setting and is recommended.
- **DTIM Interval** - This value determines the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the Router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. You can specify the value between 1-255 Beacon Intervals. The default value is 1, which indicates the DTIM Interval is the same as Beacon Interval.
- **Enable WMM** - WMM function can guarantee the packets with high-priority messages being transmitted preferentially. It is strongly recommended to enable this function.
- **Enable Short GI** - It is recommended to enable this function, for it will increase the data capacity by reducing the guard interval time.
- **Enable Client Isolation** - This function isolates all connected wireless stations so that wireless stations cannot access each other through WLAN. This function will be disabled if WDS/Bridge is enabled.

6.4.5. Wireless Statistics

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless Statistics** to check the data packets sent and received by each client device connected to the router.

Current Connected Wireless Stations numbers: 1 <input type="button" value="Refresh"/>					
ID	MAC Address	Current Status	Received Packets	Sent Packets	Configure
1	D0-51-62-27-C0-42	WPA2-PSK	65	33	<input type="button" value="Deny"/>
<input type="button" value="Previous"/> <input type="button" value="Next"/>					

- **MAC Address** - The MAC address of the connected wireless client.
- **Current Status** - The running status of the connected wireless client.
- **Received Packets** - Packets received by the wireless client.
- **Sent Packets** - Packets sent by the wireless client.
- **Configure** - The button is used for loading the item to the Wireless MAC Filtering list.
 - **Allow** - If the Wireless MAC Filtering function is enabled, click this button to allow the client to access your network.
 - **Deny** - If the Wireless MAC Filtering function is enabled, click this button to deny the client to access your network.

6.5. DHCP

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the router acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of DHCP Server if necessary, and you can reserve LAN IP addresses for specified client devices.

6.5.1. DHCP Settings

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Settings**.
3. Specify DHCP server settings and click **Save**.

DHCP Settings

DHCP Server: ☐ Disable ☒ Enable

Start IP Address:

End IP Address:

Address Lease Time: minutes (1~2880 minutes, the default value is 1)

Default Gateway: (optional)

Default Domain: (optional)

DNS Server: (optional)

Secondary DNS Server: (optional)

Save

- **DHCP Server** - Enable or disable the DHCP server. If disabled, you must have another DHCP server within your network or else you must configure the computer manually.
- **Start IP Address** - Specify an IP address for the DHCP Server to start with when assigning IP addresses. 192.168.0.100 is the default start address.
- **End IP Address** - Specify an IP address for the DHCP Server to end with when assigning IP addresses. 192.168.0.199 is the default end address.
- **Address Lease Time** - The Address Lease Time is the amount of time a network user will be allowed to connect to the router with the current dynamic IP Address. When time is up, the user will be automatically assigned a new dynamic IP address. The range of the time is 1 ~ 2880 minutes. The default value is 120.
- **Default Gateway (Optional)** - It is suggested to input the IP address of the LAN port of the router. The default value is 192.168.0.254.
- **Default Domain (Optional)** - Input the domain name of your network.
- **DNS Server (Optional)** - Input the DNS IP address provided by your ISP.
- **Secondary DNS Server (Optional)** - Input the IP address of another DNS server if your ISP provides two DNS servers.

Note:

- To use the DHCP server function of the router, you must configure all computers on the LAN as **Obtain an IP Address automatically**.
- When you choose **Smart IP** in **Network > LAN**, the DHCP Server function will be disabled.

6.5.2. DHCP Clients List

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **DHCP > DHCP Clients List** to view the information of the clients connected to the router.

DHCP Clients List				
This page displays information of all DHCP clients on the network.				
ID	Client Name	MAC Address	Assigned IP	Lease Time
1	win7-PC	74:D4:35:98:42:A8	192.168.0.100	00:00:48
Refresh				

- **Client Name** - The name of the DHCP client.
- **MAC Address** - The MAC address of the DHCP client.
- **Assigned IP** - The IP address that the router has allocated to the DHCP client.
- **Lease Time** - The time of the DHCP client leased. After the dynamic IP address has expired, a new dynamic IP address will be automatically assigned to the user.

You cannot change any of the values on this page. To update this page and show the current attached devices, click [Refresh](#).

6.6. System Tools

6.6.1. LED Control

The LED control feature allows you to turn off or on the LEDs of the router automatically when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to [System Tools](#) > [LED Control](#).
3. Tick [Night Mode](#) and select the [LED Off Time](#) from the pull-down lists. Then click [Save](#).

LED Control

Night Mode

☒

LED Off Time

21:00 - 09:00

Before enabling the LED Control, make sure [System Time](#) is correct.

Save

6.6.2. Time Settings

This page allows you to set the time manually or to configure automatic time synchronization. The Router can automatically update the time from an NTP server via the internet.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Time Settings**.

The screenshot shows the 'Time Settings' page. It has a title bar 'Time Settings' and a section 'Time Settings:'. Under this section, there are fields for 'Time Zone' (a dropdown menu showing '-Please Select-'), 'Date' (fields for Year: 1970, Month: 1, Day: 1), and 'Time' (fields for Hour: 21, Minute: 21, Second: 38, and a 'Get from PC' button). Below these are 'NTP Server 1' and 'NTP Server 2' fields, both marked as optional, and a 'Get GMT' button with the note '(Only when the Internet connection is active)'. A 'Save' button is at the bottom right of this section. The second section is 'Daylight Saving:'. It starts with 'Enable Daylight Saving:' followed by an unchecked checkbox. Below are 'Start' and 'End' fields. The 'Start' field has dropdowns for 'Mar', '2nd', 'Sun', and '02:00'. The 'End' field has dropdowns for 'Nov', 'First', 'Sun', and '02:00'. A 'Save' button is at the bottom right of this section.

➤ **To set time manually:**

1. Select your local **Time Zone**.
2. Enter the **Date** in Month/Day/Year format.
3. Enter the **Time** in Hour/Minute/Second format.
4. Click **Save**.

➤ **To set time automatically:**

5. Select your local **Time Zone**.
6. Enter the address or domain of the **NTP Server I** or **NTP Server II**.
7. Click **Get GMT** to get time from the internet if you have connected to the internet.

➤ **To set Daylight Saving Time:**

1. Select **Enable Daylight Saving**.
2. Select the start time from the drop-down list in the **Start** field.
3. Select the end time from the drop-down list in the **End** field.
4. Click **Save**.

■ **Note:** This settings will be used for some time-based functions such as firewall. You must specify your time zone once you log in to the router successfully; otherwise, time-based functions will not take effect.

6.6.3. Diagnostic

Diagnostic is used to test the connectivity between the router and the host or other network devices.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Diagnostic**.

The screenshot shows the 'Diagnostic Tools' page. Under 'Diagnostic Parameters', there are two radio buttons for 'Diagnostic Tool': 'Ping' (selected) and 'Traceroute'. Below these are input fields for 'IP Address/ Domain Name:', 'Ping Count' (set to 4, range 1-50), 'Ping Packet Size' (set to 64, range 4-1472 Bytes), 'Ping Timeout' (set to 800, range 100-2000 Milliseconds), and 'Traceroute Max TTL' (set to 20, range 1-30). Under 'Diagnostic Results', there is a dashed box containing the text 'This device is ready.' At the bottom right is a 'Start' button.

- **Diagnostic Tool** - Select one diagnostic tool.
 - **Ping** - This diagnostic tool troubleshoots connectivity, reachability, and name resolution to a given host or gateway.
 - **Tracerouter** - This diagnostic tool tests the performance of a connection.

■ **Note:** You can use ping/traceroute to test both numeric IP address or domain name. If pinging/tracerouting the IP address is successful, but pinging/tracerouting the domain name is not, you might have a name resolution problem. In this case, ensure that the domain name you are specifying can be resolved by using Domain Name System (DNS) queries.

- **IP Address/Domain Name** - Enter the destination IP address (such as 192.168.0.1) or Domain name (such as www.tp-link.com).
- **Pings Count** - The number of Ping packets for a Ping connection.
- **Ping Packet Size** - The size of Ping packet.
- **Ping Timeout** - Set the waiting time for the reply of each Ping packet. If there is no reply in the specified time, the connection is overtime.
- **Traceroute Max TTL** - The max number of hops for a Traceroute connection.

3. Click **Start** to check the connectivity of the internet.

4. The **Diagnostic Results** page displays the diagnosis result. If the result is similar to the following figure, the connectivity of the internet is fine.

```

Diagnostic Results

Pinging 192.168.0.1 with 64 bytes of data:

Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=1
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=2
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=3
Reply from 192.168.0.1: bytes=64 time=1 TTL=64 seq=4

Ping statistics for 192.168.0.1
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss)
Approximate round trip times in milliseconds:
Minimum = 1, Maximum = 1, Average = 1

```

Note: Only one user can use this tool at one time. Options "Number of Pings", "Ping Size" and "Ping Timeout" are used for the Ping function. Option "Tracert Hops" is used for the Tracert function.


6.6.4. Firmware Upgrade

TP-Link is dedicated to improving and enriching the product features, giving users a better network experience. We will release the latest firmware at TP-Link official website. You can download the latest firmware file from the [Support](#) page of our website www.tp-link.com and upgrade the firmware to the latest version.

1. Download the latest firmware file for the router from our website www.tp-link.com.
2. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
3. Go to **System Tools > Firmware Upgrade**.
4. Click **Browse** to locate the downloaded firmware file, and click **Upgrade**.

6.6.5. Factory Defaults

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Factory Defaults**. Click **Restore** to reset all settings to the default values.

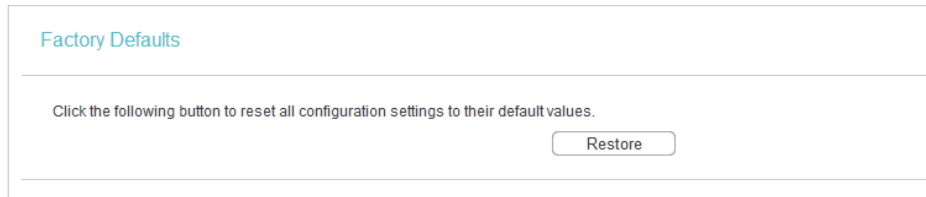
A screenshot of the 'Factory Defaults' page in a web interface. The title 'Factory Defaults' is at the top. Below it, a message says 'Click the following button to reset all configuration settings to their default values.' At the bottom right, there is a button labeled 'Restore'.

- The default **Username**: admin
- The default **Password**: admin
- The default **IP Address**: 192.168.0.1
- The default **Subnet Mask**: 255.255.255.0

6.6.6. Backup & Restore

The configuration settings are stored as a configuration file in the router. You can backup the configuration file in your computer for future use and restore the router to the previous settings from the backup file when needed.

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Backup & Restore**.

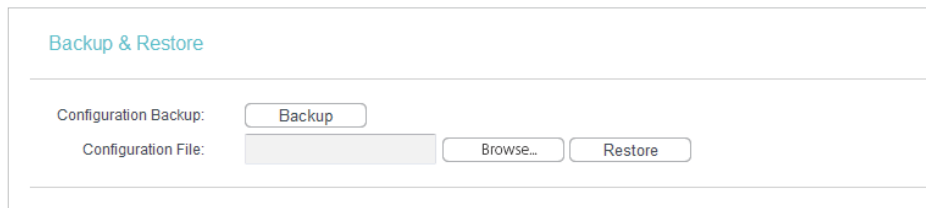A screenshot of the 'Backup & Restore' page. The title 'Backup & Restore' is at the top. Below it, there are two sections. The first section is 'Configuration Backup:' with a button labeled 'Backup'. The second section is 'Configuration File:' with a text input field, a 'Browse...' button, and a 'Restore' button.

➤ To backup configuration settings:

Click **Backup** to save a copy of the current settings in your local computer. A ".bin" file of the current settings will be stored in your computer.


➤ To restore configuration settings:

1. Click **Choose File** to locate the backup configuration file stored in your computer, and click **Restore**.
2. Wait a few minutes for the restoring and rebooting.

Note: During the restoring process, do not power off or reset the router.

6.6.7. Reboot

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Reboot**, and you can restart your router.

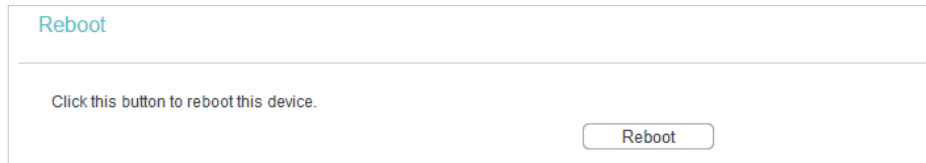A screenshot of a web interface titled "Reboot". Below the title, there is a text instruction: "Click this button to reboot this device." To the right of this text is a button labeled "Reboot".

Reboot

Click this button to reboot this device.


Reboot

Some settings of the router will take effect only after rebooting, including:

- Change the LAN IP Address (system will reboot automatically).
- Change the DHCP Settings.
- Change the Working Modes.
- Change the Web Management Port.
- Upgrade the firmware of the router (system will reboot automatically).
- Restore the router to its factory defaults (system will reboot automatically).
- Update the configuration with the file (system will reboot automatically).

6.6.8. Password

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Password**, and you can change the factory default username and password of the router.

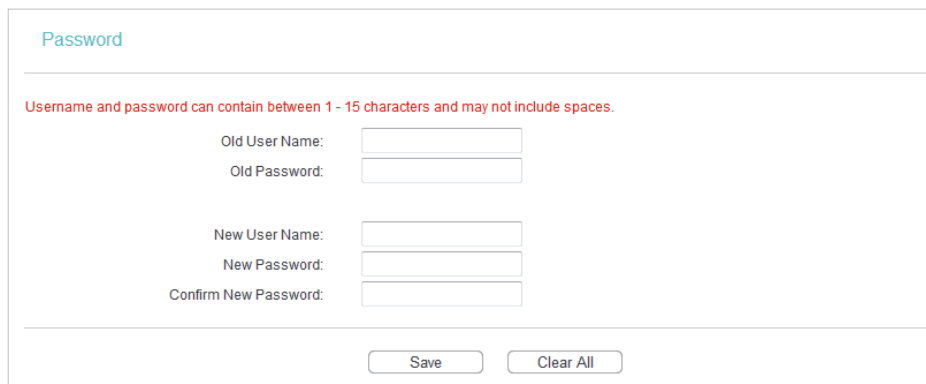A screenshot of a web interface titled "Password". Below the title, there is a red text instruction: "Username and password can contain between 1 - 15 characters and may not include spaces." Below this instruction are four input fields: "Old User Name:", "Old Password:", "New User Name:", and "New Password:". Below these four fields is a "Confirm New Password:" field. At the bottom of the form are two buttons: "Save" and "Clear All".

Password

Username and password can contain between 1 - 15 characters and may not include spaces.

Old User Name:

Old Password:

New User Name:

New Password:

Confirm New Password:


Save Clear All

Note: The new username and password must not exceed 15 characters and not include any spacing.

3. Click **Save**.

6.6.9. Language

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools > Language**.
3. Select the language you prefer from the pull-down list, and then click **Save**.

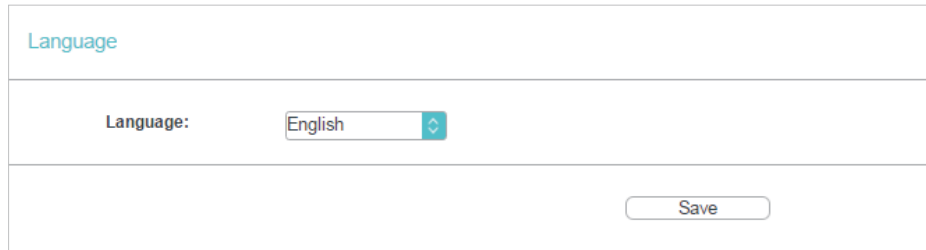


Language

Language: English

Save

6.6.10. System Log

1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **System Tools** > **System Log**, and you can view the logs of the router.

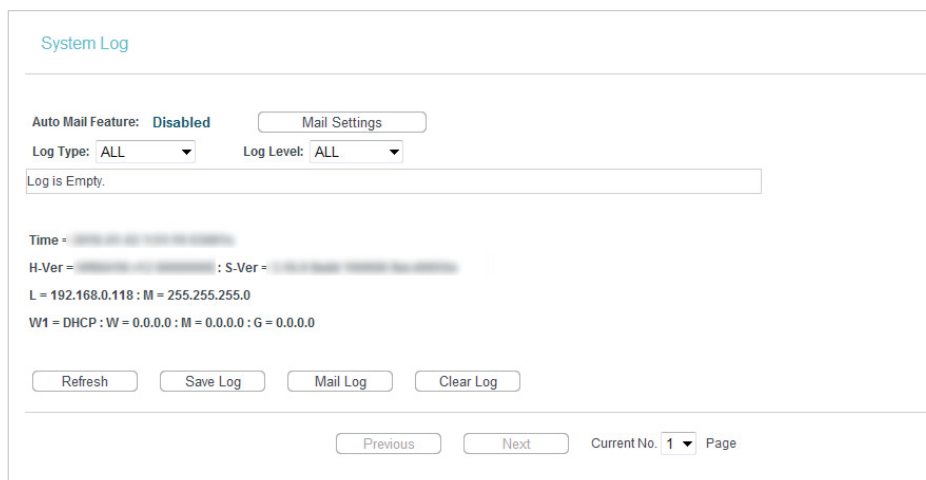

System Log

Auto Mail Feature: Disabled Mail Settings

Log Type: ALL Log Level: ALL


Log is Empty.

Time =
H-Ver = : S-Ver =
L = 192.168.0.118 : M = 255.255.255.0
W1 = DHCP : W = 0.0.0.0 : M = 0.0.0.0 : G = 0.0.0.0

Refresh Save Log Mail Log Clear Log

Previous Next Current No. 1 Page

- **Auto Mail Feature** - Indicates whether the auto mail feature is enabled or not.
- **Mail Settings** - Set the receiving and sending mailbox address, server address, validation information as well as the timetable for Auto Mail Feature.

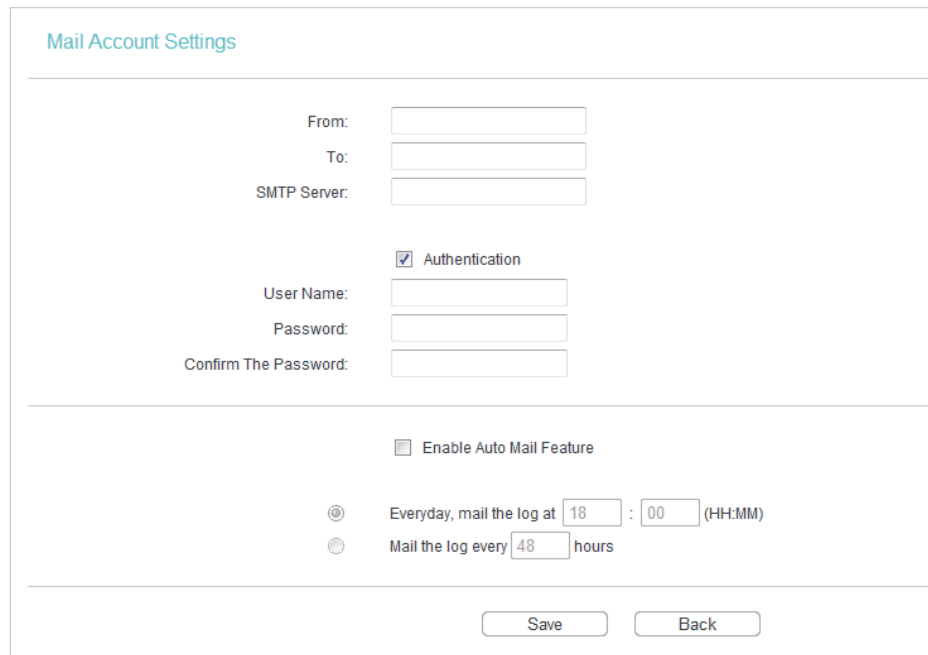

The image shows a 'Mail Account Settings' form. It contains the following fields and options:

- From:** Text input field.
- To:** Text input field.
- SMTP Server:** Text input field.
- ☒ **Authentication**
- User Name:** Text input field.
- Password:** Text input field.
- Confirm The Password:** Text input field.
- ☐ **Enable Auto Mail Feature**
- Radio button selection for auto-mailing:
 - ☒ Everyday, mail the log at : (HH:MM)
 - ☐ Mail the log every hours
- Save** and **Back** buttons at the bottom.

- **From** - Your mail box address. The router will connect it to send logs.
- **To** - Recipient's mail address. The destination mailbox which will receive logs.
- **SMTP Server** - Your smtp server. It corresponds with the mailbox filled in the **From** field. You can log in to the relevant website for help if you are not clear with the address.
- **Authentication** - Most SMTP Server requires Authentication. It is required by most mailboxes that need user name and password to log in.

Note: Only when you select Authentication, do you have to enter the user name and password in the following fields.

- **User Name** - Your mail account name filled in the From field. The part behind @ is included.
- **Password** - Your mail account password.
- **Confirm The Password** - Enter the password again to confirm.
- **Enable Auto Mail Feature** - Select it to mail logs automatically. You could mail the current logs either at a specified time everyday or by intervals, but only one could be the current effective rule. Enter the desired time or intervals in the corresponding field.

Click **Save** to apply your settings.

Click **Back** to return to the previous page.

- **Log Type** - By selecting the log type, only logs of this type will be shown.
- **Log Level** - By selecting the log level, only logs of this level will be shown.
- **Refresh** - Refresh the page to show the latest log list.
- **Save Log** - Click to save all the logs in a "txt" file.

- [Mail Log](#) - Click to send an email of current logs manually according to the address and validation information set in Mail Settings.
- [Clear Log](#) - All the logs will be deleted from the router permanently, not just from the page.

Click [Next](#) to go to the next page, or click [Previous](#) to return to the previous page.

6.7. Log Out

Click [Logout](#) at the bottom of the main menu, and you will log out of the web page and return to the login window.

FAQ

Q1. What should I do if I forget my wireless password?

The default wireless password is printed on the label of the router. If the password has been altered, please connect your computer to the router using an Ethernet cable and follow the steps below:


1. Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
2. Go to **Wireless > Wireless Security** to retrieve or reset your wireless password.

Q2. What should I do if I forget my login password of the web management page?

The default username and password of the web management page are **admin** (in lowercase).

If you have altered the username and password:


1. Please press and hold the **Reset** button for about 7 seconds to reset the router.
2. Visit <http://tplinkwifi.net>, and enter **admin** (in lowercase) as both username and password to log in.

 **Note:** You'll need to reconfigure the router to surf the internet once the router is reset, and please mark down your new password for future use.


Q3. What should I do if I cannot access the router's web management page?

This can happen for a variety of reasons. Please try the following:


- Make sure your computer has connected to the router correctly and the corresponding LED light up.
- Make sure the IP address of your computer is configured as **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
- Verify that <http://tplinkwifi.net> or 192.168.0.1 is correctly entered in the web browser.
- Check your computer's settings: Go to **Start > Control Panel > Network and Internet**, and click **View network status and tasks**.
 - 1) Click **Internet Options** on the bottom left.
 - 2) Click **Connections** and select **Never dial a connection**.

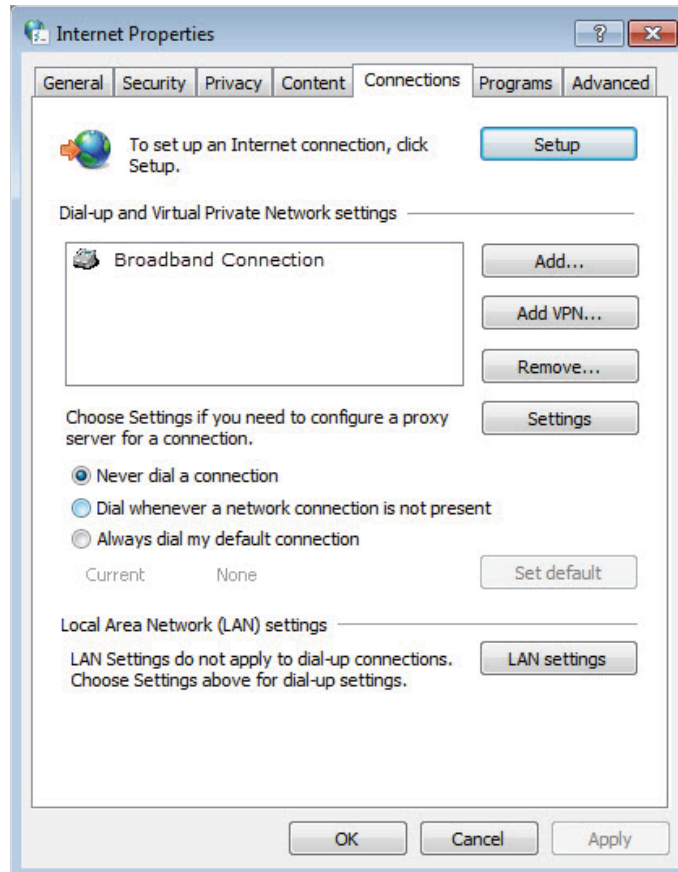

3) Click [LAN settings](#) and deselect the following three options, and click [OK](#).

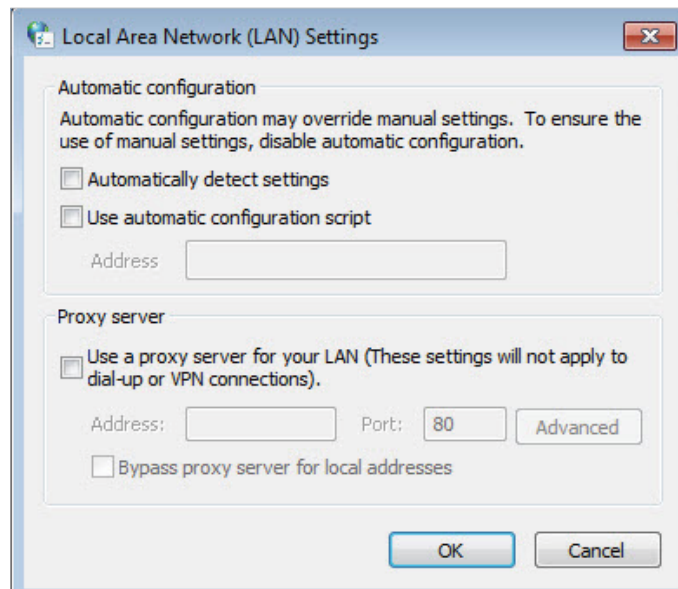

4) Go to [Advanced](#) > [Restore advanced settings](#), and click [OK](#) to save the settings.

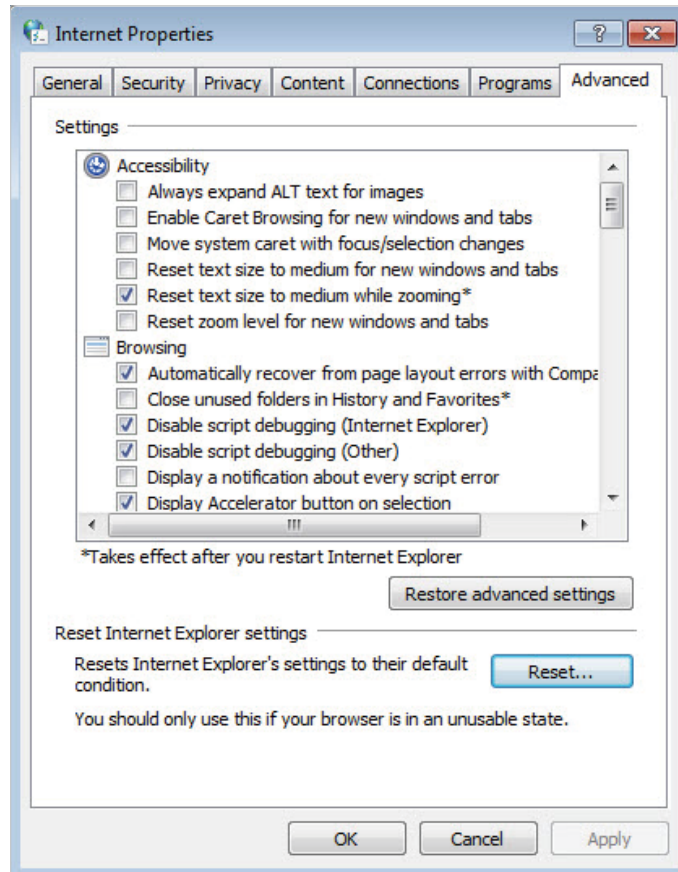

- Use another web browser or computer to log in again.
- Reset the router to its factory default settings and try again.
- If the login still fails, please contact the technical support.

Q4.How do I use the WDS Bridging function to extend my wireless network?

For example, my house covers a large area. The wireless coverage of the router I'm using (the host router) is limited. I want to use an extended router to extend the wireless network of the host router.

■ Note: WDS bridging only requires configuration on the extended router.

1. Visit <http://tplinkwifi.net>, and log in to with the username and password you set for the router.
2. Configure the IP address of the router:
 - 1) Go to **Network > LAN**, and set the IP address of the extended router to be in the same subnet with the host router; (for example, if the IP address of the host router is 192.168.0.1, the IP address of the extended router should be 192.168.0.2~192.168.0.254. Here we take 192.168.0.2 for example).
 - 2) Click **Save**.

■ Note: Log in to the web management page again if the IP address of the router has been altered.

LAN

MAC Address: 0C-4A-08-45-F3-60

IP Address:

Subnet Mask:

IGMP Proxy:

Note:IGMP(Internet Group Management Protocol) works for IPTV multicast stream.The device supports both IGMP proxy with enabled/disabled option and IGMP snooping.

3. Survey the SSID to be bridged:

- 1) Go to [Wireless > Wireless Settings](#) and click [Enable WDS Bridging](#).
- 2) Click [Survey](#), locate the host router's SSID and click [Choose](#).
- 3) If the host router is set with a wireless password, you should enter its wireless password.
- 4) Click [Save](#).

Wireless Settings

Wireless Network Name: (Also called the SSID)

Mode:

Channel Width:

Channel:

☒ Enable Wireless Router Radio

☒ Enable SSID Broadcast

☒ Enable WDS Bridging

SSID (to be bridged):

BSSID (to be bridged): Example:00-1D-0F-11-22-33

WDS Mode:

Key type:

WEP Index:

Auth type:

Password:

4. Disable DHCP: Go to [DHCP](#), select [Disable](#), and click [Save](#).

Now you can go to [Status](#) to check the WDS status. When the [WDS status](#) is [Run](#), it means WDS bridging is successfully built.

Q5.What should I do if I cannot access the internet after the configuration in router mode?


1. Visit <http://tplinkwifi.net>, and log in to with the username and password you set for the router.
2. Go to [Status](#) to check WAN status:

If the IP address is a valid one, please try the following:

- Your computer might not recognize any DNS server addresses. Please manually configure DNS server.

- 1) Go to [DHCP](#).
- 2) Enter 8.8.8.8 as Primary DNS, and click [Save](#).

 **Tips:** 8.8.8.8 is a safe and public DNS server operated by Google.

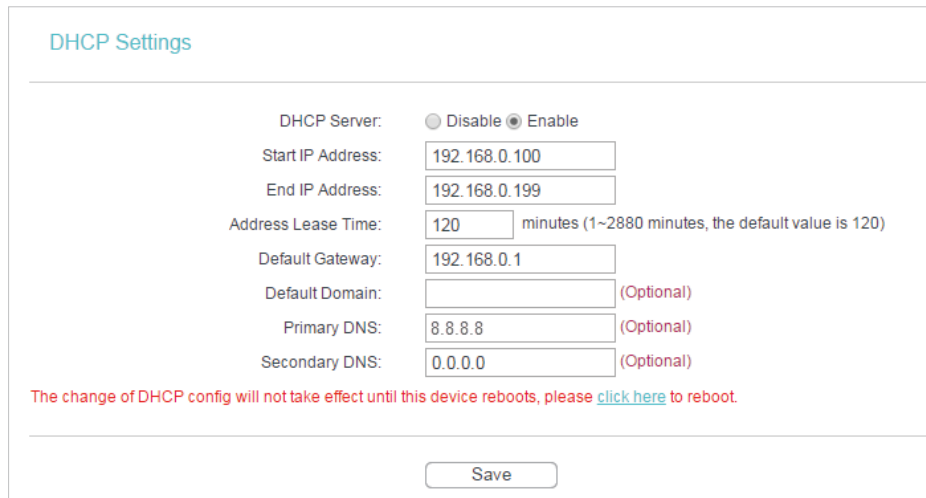

- Restart the modem and the router.
 - 1) Power off your modem and the router, and leave them off for 1 minute.
 - 2) Power on your modem first, and wait about 2 minutes.
 - 3) Power on the router, and wait another 1 or 2 minutes and check the internet access.
- Reset the router to its factory default settings and reconfigure the router.
- Upgrade the firmware of the router.
- Check the TCP/IP settings on the particular device if all other devices can get internet from the router.

If the IP address is 0.0.0.0, please try the following:

- Make sure the physical connection between the router and the modem is established.
- Clone the MAC address of your computer.
 - 1) Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
 - 2) Go to [Network](#) > [MAC Clone](#), select [Clone MAC Address](#) and click [Save](#).

MAC Clone

WAN MAC Address: 0C-4A-08-45-F3-61 Restore Factory MAC

Your PC's MAC Address: 74-D4-35-98-42-A8 Clone MAC Address

Save

Tips:

- Some ISP may register the MAC address of your computer when you access the internet for the first time through their Cable modem. If you add a router into your network to share your internet connection, the ISP will not accept it as the MAC address is changed, so we need to clone your computer's MAC address to the router.
- The MAC addresses of a computer in wired connection and wireless connection are different.

• **Modify the LAN IP address of the router.**

Note: Most TP-Link routers use 192.168.0.1/192.168.1.1 as their default LAN IP address, which may conflict with the IP range of your existent ADSL modem/router. If so, the router is not able to communicate with your modem and cause you can't access the internet. To resolve this problem, we need to change the LAN IP address of the router to avoid such conflict, for example, 192.168.2.1.

- 1) Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
- 2) Go to **Network > LAN**.
- 3) Modify the LAN IP address as the follow picture shows. Here we take 192.168.2.1 as an example.

LAN

MAC Address: 0C-4A-08-45-F3-60

IP Address: 192.168.2.1

Subnet Mask: 255.255.255.0 ▼

IGMP Proxy: Enable ▼

Note:IGMP(Internet Group Management Protocol) works for IPTV multicast stream.The device supports both IGMP proxy with enabled/disabled option and IGMP snooping.

Save

- 4) Click **Save**.

• **Restart the modem and the router.**

- 1) Power off your modem and the router, and leave them off for 1 minute.
- 2) Power on your modem first, and wait about 2 minutes.
- 3) Power on the router, and wait another 1 or 2 minutes and check the internet access.

• **Double check the WAN Connection Type.**

- 1) Confirm your WAN Connection Type, which can be got from the ISP.
- 2) Visit <http://tplinkwifi.net>, and log in with the username and password you set for the router.
- 3) Go to **Network > WAN**.

4) Select your [WAN Connection Type](#) and fill in other parameters.

The screenshot shows the 'WAN' configuration page. At the top, there's a 'WAN Connection Type' dropdown menu set to 'Dynamic IP' with a 'Detect' button next to it. Below this, there are fields for 'IP Address', 'Subnet Mask', and 'Default Gateway', all set to '0.0.0.0'. There are 'Renew' and 'Release' buttons. Further down is the 'MTU Size (in bytes)' field set to '1500' with a note: '(The default is 1500, do not change unless necessary.)'. Below that is a checkbox 'Use These DNS Servers' which is unchecked. There are fields for 'Primary DNS' and 'Secondary DNS', both set to '0.0.0.0', with a note '(Optional)' next to the Secondary DNS field. At the bottom, there's a 'Host Name' field set to 'TL-WR841N' and a checkbox 'Get IP with Unicast DHCP (It is usually not required.)' which is unchecked. A 'Save' button is at the very bottom.

5) Click [Save](#).

6) Restart the modem and the router.

- Please upgrade the firmware of the router.

If you've tried every method above but still cannot access the internet, please contact the technical support.

Q6. What should I do if I cannot find my wireless network or I cannot connect the wireless network?

If you fail to find any wireless network, please follow the steps below:

- Make sure the wireless function of your device is enabled if you're using a laptop with a built-in wireless adapter. You can refer to the relevant document or contact the laptop's manufacturer.
- Make sure the wireless adapter driver is installed successfully and the wireless adapter is enabled.
 - **On Windows 7**
 - 1) If you see the message [No connections are available](#), it is usually because the wireless function is disabled or blocked somehow.
 - 2) Clicking [Troubleshoot](#) and Windows might be able to fix the problem by itself.
 - **On Windows XP**

- 1) If you see the message [Windows cannot configure this wireless connection](#), this is usually because Windows configuration utility is disabled or you are running another wireless configuration tool to connect the wireless network.
- 2) Exit the wireless configuration tool (the TP-Link Utility, for example).
- 3) Select and right click [My Computer](#) on Desktop, and select [Manage](#) to open Computer Management window.
- 4) Go to [Services and Applications](#) > [Services](#), and find and locate [Wireless Zero Configuration](#) in the Services list on the right side.
- 5) Right click [Wireless Zero Configuration](#), and then select [Properties](#).
- 6) Change [Startup type](#) to [Automatic](#), click [Start](#) and make sure the Service status is [Started](#). And then click [OK](#).


If you can find other wireless network except your own, please follow the steps below:

- Check the WAN LED indicator on your wireless router.
- Make sure your computer/device is still in the range of your router/modem. Move closer if it is currently too far away.

If you can find your wireless network but fail to connect, please follow the steps below:

- **Authenticating problem/password mismatch:**

- 1) Sometimes you will be asked to type in a PIN when you connect to the wireless network for the first time. This PIN is different from the Wireless Password/Network Security Key. Usually you can only find it on the label of your router.

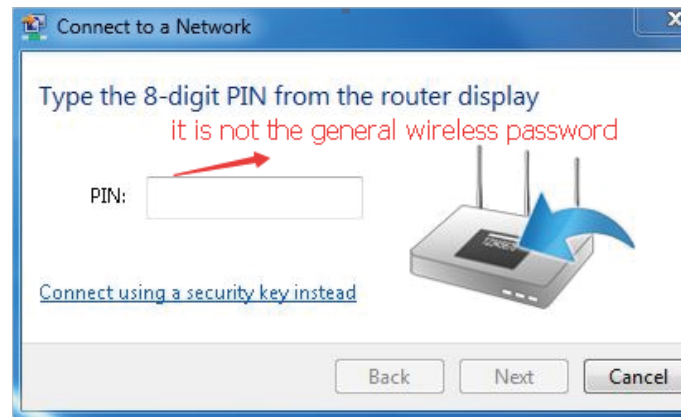


- 2) If you cannot find the PIN or entering the PIN still does not work, you may choose [Connecting using a security key instead](#), and then type in the [Wireless Password/Network Security Key](#).
- 3) If it continues to show the note [Network Security Key Mismatch](#), it is suggested to confirm the wireless password of your wireless router.

■ **Note:** Wireless Password/Network Security Key is case sensitive.

- **Windows unable to connect to XXXX / Can not join this network / Taking longer than usual to connect to this network:**
 - Check the wireless signal strength of your network. It is weak (1~3 bars), please move the router closer and try again.
 - Change the wireless channel of the router to 1, 6, or 11 to reduce interference from other networks.
 - Re-install or update the driver for your wireless adapter of the computer.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2017 TP-Link Technologies Co., Ltd. All rights reserved.

FCC STATEMENT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF Exposure Information

This device meets the EU requirements (1999/5/EC Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device is used at 20 cm from your body.

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements:

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice:

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。




Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.





Safety Information

- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.
- Adapter shall be installed near the equipment and shall be easily accessible.

- The plug considered as disconnect device of adapter.
-  Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.

Explanations of the symbols on the product label

Symbol	Explanation
	DC voltage
	<p>RECYCLING</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p>