



Leitor Zebra RFD2000

O Gatilho RFID UHF Zebra RFD2000 para Coletor de Dados TC20 é um dispositivo leve e compacto que adiciona de forma fácil a capacidade de leitura, gravação e localização de etiquetas UHF RFID.

RFD2000

RFID SLED



User Guide



ZEBRA

Copyright

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2019 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

COPYRIGHTS & TRADEMARKS: For complete copyright and trademark information, go to www.zebra.com/copyright.

WARRANTY: For complete warranty information, go to www.zebra.com/warranty.

END USER LICENSE AGREEMENT: For complete EULA information, go to www.zebra.com/eula.

For Australia Only

For Australia Only. This warranty is given by Zebra Technologies Asia Pacific Pte. Ltd., 71 Robinson Road, #05-02/03, Singapore 068895, Singapore. Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Zebra Technologies Corporation Australia's limited warranty above is in addition to any rights and remedies you may have under the Australian Consumer Law. If you have any queries, please call Zebra Technologies Corporation at +65 6858 0722. You may also visit our website: www.zebra.com for the most updated warranty terms.

Terms of Use

- Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

- Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

- Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

- Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Revision History

Changes to the original manual are listed below:

Change	Date	Description
-01 Rev A	12/2017	Initial release
-02 Rev A	5/2018	Rev B Software Updates: - "Import RFID Manager Into StageNow" chapter name change to "RFID Manager StageNow Plug-in." - Updates to "RFID Manager StageNow Plug-in" chapter.
-03 Rev A	11/2018	Add technical specifications.
-04 Rev A	11/2019	- Updated copyright statement. - Removed Zebra RFID Mobile Application for Android chapter. - Added reference to new 123RFID Mobile Application Guide. - Deleted RFID Scan-Write chapter.

Table of Contents

Copyright	2
For Australia Only	2
Terms of Use	2
Revision History	3

About This Guide

Introduction	7
Configurations	7
Chapter Descriptions	8
Notational Conventions	8
Related Documents and Software	9
Service Information	9

Getting Started

Introduction	10
Unpacking	10
RFID Sled Features	11
LED Definitions	12
RFD2000 LED Definitions While Charging	12
RFD2000 LED Definitions When Not Charging	12
LED Indications	13
RFID Sled Battery Replacement	14
Removing Battery	14
Installing Battery	15
Attach/Remove Mobile Computer to RFID Sled	16
Attaching Mobile Computer to RFID Sled	16
Removing Mobile Computer to RFID Sled	16
Installing the Lanyard	17
Charging	17
Battery Management	18
Low Battery Notification	18
Battery Optimization	18
Mobile Device	18

Zebra RFID Mobile Application for Android

RFID Manager

Introduction	20
Setting Up the RFD2000	21
Installing RFID Manager for Android	21
Requirements	21
Installation	21
Using the RFID Manager for Android	21
Connection Status	22
RFID Regulatory	24
Settings	25
Firmware Update	27
Recovery Mode	29
RFID Manager Log	30
Beeper Indications	31
About	31

StageNow

StageNow Staging Solution	32
---------------------------------	----

RFID Manager StageNow Plug-in

Introduction	33
Requirements	33
Importing RFID Manager CSP Plug-in	34
Creating Firmware Update Profile Using StageNow	36
Creating Reader Configurations	41
Creating Reset Radio and Reset to Factory Profiles	43
Applying Firmware and Regulatory Updates in One Profile	46

Maintenance and Technical Specifications

Introduction	47
Cleaning	47
Approved Cleanser Active Ingredients	47
Harmful Ingredients	47
Cleaning Instructions	47
Special Cleaning Notes	48
Materials Required	48
Cleaning Cradle Connectors	48
Cleaning Frequency	48
Maintenance	48
RFD2000	49
Battery	49
Technical Specifications	50

Troubleshooting

Troubleshooting	52
Troubleshooting RFD2000 RFID Sled with LED Mode 2	54

Data Dictionary

Introduction	55
RFD2000 Attributes	55
Attribute Definitions	55
Inventory Command Configurations	56
Tag Select Configurations	59
Tag Query Configurations	63
Tag Access Configurations	64
Region Configurations	66
Peripheral Configurations	69
Trigger Configurations	69
ASCII Configurations	70
Tag Access Criteria Configurations	72
Locate Tag Configurations	74
Dynamic Power Configurations	74
Duty Cycle Configurations	74
Power Mode Configurations	75
Unique Tag Report Configurations	76
Other RFID Configurations	76
System Configurations	76
Action Values	77

Index

ABOUT THIS GUIDE

Introduction

The RFD2000 RFID Sled User Guide provides general instructions for using the RFID Sled.

Configurations

Table 1 RFD2000 Configurations

Configuration	Description
RFD2000-1000100-US	RFID Sled; United States
RFD2000-1000100-EU	RFID Sled; Europe
RFD2000-1000100-JP	RFID Sled; Japan
RFD2000-1000100-IN	RFID Sled; India
RFD2000-1000100-KR	RFID Sled; Korea
RFD2000-1000200-US	RFID Sled; Inditex; United States
RFD2000-1000200-EU	RFID Sled; Inditex; Europe
RFD2000-1000200-IN	RFID Sled; Inditex; India
RFD2000-1000200JP	RFID Sled; Inditex; Japan

Table 2 RFD2000 Accessories

Configuration	Description
CRD1S-RFD2000-1R	Single Slot Charging Cradle
CRD5S-RFD2000-1R	Five Slot Charging Cradle
BTRY-RF20GAB0E-00	Spare Battery
BTRY-RF20GAB0E-00K	Spare Battery; India and Korea

Chapter Descriptions

Topics covered in this guide are as follows:

- [Getting Started](#) provides information on RFD2000 RFID Sled parts, battery installation, mobile device attachment, LED indications, and charging.
- [Zebra RFID Mobile Application for Android](#) refers to the new 123RFID Mobile Application.
- [RFID Manager](#) describes how to install and configure the Zebra RFID Manager Application for the TC20 Android mobile device used with the RFD2000.
- [StageNow](#) provides a reference to access this easy Wizard-based tool that allows even complex Staging profiles to become simple to create.
- [RFID Manager StageNow Plug-in](#) provides instruction necessary to generate a RFID Firmware update profile and import RFID CSP plug-in into the StageNow application.
- [Troubleshooting](#) describes cleaning, maintenance, and troubleshooting procedures.
- [Data Dictionary](#) includes RFD2000 attribute information (configuration parameters, monitored data, and born on information about the device).

Notational Conventions

The following conventions are used in this document:

- “RFID Sled” refers to the RFD2000 RFID Sled.
- Bold text is used to highlight the following:
 - Dialog box, window and screen names
 - Drop-down list and list box names
 - Check box and radio button names
 - Icons on a screen
 - Key names on a keypad
 - Button names on a screen.
- Bullets (•) indicate:
 - Action items
 - Lists of alternatives
 - Lists of required steps that are not necessarily sequential
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

Related Documents and Software

The following documents and software provide more information about the reader

- RFD2000 Quick Start Guide, p/n MN-003129-xx
- CRD1S-RFD2000 and SHARECRADLE-MC Cradle Regulatory Guide, p/n MN-003127-xx
- RFD2000 Developer Guide, p/n MN-003158-xx
- Zebra RFID SDK for Android Developer Guide, p/n MN-003158-xx
- TC20 Quick Start Guide, p/n MN-003018-xx
- TC20 User Guide, p/n MN-003020-xx
- 123RFID Mobile Application User Guide, p/n MN-003765-xx.
- developer.zebra.com/community/android/stagenow
- techdocs.zebra.com/stagenow/2-10/about/

For the latest version of this guide and all guides, go to: www.zebra.com/support.

Service Information

If you have a problem using the equipment, contact your facility's technical or systems support. If there is a problem with the equipment, they will contact the Zebra Global Customer Support Center at: www.zebra.com/support.

When contacting Zebra support, please have the following information available:

- Serial number of the unit
- Model number or product name
- Software type and version number.

Zebra responds to calls by e-mail, telephone or fax within the time limits set forth in support agreements.

If your problem cannot be solved by Zebra support, you may need to return your equipment for servicing and will be given specific directions. Zebra is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty.

If you purchased your business product from a Zebra business partner, contact that business partner for support.

Getting Started

Introduction

This chapter provides information on RFD2000 RFID Sled parts, battery installation, mobile device attachment, LED indications, and charging.

Unpacking

Carefully remove all protective material from the RFD2000 RFID Sled and save the shipping container for later storage and shipping. Verify the following items are in the box:

- RFD2000
- Battery
- Lanyard
- Quick Start Guide

Inspect the equipment for damage. If any equipment is missing or damaged, contact the Zebra Support Center immediately. See [Service Information on page 9](#) for contact information.

RFID Sled Features

The RFD2000 RFID Sled adds a RFID gun-style handle with a scanning trigger to the TC20 mobile computer. Used for all RFID operations, the RFD2000 increases comfort when using the mobile computer in scan-intensive applications for extended periods of time.

Figure 1 RFD2000 RFID Sled Features

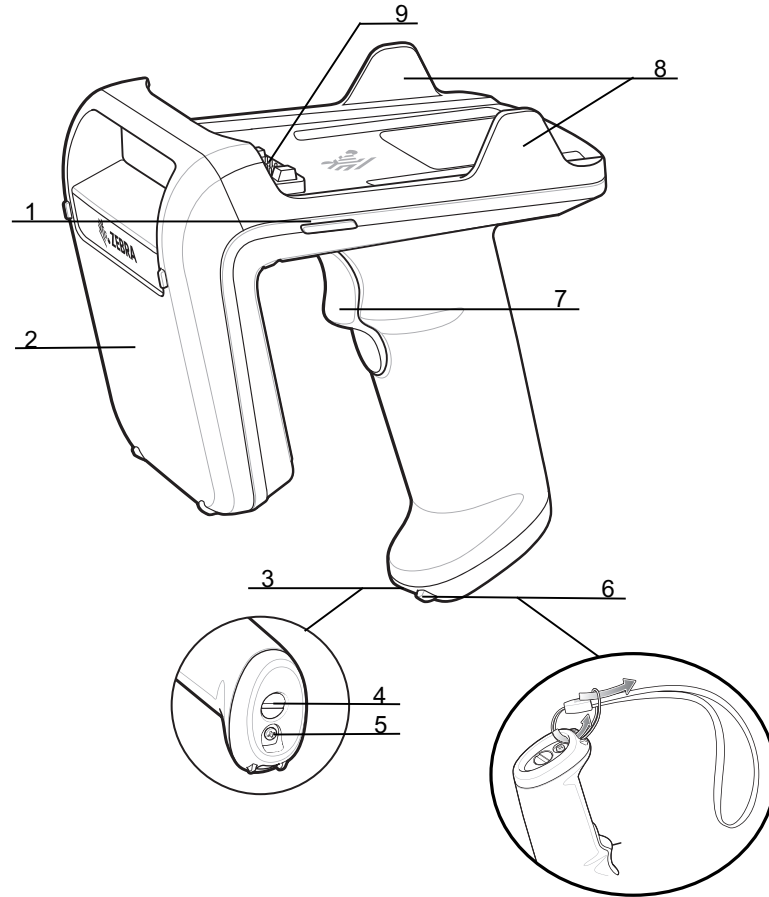


Table 3 RFD2000 Parts

Number	Item
1	LED Indicator (2)
2	Antenna
3	Battery Compartment
4	Battery Compartment Latch
5	Battery Compartment Screw
6	Lanyard Hook
7	Trigger
8	Retention Clip (2)
9	Connector for TC20

LED Definitions

RFD2000 LED Definitions While Charging

The RFD2000 RFID Sled uses a two-color LED to indicate status.

Table 4 RFD2000 LED Definitions While Charging

Condition	RFD2000 Power LED
Pre-charging	Amber (Fast, Fast, Slow)
Charging	Amber (Blinking)
Fully Charged	Green (Stays On)
Charging Error	Amber (Fast Blinking)

RFD2000 LED Definitions When Not Charging

Table 5 RFD2000 LED Definitions When Not Charging

Mode	Condition	RFD2000 Power LED	TC20
LED Mode 0 - All LED Feedback Disabled	Tag Read Indications and Battery Indication Off	Off	Four Short Beeps when the battery SOC (State of Charge) is below 10%
LED Mode 1 - Tag Read Indication Enabled	Tag Read Indication Enabled (Default)	Green LED Blinks	Four Short Beeps when the battery SOC (State of Charge) is below 10%
LED Mode 2 - Battery Indication Enabled	Battery Charge Status ¹	Green when remaining charge is 99%-51% Amber when remaining charge is 21%-50% Red when remaining charge is 0%-20%	
	Low Battery Charge Status ¹	Red when remaining charge is 0%-10%	Four Short Beeps when the battery SOC (State of Charge) is below 10%
LED Mode 3 - Low Battery Indication Enabled	No LED for Normal Charge Status	No LEDs if Charge Status is more than 10%	
	Low Battery Charge Status ¹	Red when remaining charge is 0%-10%	Four Short Beeps when the battery SOC (State of Charge) is below 10%

¹The battery charge status LED Indicator stays On for four seconds when the RFD2000 RFID Sled is removed from the charging cradle.

LED Indications

Power Up

To power up the RFD2000 RFID Sled when it is powered off, press the trigger continuously for 1.3 seconds. The LED blinks amber once when RFD2000 RFID Sled begins to boot up.

Recovery Mode

To place the RFD2000 RFID Sled in Recovery Mode, press the trigger continuously for 20 seconds when it is powered off. The LED remains solid red to indicate the RFD2000 RFID Sled is in Recover Mode.

Firmware Update

When the RFD2000 RFID Sled firmware update is in progress, the LED blinks green.

Battery Error

When an invalid battery is used with the RFD2000 RFID Sled, the LED blinks red. Ensure to only use the battery manufactured for use with the RFD2000.

Battery End of Life

The Battery End of Life indication is disabled by default. When enabled the LED indication for battery health percentage is as follows:

- Green/Red alternate blinking when end of life percentage is 99%-51%
- Amber/Red alternate blinking when end of life percentage is 21%-50%
- Red blinking when remaining end of life percentage is 0%-20%.

If the battery health percentage falls below the configurable threshold (default is 60%), the battery end of life indication replaces the battery charge status.

RFID Sled Battery Replacement

Removing Battery


To remove the battery:



NOTE: Fully charge the RFD2000 RFID Sled before initial use.

1. Remove the Battery Compartment Screw using a Phillips head screw driver.
2. Turn the Battery Compartment Latch counter clockwise approximately 30° using a flat head screw driver or coin.
3. Remove the Battery Compartment Cap.
4. Remove the battery.

Figure 2 RFID Sled Battery Removal

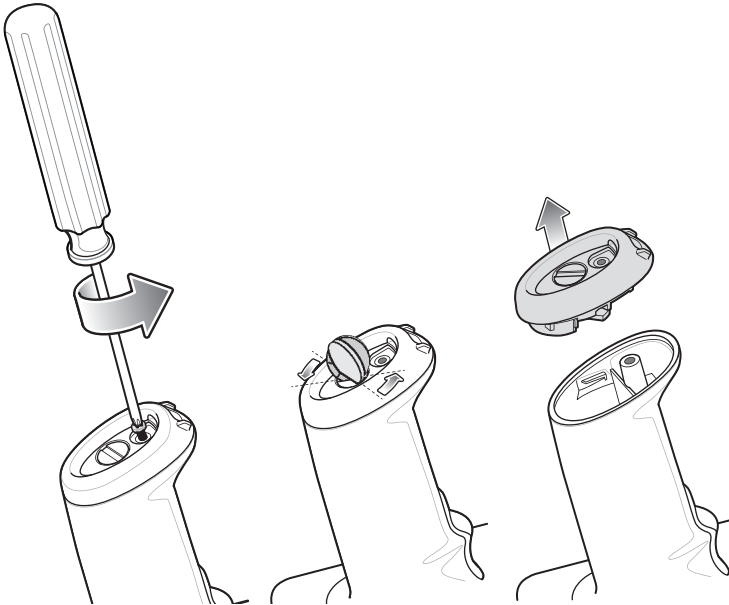


Installing Battery

To install the battery:

1. Insert the battery, connector end first, contacts facing toward the trigger, into the Battery Compartment.
2. Place the Battery Compartment Cap on.
3. Turn the Battery Compartment Latch clockwise using a flat head screw driver or coin.
4. Insert the Battery Compartment Screw and tighten using a Phillips head screw driver.

Figure 3 RFID Sled Battery Insertion

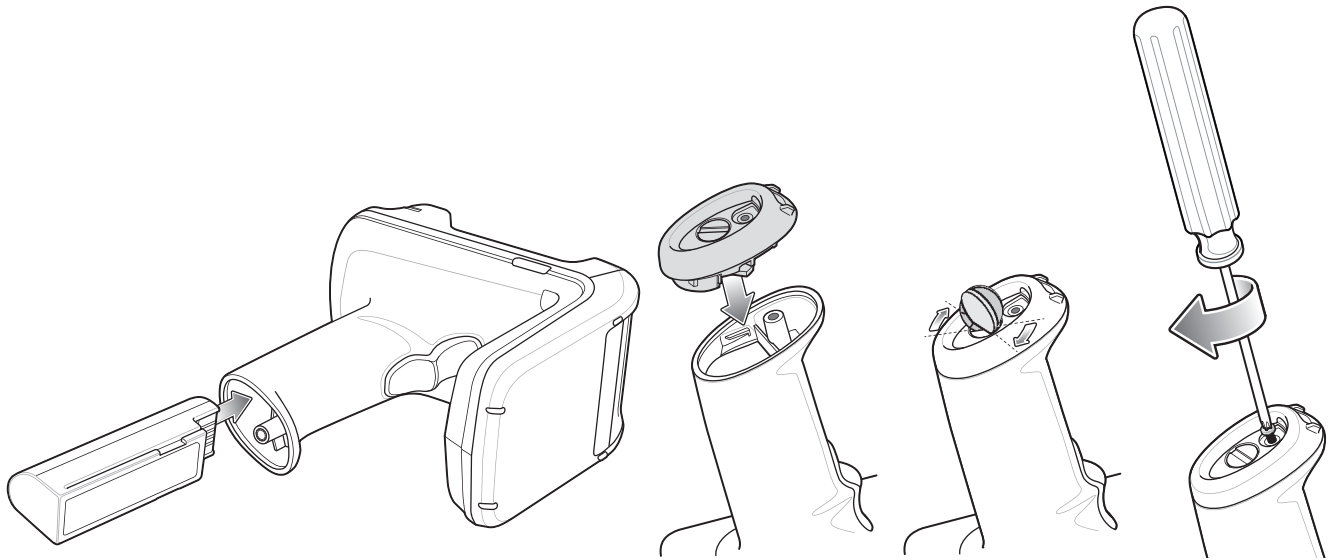


Attach/Remove Mobile Computer to RFID Sled

Attaching Mobile Computer to RFID Sled

To secure the TC20 Mobile Computer to the RFD2000 RFID Sled, place the TC20 fully forward on the Sled base and push the TC20 down into the Retention Clips.


Figure 4 Attach Mobile Computer to RFID Sled

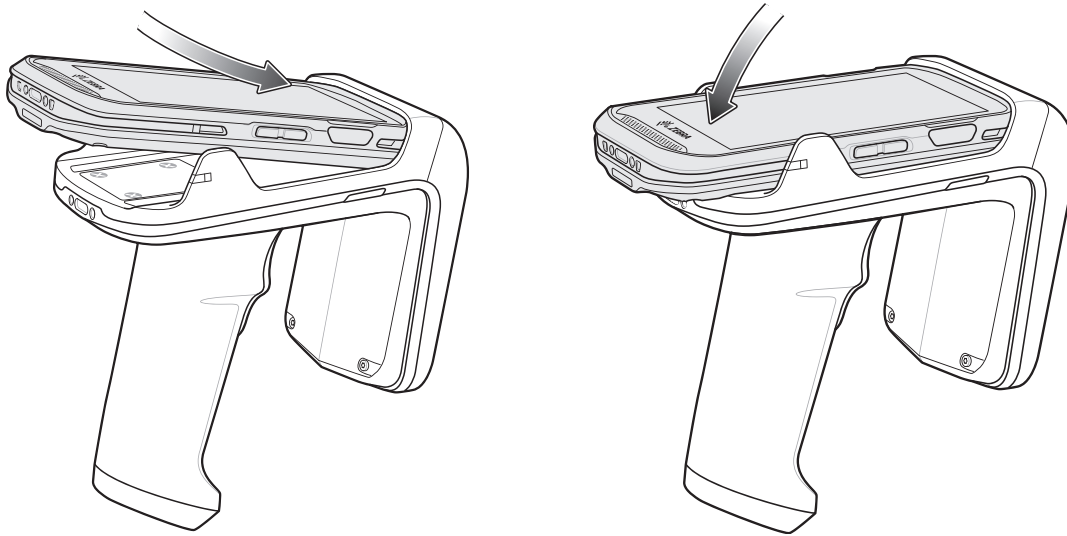

Removing Mobile Computer to RFID Sled

To remove the TC20 Mobile Computer from the RFD2000 RFID Sled, firmly hold the Sled handle, and lift the TC20 off of the Sled base.

Figure 5 Remove Mobile Computer from RFID Sled

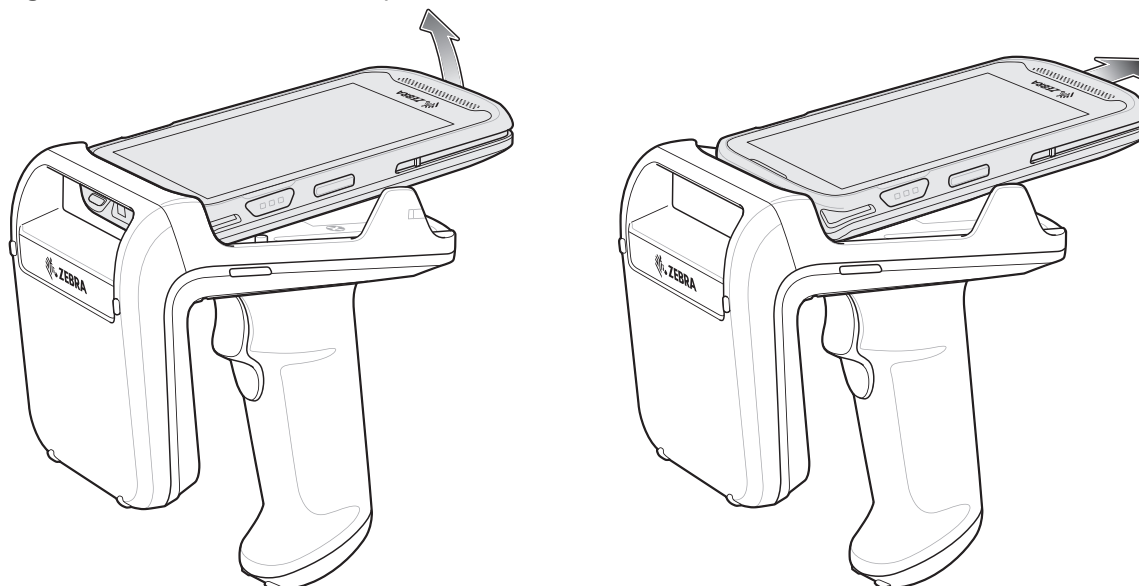


Installing the Lanyard

To install the optional lanyard:

1. Insert the loop on the lanyard into the lanyard hook located at the bottom of the RFD2000 handle.
2. Thread the upper portion of the lanyard into the loop.
3. Pull the clip through the loop over the tether point and tighten into place.

Figure 6 Installing the Lanyard

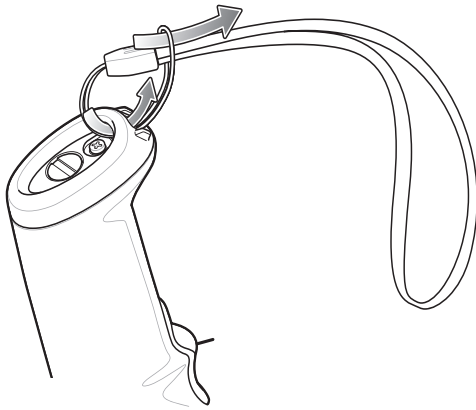


Charging


Before using the RFD2000 for the first time, fully charge the battery by placing it in the charging cradle until the LED Power/Charging Indicator turns solid green (see [LED Definitions on page 12](#) for charge status indications). The RFD2000 RFID Sled and TC20 Mobile Computer may be charged in the charging cradle individually or attached together.

When an RFD2000 RFID Sled is removed from a charging cradle, it is automatically powered on. If a reader is not used for a duration of thirty minutes, the reader enters Off mode. Pressing the handle trigger for 1.3 seconds turns the reader back on.

Figure 7 Charging Cradles
Single Slot Charging Cradle

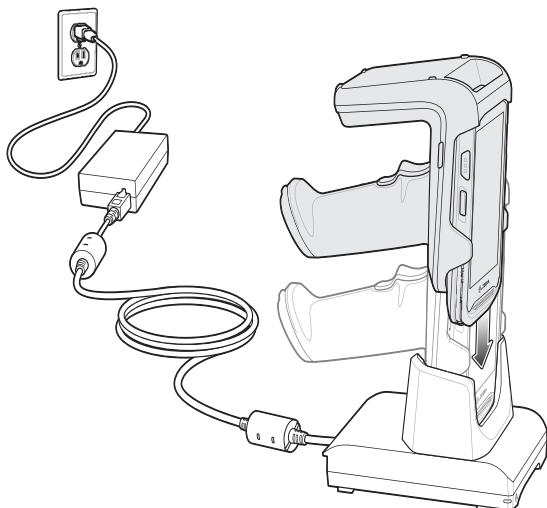

Five Slot Charging Cradle

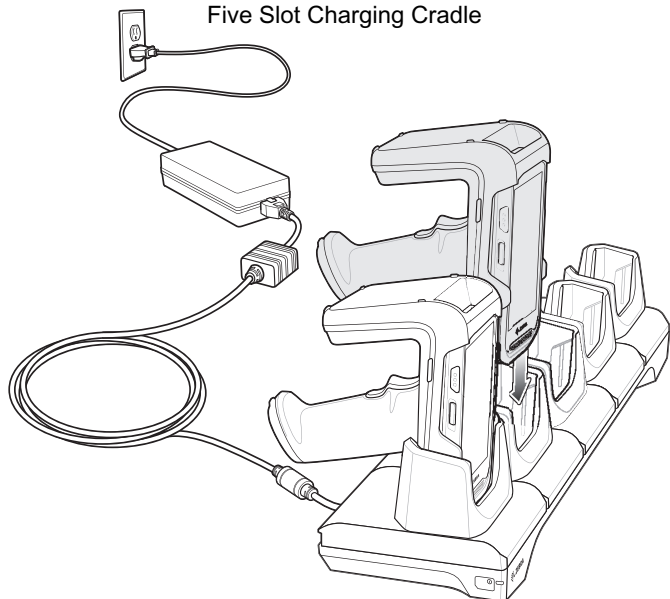

Battery Management

To check the charge status of the main battery, run the appropriate 123RFID Mobile app and select Settings > Battery. To check the battery status on the LEDs, remove the RFD2000 RFID Sled from the cradle. The battery charge status is displayed for 4 seconds.

In the 123RFID Mobile app, battery status indicates that the battery is either charging or discharging and the battery level indicates the battery charge (as a percentage of fully charged). If using the partner application. Refer to the partner application documentation.

Low Battery Notification

By default, the LED battery charge status indication lasts 4 seconds when the RFD2000 RFID Sled is removed from the cradle. The indication is amber when the battery state of charge is in the range of 21-50%. The indication is red when the battery state of charge is in the range 0-20%.

The TC20 mobile device sounds four short beeps when the battery charge status is below 10%.

Battery Optimization

The RFD2000 supports intelligent performance and battery optimizations for your application needs. An API is available to enable this setting. Refer to the RFD2000 RFID Developer Guide (p/n MN-003158-xx) for more information.

Mobile Device

For detailed information regarding the TC20 Mobile Computer, refer to the TC20 User Guide, p/n MN-003020-xx at: www.zebra.com/support.

Zebra RFID Mobile Application for Android

The upgraded Zebra RFID Mobile Application is now called the 123RFID Mobile Application. For detailed information about this app refer to the 123RFID Mobile Application User Guide, p/n MN-003765-xx. This guide describes the app for Android and demonstrates the device's capability and tag operation functionality.

The guide is available at: zebra.com/support.

RFID Manager

Introduction

The Zebra RFID Manager application supports management of the TC20 Android mobile device that is used with the RFD2000. It provides the ability to navigate to all screens whether or not the device is connected to the RFD2000 reader. The **Settings** screens display the application defaults when there is no connection to the reader.



NOTE: Some screens shown in this guide may differ from the actual screens shown on the device. Screens are subject to change with future releases.

Setting Up the RFD2000

To start using the RFD2000 for the first time with the TC20:

- Ensure the battery is installed
- Charge the RFD2000
- Power on the RFD2000
- Attach the RFD2000 to the TC20
- Set the region and power level (using the RFID Manager Application, Demo Application, or the partner application).

Installing RFID Manager for Android

Requirements

- TC20 Zebra mobile computer
- The recommended Android version on the mobile computer is Nougat version 7.1.x.

Installation

To install the software:

1. Connect the Android device to your computer. When the android device is connected to the PC, setup USB as the file transfer mode and the device displays as a storage device on your computer. For information on transferring files using Media Transfer Protocol, refer to the TC20 Mobile Computer Integrator guide at: www.zebra.com/support.
2. Copy the Zebra_RFID_Manager-1.0.7.xx.apk file to the mobile device.
3. Go to **Device Settings > Security** and check **Unknown Sources** to allow installation of applications from unknown sources.
4. Use **File Manager** to locate the Zebra_RFID_Manager-1.0.7.xx.apk file and select it.
5. The installer window displays. Select the Android App installer to begin installation.

Using the RFID Manager for Android

To use this application for RFID operations:

1. Ensure the Zebra RFID Manager application for Android is installed on the TC20 mobile device.
2. Launch the Zebra RFID Manager application for Android on the mobile device.
3. Connect the RFD2000.
4. Before initial use, set the region in which the device is operating. To set the region, open the application and select **Settings > Regulatory**.



NOTE: If the RFID Demo application or partner application is connected to the RFD2000, the RFID Manager application does not display real time information and does not allow you to change settings such as, regulatory, reset reader, reset factory defaults, and firmware updates.


Connection Status

Reader Connection Status

If the TC20 is not connected to the RFD2000:

1. Launch RFID Manager manually.
2. On the **Home** screen under **Connection Status> Reader**, it indicates if the RFD2000 is **Attached** or **Detached** to the TC20.
3. The RFID Manager application attempts to connect with the reader once it is attached. If the reader is Off, a notification window displays. To turn the RFD2000 On, press the trigger for 1.3 seconds and release.
4. If no client is connected, the RFID Manager displays the battery status and regulatory.

Figure 8 Reader Connection Status Screens

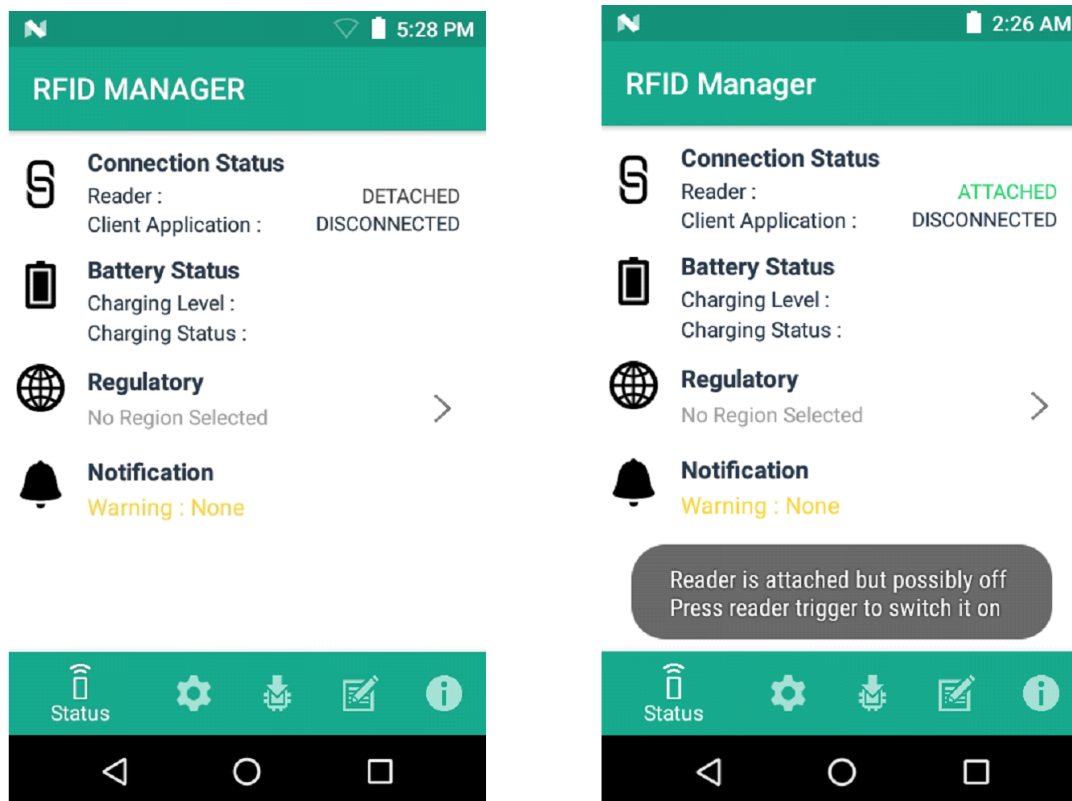


Client Application Status

If the TC20 is connected to the RFD2000:

1. Launch the application manually.
2. On the **Home** Screen under **Connection Status** > **Client Application**, it indicates if the client application is **Connected** or **Disconnected** to the RFD2000.

Figure 9 Client Application Status Screens

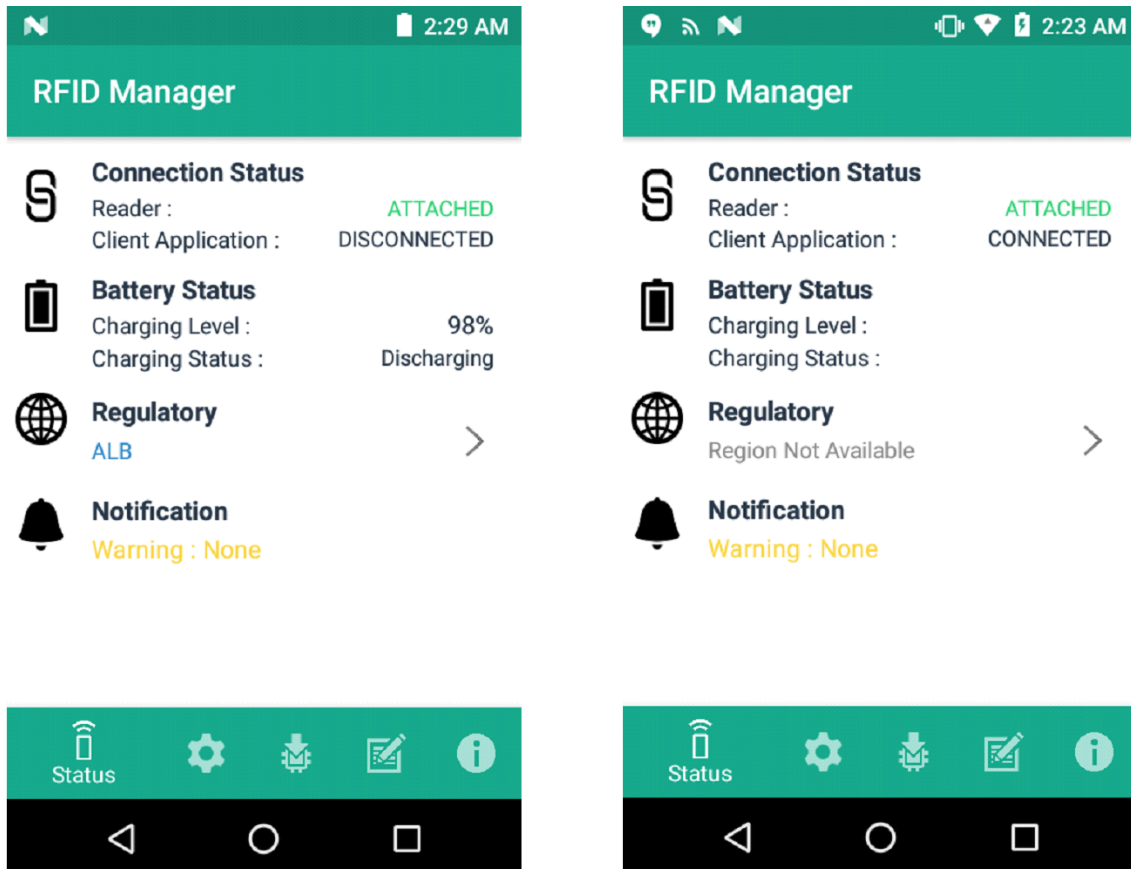

The **Battery Status** contains the battery **Charging Level** percentage and the **Charging Status** (Charging or Discharging). When the **Client Application** is connected, the **Battery Status** fields is blank.

When **Client Application** is connected, the **Regulatory** field is blank.

RFID Regulatory

To set the region, select the **Regulatory** arrow button to open the **Regulatory** screen. Select the **Region** and **Channel Selection** settings and tap the **Apply** button. The **Region** drop-down displays the current region to which the device is set. Choose the correct region before using the device.




NOTE: The **Region** and **Channel Selection** requires setup before the initial use only. However, if a **Reset to Factory Defaults** operation is conducted on the RFD2000 RFID Sled, the operation removes the **Region** and **Channel** configuration and needs to be reset.



NOTE: Select only the country in which you are using the device.

- **Channel Selection** is allowed only for the regions that allow channel setting.
- Supported regions are reported by the RFD2000.
- If the region is not configured on the RFD2000, the Regulatory status will show as NA.
- A customer application can also set the region and configuration pragmatically.

Figure 10 Regulatory Screens

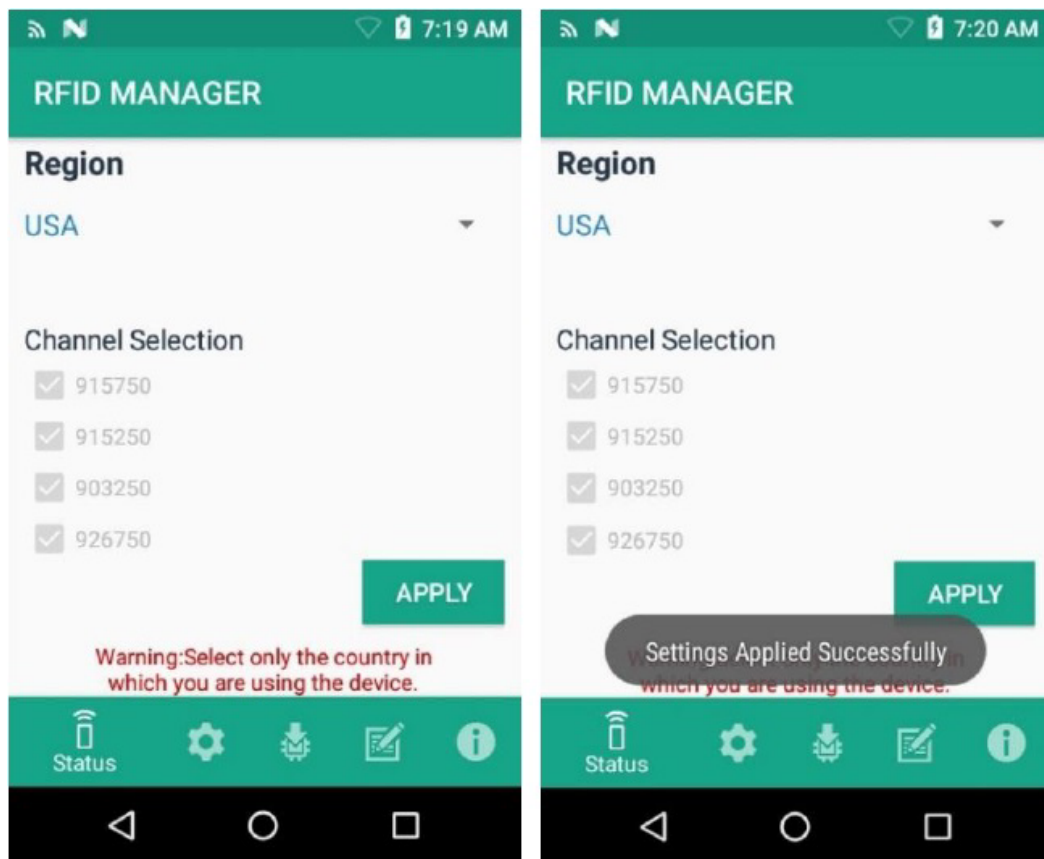


Settings

To display Settings, select the **Settings** icon located on the bottom tool bar.

To edit notification control and reader reset functionality, select the **Settings** control button. Setting options are as follows:


- **Battery Notification** – If enabled, a low battery notification appears with the battery level indication.
- **Battery Beep Notification** – If enabled, a low battery beep notification is heard from the mobile computer.
- **Temperature Notification** – If enabled, a temperature high and critical notification appears with temperature level indications.
- **Reader Attach / Detach notification** – If enabled, notifications are generated when the reader is attached and connected or when reader is detached.
- **Auto Firmware Update** - If enabled, and when the device is attached to the mobile computer, firmware update starts automatically with the firmware stored in the application cache, if there is a version mismatch.

Figure 11 Settings Screen

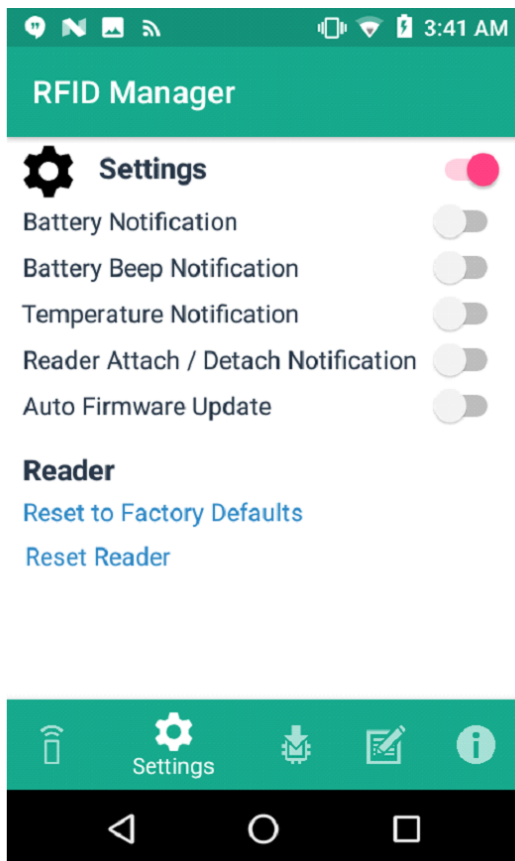


- **Reset to Factory Defaults** - Select **Reset to Factory Defaults** to reset all configuration and region settings to factory default settings. When selected, the reader reboots and a window message displays after successful operation. Reader status confirmation is located under **Home > Status**.

Figure 12 Reset to Factory Defaults Screen

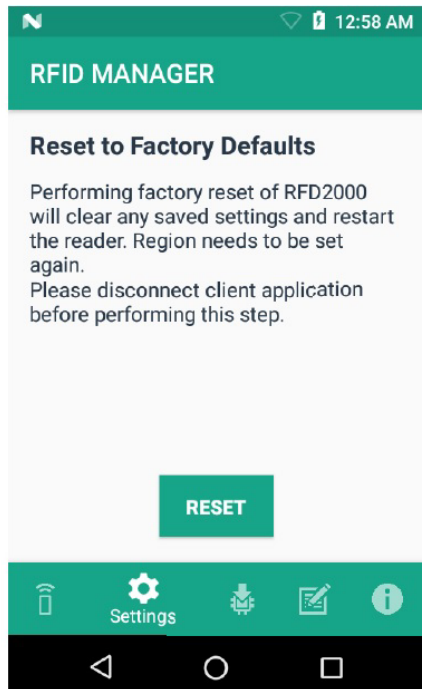

- **Reset Reader** - Select **Reset Reader** to perform a reader restart. When selected, the reader reboots and a window message displays after successful operation. Reader status confirmation is located under **Home > Status**.

Figure 13 Reader Reset Screen

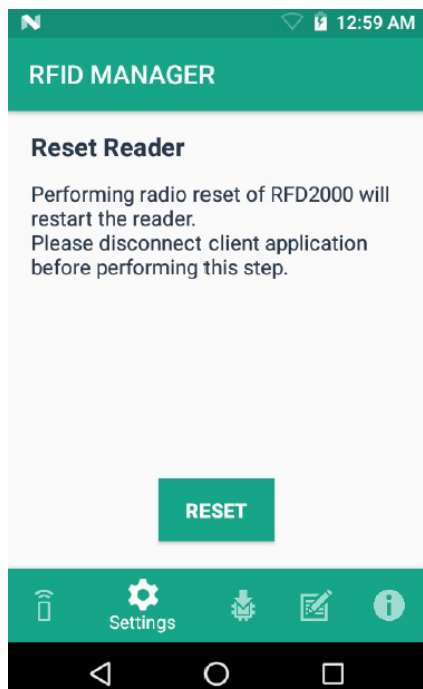

Firmware Update

A product code update, bootloader, and radio update may be performed using the firmware update screen.



NOTE: When the RFID Management application is launched for the first time, a dialog box appears for permission to allow access for internal storage. To perform a firmware update, access must be allowed.




NOTE: More than 20% battery level is required to perform a Firmware Update.

To perform a firmware update:


1. Copy the DAT or SCNPLG file into the TC20 SD card. Refer to the Transferring Files Using Media Transfer Protocol section of TC20 Mobile Computer Integrator guide at: www.zebra.com/support.
2. Browse for the firmware DAT or SCNPLG file, either super combined image or individual files by selecting the folder icon.
3. Select the required DAT or SCNPLG file from **File View** menu. When the file is selected, the application returns to update screen.

Figure 14 Transferring Files for Firmware Update

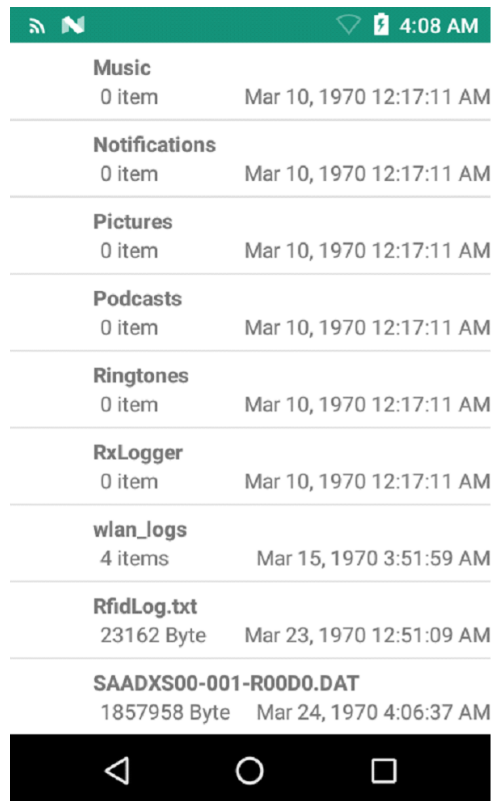


4. Select **UPDATE**.

Figure 15 RFID Manage Firmware Update Screen

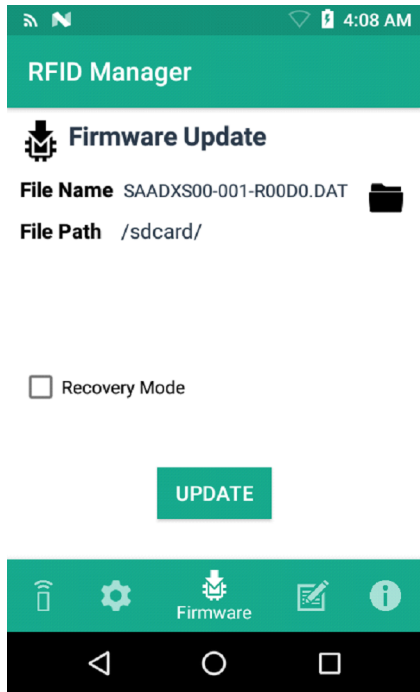


5. The progress is shown with progress dialogues for RFID Radio, bootloader, and RFD2000 when a super combined image is used. A single progress dialogue is shown if an individual image file is used.
6. After a successful update, a window displays a RFD2000 Firmware Installation Complete message.

Figure 16 Firmware Update Progress Screen

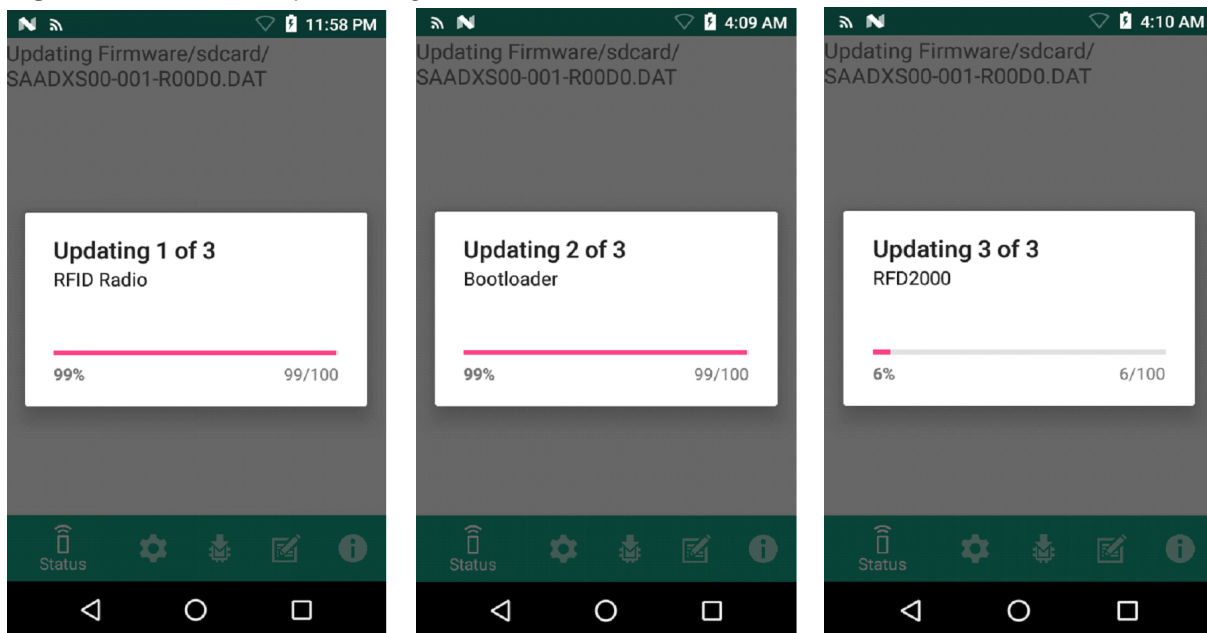

The updated firmware information is displayed on the Information screen.

Figure 17 Information Screen

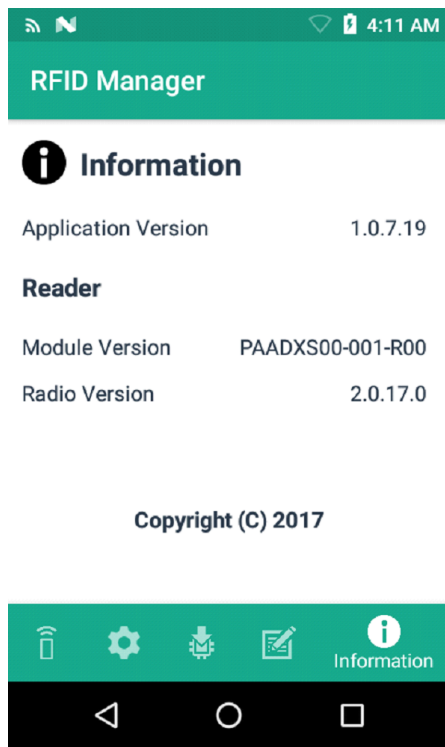

Recovery Mode

Only select the **Recovery Mode** check box (see [Figure 15 on page 28](#)) if the RFD2000 firmware is suspected to be corrupted. Contact the Zebra support team to use the Recovery Mode option.

RFID Manager Log


The following options may be enabled to capture reader logs.

- **Real-time Logs** - Captures real time logs from the RFD2000.
- **Retrieve Buffered Logs** - Captures the buffered logs from the RFD2000.
- **Debug Logs** - Captures RFID Manager debug logs.



NOTE: All three logs can be enabled. If all three logs are disabled, default logs from the application is captured which does not include RFD2000 logs.

Figure 18 RFID Manager Logger Screen

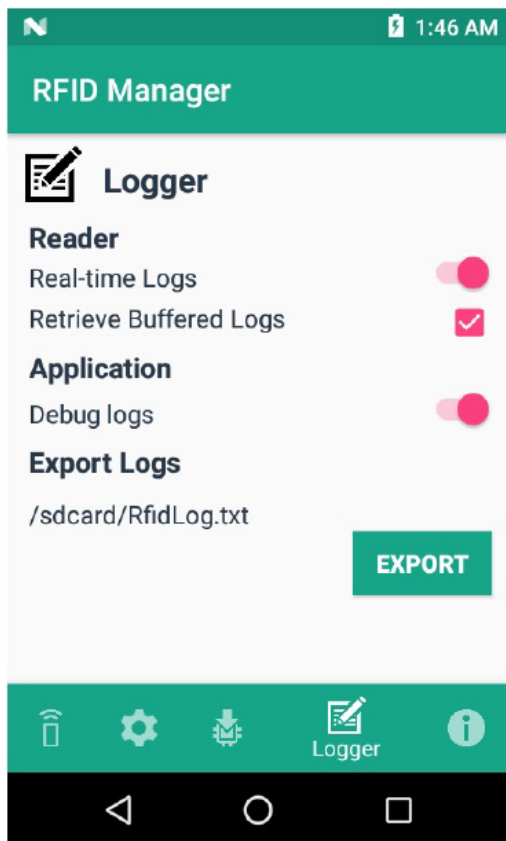

To capture real time logs:

1. Enable **Real-time logs**.
2. Connect and use the RFID application to create logs.
3. Tap on **Export** to retrieve the real time logs. It is not required to disconnect or exit the RFID application.

The Retrieve Buffered Logs option can only be used if the RFID application is disconnected or not running.

The standard RX Logger application can also be used to get RFIDAPI3 and RFIDSERVICE activity.

Exporting Log Files

To export captured log files, select the **Export** button. The log file is saved as RfidLog.txt at a root of the TC20 file system. Retrieve the log file after connecting with PC. RfidLog.txt file is located in the internal storage of the root folder.



NOTE: If the client is connected, RFID Manager allows exporting of debug logs only. Dump logs cannot be retrieved.

Beeper Indications


The RFID Manager application provides beeper indications on TC20 for the following:

- Low battery alert
- Charging start indication.

About

The **About** screen displays the RFID Manager **Application Version**, **Reader Module**, and **Radio Version** as reported by the RFD2000.

Figure 19 About Screen

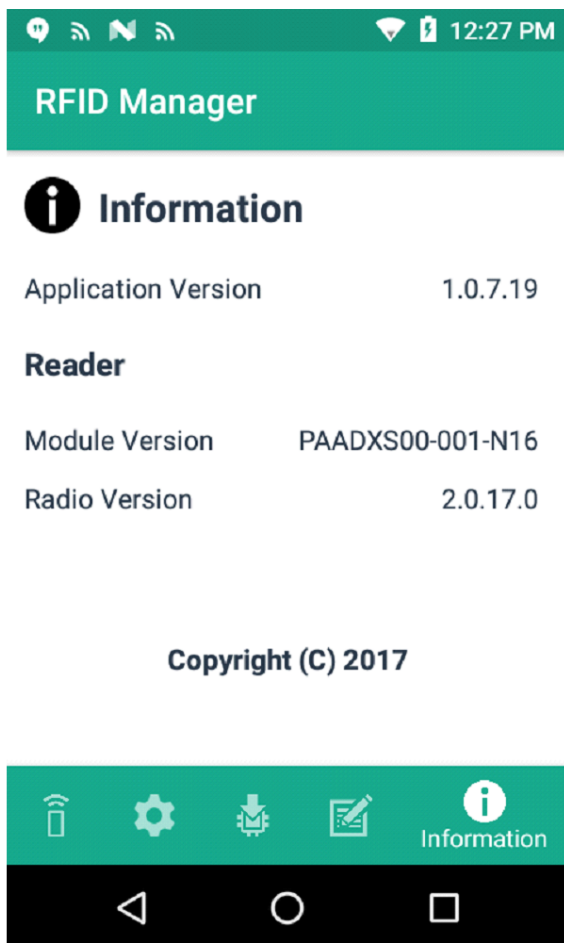

StageNow

StageNow Staging Solution

Zebra Technologies' StageNow allows any size organization to easily stage a handful or thousands of Android devices with a quick scan of a barcode or tap on an NFC tag. StageNow provides an easy Wizard-based tool that allows even complex Staging profiles to become simple to create.

The StageNow Installation Guide provides instructions for installing, uninstalling, and upgrading the StageNow Staging Solution, and includes information on versions, compatibility, and system requirements. Refer to the StageNow Installation Guide and firmware at: www.zebra.com/support.

RFID Manager StageNow Plug-in

Introduction

This chapter provides the steps necessary to configure StageNow to update the RFD2000 firmware and configuration. It also provides the steps to import the RFID CSP plug-in into the StageNow app and generate various profiles for firmware updates and reader configurations.

Requirements



NOTE: The plug-in was tested with StageNow versions 2.9.1.1279 and 2.9.1.1328.

- RFD2000 StageNow plug-in: RFD2000-StageNow-Plugin-v1.1.zip
- StageNow v2.9
- RFD2000 firmware in DAT format (SAADXS00-001-R04D0.DAT) or RFD format (RFD2000-SAADXS00-001-R04.RFD). These files can be downloaded from the Zebra RFD2000 Support site at: www.zebra.com/us/en/support-downloads/software/firmware/rfd2000-firmware.html
- Staging server configured with StageNow
- TC20 with RFD2000 RFID Manager version 1.0.7.22




IMPORTANT: Before using StageNow, prepare the TC20 to stage the RFD2000 by running the RFID Manager at least one time so that it registers the CSP plug-in properly.

Importing RFID Manager CSP Plug-in

To import RFID Manager CSP plug-in into the StageNow application:


- 1. Open the **StageNow** application.
- 2. Select **CSP Library**.

Figure 20 Import RFID Manager - CSP Library Selection

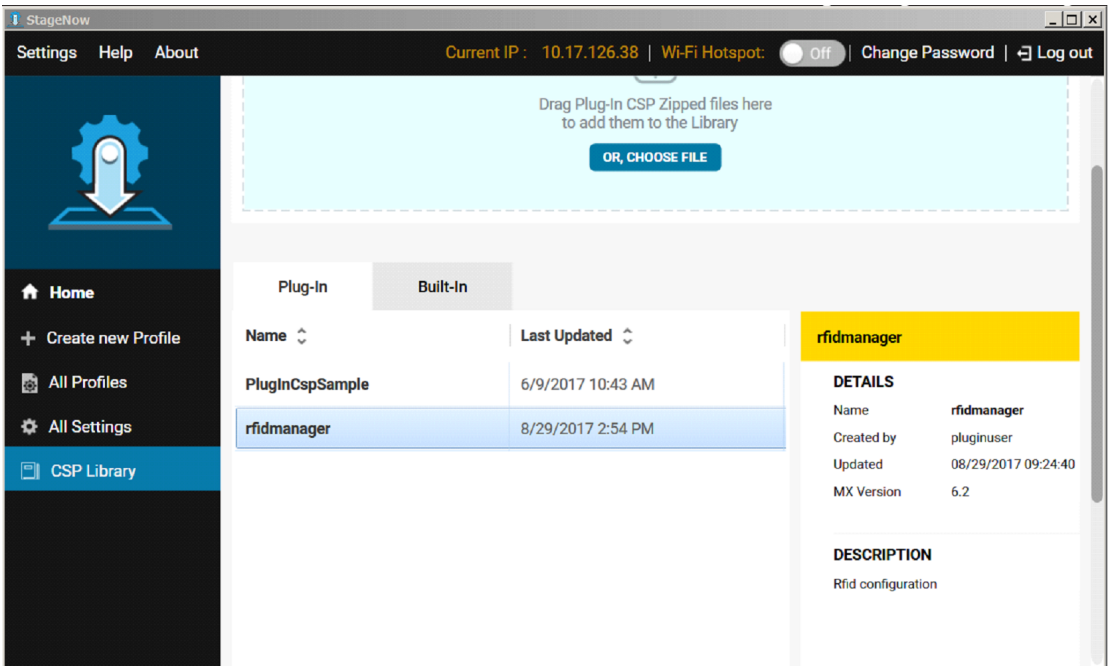


- 3. Select **CHOOSE FILE**.
- 4. Browse the RFD2000-StageNow-Plugin-v1.1.zip.

Figure 21 Plug-in CSP Successful Upload Window

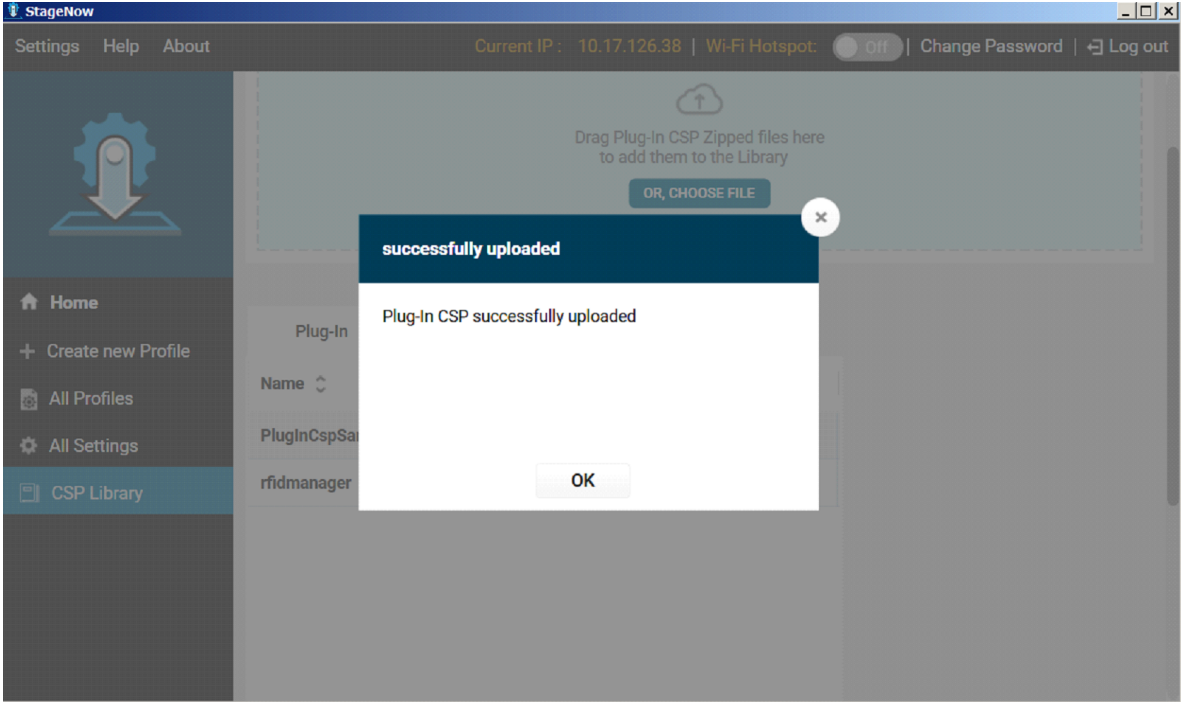

5. When the upload of the .zip file successfully completes the RFID Manager entry displays (Figure 22).

Figure 22 RFID Manager Last Updated Entry

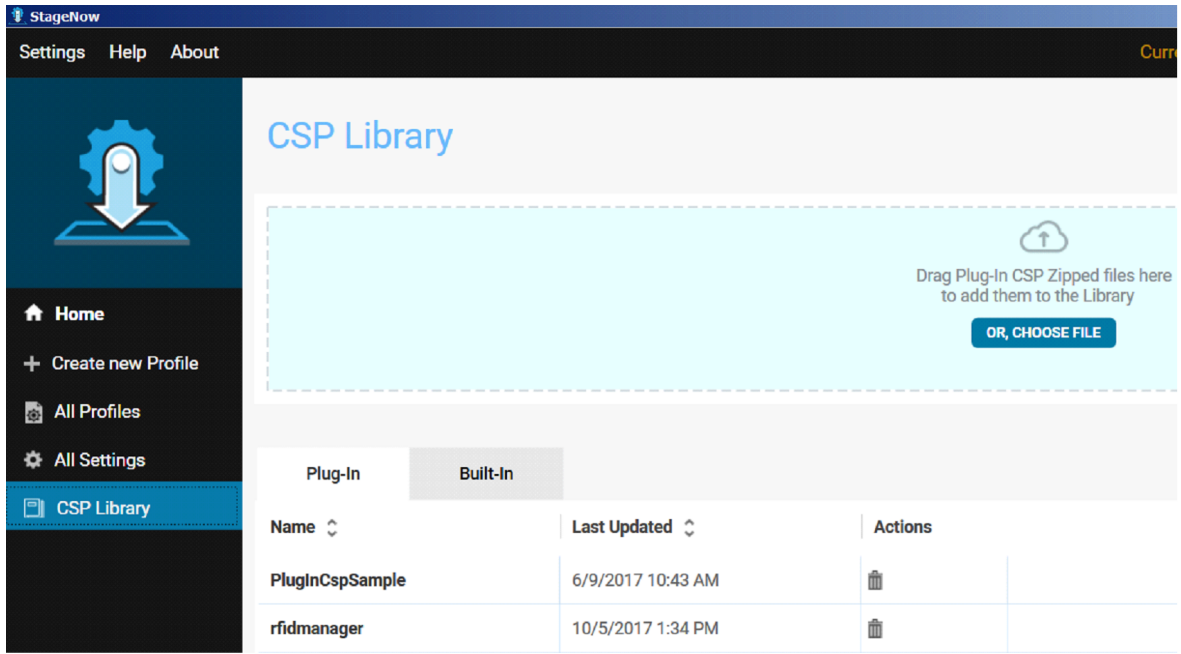


Creating Firmware Update Profile Using StageNow

This section provides the steps to create a new firmware profile. The example that follows creates a profile to copy the SAADX00-001-N10D0.DAT file from the staging server to the device and then update the firmware.

To create a new firmware profile:


1. Ensure both the staging device and the staging server are connected and accessible through the network.
2. Select **Create new Profile** from the side menu.

Figure 23 Create Firmware Update - CSP Library Screen

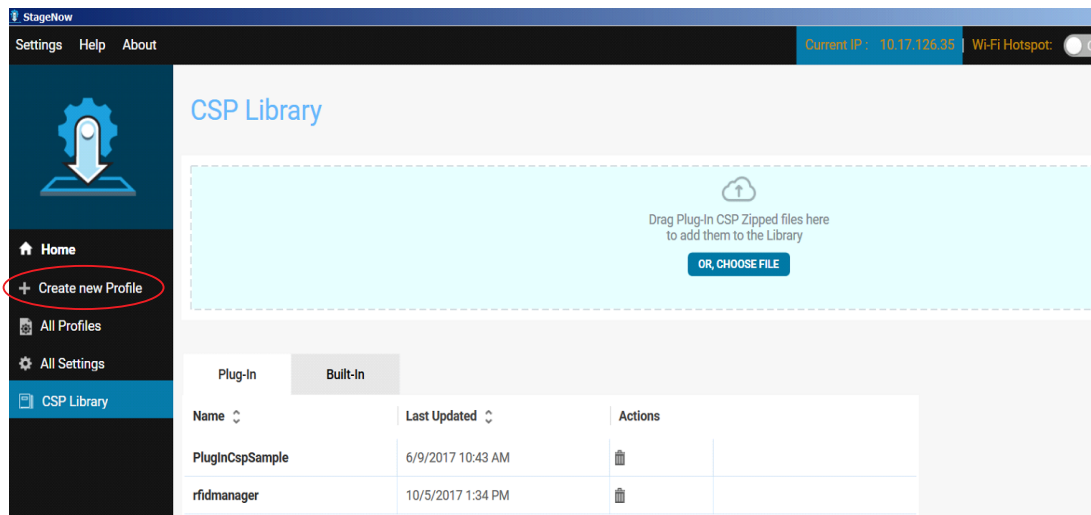

3. From the **Select a Wizard** window, select **XpertMode** then select **Create**.

Figure 24 Wizard Window Selection

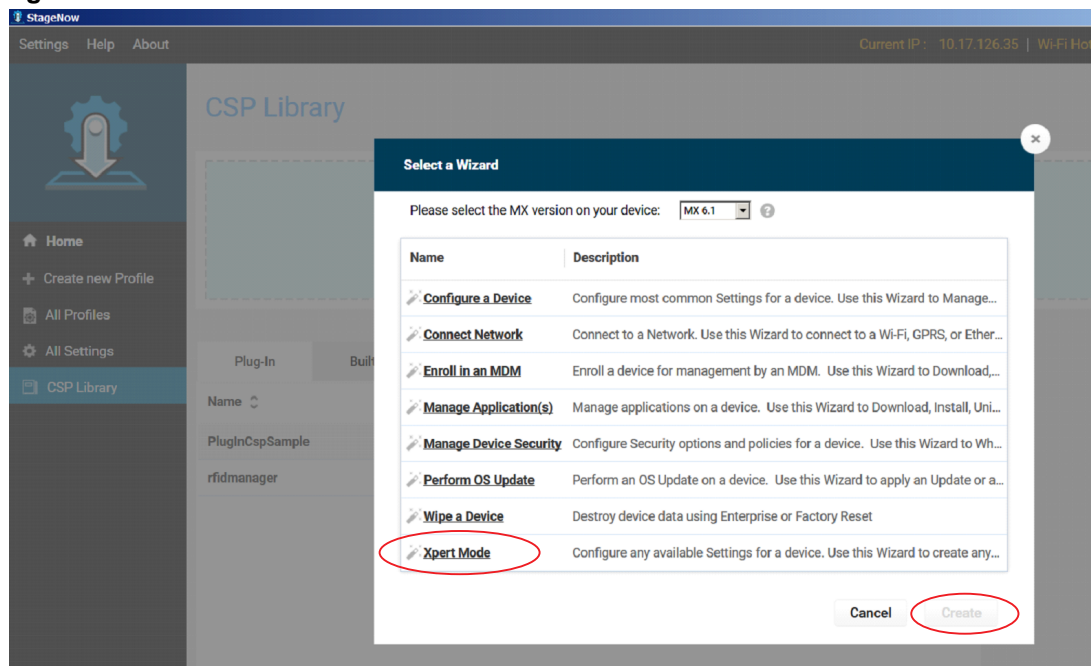

4. Enter a new profile name in the **Enter Profile name:** text box. For example, Rfid-N10-Update as shown in Figure 25. Select **Start**.

Figure 25 Create Firmware Update - Profile Name

StageNow

Settings Help About rent IP : 10.17.126.38 | Wi-Fi Hotspot: Off | Change Password | Log out

Xpert Mode: Rfid-N10-Update Profile Status: Incomplete

Before you start

Configure any available Settings for a device. Use this Wizard to create any combination of Settings or other Wizards in any sequence.

Enter Profile name: Rfid-N10-Update

Start

5. Select **+** next to **FileMgr CSP** and **rfidmanager CSP** and select **Add**.

Figure 26 Create Firmware Update - Add Applications

StageNow

Settings Help About Current IP: 10.17.126.35 | Wi-Fi Hotspot: Off

Xpert Mode: TEST

Before you start
Configure any available Settings for a device. Use this Wizard to create any combination of Settings or other Wizards in any sequence.

ADD / EDIT

SETTINGS		WIZARD	CONFIG	DEPLOY
Name	Description	Add		
PersonalDictionary	Manage personal dictionary	+	1. FileMgr	X
PluginCspSample	RFID Configurations	+	2. rfidmanager	X
PowerKeyMgr	Manage Power Key Configuration	+		
PowerMgr	Perform power management operations	+		
RemoteScannerMgr	Remote Scanner Management	+		
rfidmanager	Rfid configuration	+		
ScanModeMgr	Set Scan Mode	+		
SdCardMgr	Manage SdCard Configuration	+		

Cancel Add

6. Enter the **Target Path and File Name** (i.e., the target path in the device) and the **Source File URI** (i.e., the file path in the staging server) as shown in [Figure 27](#). Select **Continue**.

Figure 27 Create Firmware Update - FileMgr Configuration

StageNow

Settings Help About

XpertConfig: Rfid-N10-Update

StageNow Config Review Publish

1 FileMgr 2 rfidmanager

File Action: ?

Transfer/Copy File Delete File Download and Expand Archive File

Target Access Method: ?

File in the device file system

Target Path and File Name: ?

/data/tmp/public/SAADX00-001-N10D0.DAT

Source Access Method: ?

File on a remote server File in the device file system File embedded in XML

Source File URI: ?

ftp-p://ftp-dev:M0t04sds@localhost:21/SETTINGS/setting


7. Select the **Firmware Update** check box and enter the Firmware **Update FileName**. This is the **Target Path** and **File Name** entered in [Step 6](#) (/data/tmp/public/SAADXS00-001-N10D0.DAT). Select **Continue >**.

Figure 28 Create Firmware Update - RfidManager Configuration

The screenshot shows the StageNow configuration window. At the top, there's a header with 'Settings', 'Help', and 'About' links. The current IP is 10.17.129.133, and the Wi-Fi hotspot is off. There are links for 'Change Password' and 'Log out'. Below the header, the main title is 'XpertConfig: FirmwareConfiguration'. The profile ID is 2, and the profile status is 'Incomplete'. The navigation bar has three tabs: 'StageNow Config', 'Review', and 'Publish'. The 'StageNow Config' tab is active, showing two steps: '1 FileMgr' (completed) and '2 rfidmanager' (active). A green 'ADD / EDIT' button is visible. The 'rfidmanager' section is titled 'Configure the Setting'. It contains a 'Create New Setting' form with the following fields: 'Save Setting for Re-use' (unchecked), 'Firmware Update' (checked), 'Firmware Update FileName' (text input with value '/sdcard/SAADXS00-001-R04D0.DAT'), and 'Rfid Advanced options' (unchecked). There are 'Edit', 'Save', and 'Cancel' buttons. At the bottom, there are '< Back' and 'Continue >' buttons.


8. Review your input and select **Complete Profile >**.

Figure 29 Review and Complete Profile

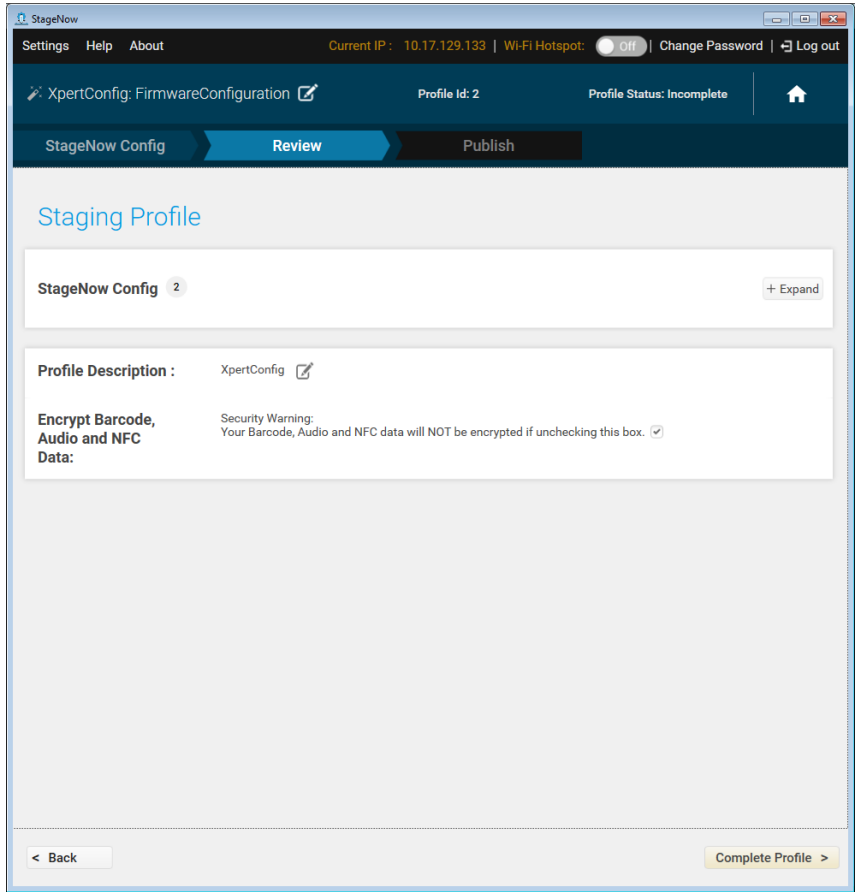


9. Select the required **Barcode Type** check box. Select **Test**.

Figure 30 Create Firmware Update - Barcode Selection

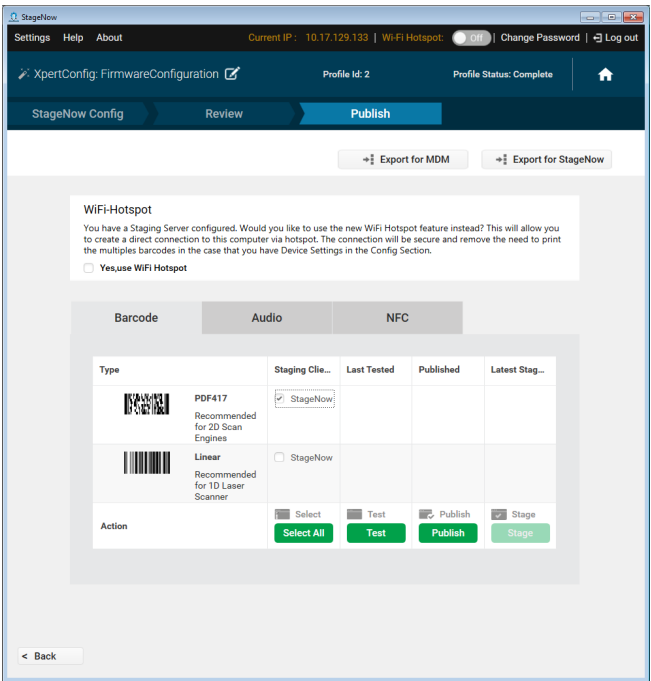

10. Test generates a barcode which can be scanned using the StageNow client on the device to stage the firmware.

Figure 31 Stage Firmware Barcode

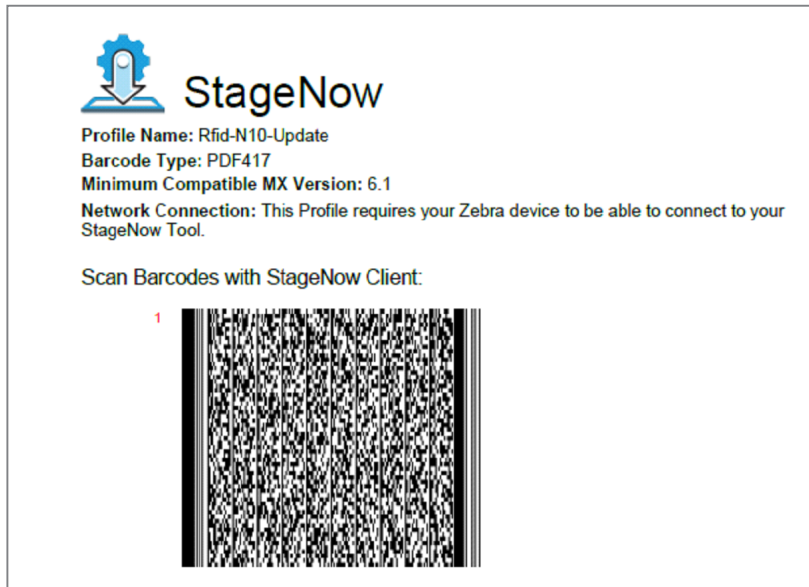


Creating Reader Configurations

This section provides the steps to create a new regulatory configuration profile using advanced options within StageNow.

To create a profile and update the region, channel mask, and channel hopping:

1. Ensure both the device to be staged and the staging server are connected and accessible through the network.
2. Select **Create new Profile** and then select **XpertMode** (see [Figure 23](#) and [Figure 24](#) on [page 36](#)).
3. Select  next to **rfidmanager** and select **Add**.

Figure 32 Adding RFID Configuration

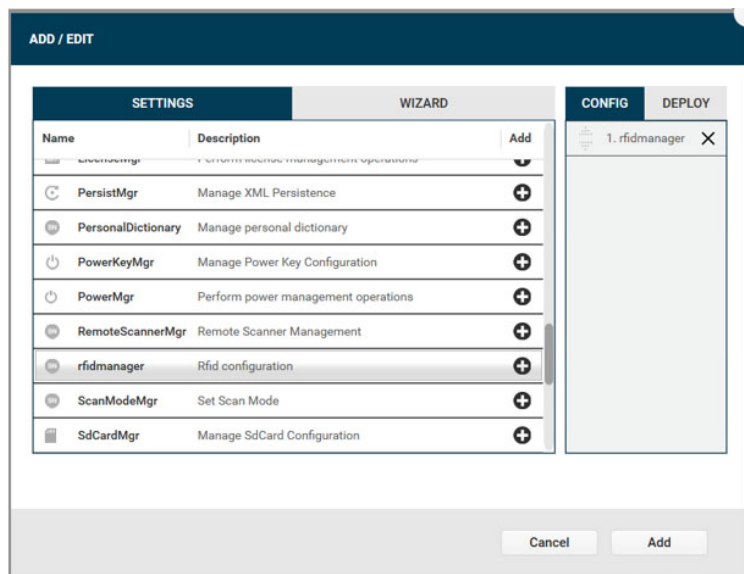

4. Enter the following settings shown in [Figure 33 on page 42](#).
 - Channels Mask
 - Country of Operation (region)
 - Channel Hopping values
 - Antenna information
 - Singulation Control
 - Export Settings

Figure 33 Creating rfidmanager Profile


The screenshot shows the StageNow web interface for creating a new rfidmanager profile. The top navigation bar includes 'Settings', 'Help', and 'About'. The main header shows 'XpertConfig: Configuration', 'Profile id: 6', and 'Profile Status: Incomplete'. Below the header, there are tabs for 'StageNow Config', 'Review', and 'Publish'. The 'StageNow Config' tab is active, showing a progress indicator '1' and an 'ADD / EDIT' button. The 'Create New Setting' form is displayed, with the following fields and options:

- ☐ Save Setting for Re-use
- Firmware Update ☐
- Rfid Advanced options ☒
- Country of Operation
- Enabled Channels Mask
- Enable channel hopping
 -
 -
 -
- RFID Transmit Power Level
- Query Select
- Query Session
- Query Target
- Export settings ☐
- Reset Radio ☐
- Reset Radio to factory default ☐

A 'Continue >' button is located at the bottom right of the form.

Notes:

- a. Profiles can be created independently for all elements (Channels Mask, Country of Operation, Channel Hopping, Transmit Power Level, Query Session, Export Settings).
 - b. Select **Export settings** for reader information (device details, firmware version, logs, device commands, channel info). All details are stored in the SD card, file name export_logs.txt.
 - c. When channel hopping is enabled, multiple channels can be selected. When channel hopping is disabled, only one channel can be selected to apply the region setting.
 - d. When negative values, strings, or out of bound values are applied those values do not appear in applications.
 - e. When the Country of Operation is the United States, Channels Mask values are not required. If supplied they do not appear in applications.
5. Select **Continue >**, review your inputs, Select **Complete Profile**.
 6. Select the required **Barcode Type** check box. Select **Test**.

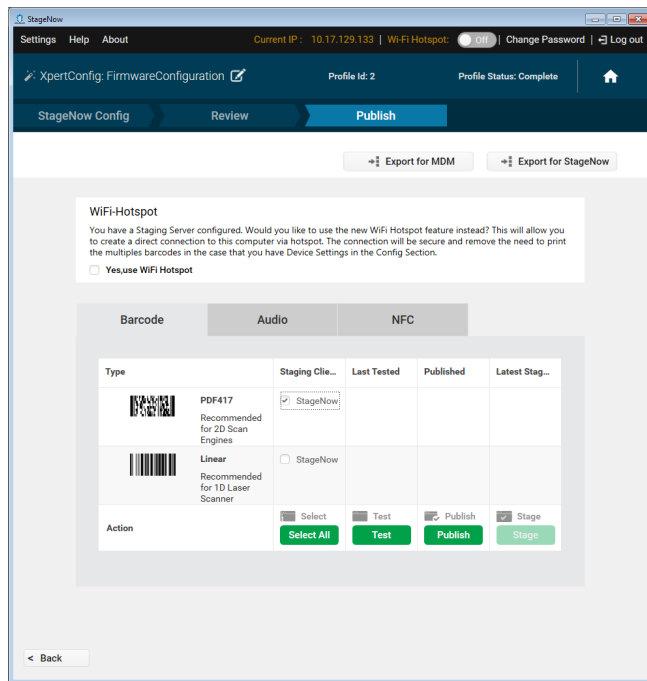Figure 34 Create Regulatory Update - Barcode Selection

7. Test generates the barcode in [Figure 35](#). This barcode can be scanned using the StageNow client on the device to stage the regulatory advance config and antenna information.

Figure 35 Stage Regulatory Advance Config and Antenna Barcode


Creating Reset Radio and Reset to Factory Profiles

This section provides the steps to create reset radio and reset to factory profiles using StageNow.

To create reset radio and reset to factory profiles:


1. Ensure both the device to be staged and the staging server are connected and accessible through the network.
2. Select **Create new Profile** and then select **XpertMode** (see [Figure 23](#) and [Figure 24](#) on [page 36](#)).
3. Select  next to rfidmanager and select **Add**.

Figure 36 Adding RFID Configuration

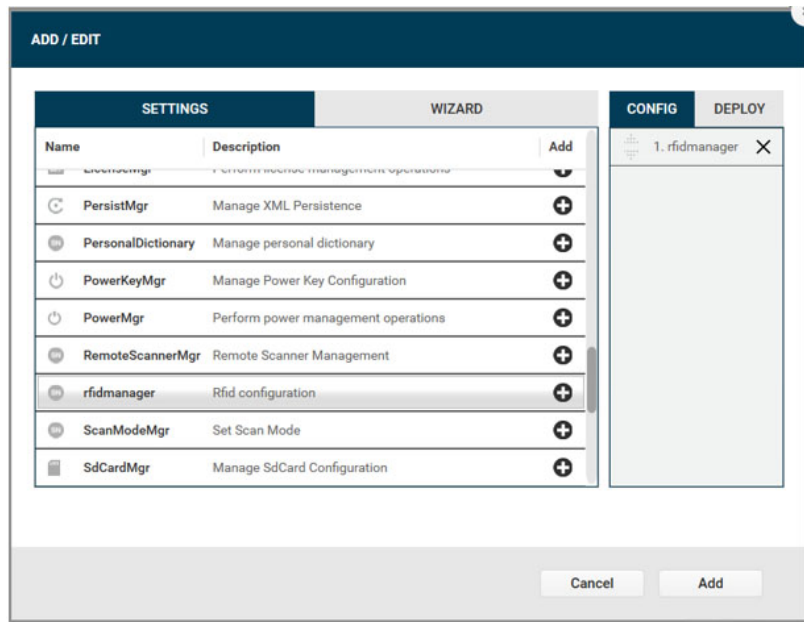

4. Select the **Reset Radio** and Reset Radio to factory default check boxes as shown in Figure 37.


Figure 37 Resetting Radio

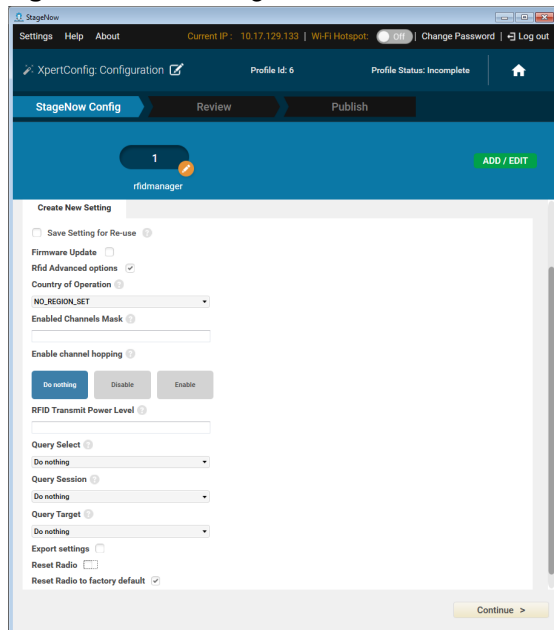

Notes:

- a. Profiles can be created independently for all elements (Reset Radio, Reset Radio to factory default).
 - b. When **Reset Radio** is selected the device battery light blinks and the setting is applied.
 - c. When **Reset Radio to factory default** is selected all the values in both management and demo application reset.
5. Select **Continue >**, review your inputs, Select **Complete Profile**.
 6. Select the required **Barcode Type** check box. Select **Test**.

Figure 38 Create Reset Update - Barcode Selection

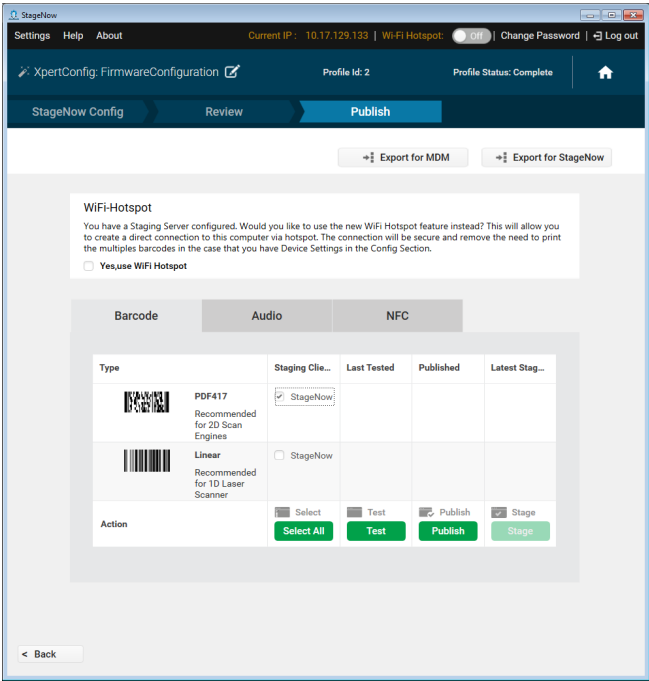

7. Test generates the barcode in Figure 39. This barcode can be scanned using the StageNow client on the device to stage the resets.

Figure 39 Stage Reset



Applying Firmware and Regulatory Updates in One Profile

Both firmware and regulatory updates can be applied using a single profile. Reader firmware is updated first and then the regulatory configuration is applied.

Figure 40 Firmware and Configuration in Single Profile

The screenshot displays the StageNow Config web interface. At the top, there's a navigation bar with 'Settings', 'Help', and 'About'. Below this, a status bar shows 'Current IP: 10.17.129.133', 'Wi-Fi Hotspot: OFF', and 'Change Password | Log out'. The main header includes 'XpertConfig: Configuration' and 'Profile Id: 6'. The 'Profile Status: Incomplete' is also visible. The 'StageNow Config' section has tabs for 'Review' and 'Publish'. A blue bar at the top of the main content area shows '1' and 'rfidmanager', with an 'ADD / EDIT' button. The 'Create New Setting' form is shown with the following fields: 'Save Setting for Re-use' (checkbox), 'Firmware Update' (checkbox), 'Firmware Update FileName' (text field with value '/sdcard/SAADXS00-001-80400.DAT'), 'Rfid Advanced options' (checkbox), 'Country of Operation' (dropdown menu with 'UNITED STATES' selected), 'Enabled Channels Mask' (text field), 'Enable channel hopping' (checkbox), 'Do nothing' (button), 'Disable' (button), 'Enable' (button), 'RFID Transmit Power Level' (text field with value '270'), 'Query Select' (checkbox), 'Query applies to all tags' (checkbox), 'Query Session' (dropdown menu with 'Session S1' selected), 'Query Target' (checkbox), and 'Inventory Target Flag A' (checkbox). A 'Continue >' button is at the bottom right.

Maintenance and Technical Specifications

Introduction

This chapter includes instructions on cleaning and maintenance, and provides troubleshooting solutions for potential problems.

Cleaning



CAUTION: Always wear eye protection.

Read warning label on compressed air and alcohol product before using.

If you have to use any other solution for medical reasons please contact Zebra for more information.



WARNING: Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.

Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or some combination of the following: isopropyl alcohol, bleach/sodium hypochlorite, hydrogen peroxide or mild dish soap.

Harmful Ingredients

The following chemicals are known to damage the plastics on the RFD2000 and Mobile Computers and can not come in contact with the device: ammonia solutions, compounds of amines or ammonia; acetone; ketones; ethers; aromatic and chlorinated hydrocarbons; aqueous or alcoholic alkaline solutions; ethanolamine; toluene; trichloroethylene; benzene; carbolic acid and TB-lysoform.

Cleaning Instructions

Do not apply liquid directly to the RFD2000 and Mobile Computers. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, but gently wipe the unit. Be careful not to let liquid pool around the display window or other places. Allow the unit to air dry before use.



IMPORTANT: Do not clean the device or expose it to rain or moisture when the battery cover is removed. Without the battery cover, the device is not water/dust sealed.

Special Cleaning Notes

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the RFD2000 and Mobile Computers. Do not handle the RFD2000 while wearing vinyl gloves containing phthalates, or before hands are washed to remove contaminant residue after gloves are removed. If products containing any of the harmful ingredients listed above are used prior to handling the RFD2000, such as hand sanitizer that contain ethanolamine, hands must be completely dry before handling the RFD2000 to prevent damage to the plastics.

Materials Required

- Alcohol wipes
- Lens tissue
- Cotton tipped applicators
- Isopropyl alcohol
- Can of compressed air with a tube.

Cleaning Cradle Connectors

To clean the connectors on a cradle:

1. Remove the DC power cable from the cradle.
2. Dip the cotton portion of the cotton tipped applicator in isopropyl alcohol.
3. Rub the cotton portion of the cotton tipped applicator along the pins of the connector. Slowly move the applicator back-and-forth from one side of the connector to the other. Do not let any cotton residue on the connector.
4. Rub all sides of the connector with the cotton tipped applicator.
5. Spray compressed air in the connector area by pointing the tube/nozzle about ½ inch away from the surface.



CAUTION: Do not point nozzle at yourself and others, ensure the nozzle or tube is pointed away from your face.

6. Ensure that there is no lint left by the cotton tipped applicator, remove lint if found.
7. If grease and other dirt can be found on other areas of the cradle, use lint free cloth and alcohol to remove.
8. Allow at least 10 to 30 minutes (depending on ambient temperature and humidity) for the alcohol to air dry before applying power to cradle.

If the temperature is low and humidity is high, longer drying time is required. Warm temperature and dry humidity requires less drying time.

Cleaning Frequency

The cleaning frequency is up to the customer's discretion due to the varied environments in which the mobile devices are used. They may be cleaned as frequently as required. However when used in dirty environments it may be advisable to periodically clean the scanner exit window to ensure optimum scanning performance.

Maintenance

For trouble-free service, observe the tips that follow when using the device.

RFD2000

- Although the device is water and dust resistant, do not expose it to rain or moisture for an extended period of time. In general, treat the device as a pocket calculator or other small electronic instrument.
- Do not clean the device or expose it to rain or moisture when the battery is removed. Without the battery, the device is not water/dust sealed.
- Do not drop the device or subject it to strong impact.
- Protect the device from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store or use the device in any location that is extremely dusty, damp, or wet.
- Do not use window cleaning solution. Use a soft cloth dampened with a 50/50 solution of isopropyl alcohol and water. See [Cleaning on page 47](#).
- Do not allow the solution to form a pool of liquid anywhere on the screen or device.
- Do not use a large amount of solution to cause the device to remain wet.

Battery



WARNING: Do not store the device with the battery installed. Doing so long term may cause irreversible harm to the battery. Always store the battery removed from the device. If a battery is installed during long term storage, it may discharge to point at which it cannot be recovered.

Even when stored separately from device it is important to follow industry standard guidelines. When batteries are stored over a year, battery cell manufacturers advise that some irreversible deterioration in overall battery quality may occur. To minimize this loss, they recommend storing batteries half charged in a dry, cool place between 41° and 77°F (5° and 25°C), the cooler the better. Charge batteries to half capacity at least once a year. In order to charge a battery to half capacity, take a fully discharged battery and charge it for two hours. If an electrolyte leakage is observed, avoid any contact with the affected area and properly dispose of the battery.

Technical Specifications

Table 6 RFD2000 Technical Specifications

Item	Description
Physical Characteristics	
Dimensions	Height: 14.9 cm (5.9 in.) Width: 7.9 cm (3.1 in.) Length: 13.3 cm (5.2 in.)
Weight	~10.9 oz./~310 grams (sled with battery)
Power	PowerPrecision+ Li-Ion 3160 mAh battery
Frequency Range/ RF Output	US: 902-928 MHz; 0 - 30 dBm (EIRP) EU: 865-868 MHz; 0 - 30 dBm (EIRP) Japan: 916-921 MHz (w LBT); 0 - 30 dBm (EIRP)
User Environment	
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Charging Temperature	0°C to 40°C (32°F to 104°F)
Relative Humidity	Operating: 5 to 85% non-condensing
Sealing	IP52
Drop Specification	4 ft onto concrete
Tumble Specification	500 1/2 meter tumble cycles (1000 drops) at 20°C
Electrostatic Discharge (ESD)	± 15 kV air discharge, ± 8 kV direct discharge, ± 8 kV indirect discharge

Figure 41 1-Slot Cradle Technical Specifications

Item	Description
Dimensions	Height: 9.0 cm (3.54 in.) Width: 9.8 cm (3.86 in.) Length: 13.3 cm (5.24 in.)
Weight	0.205 kg / 0.45 lbs
Input Voltage	12 VDC
Power Consumption	up to 15 watts
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Charging Temperature	0°C to 40°C (32°F to 104°F)
Relative Humidity	Operating: 5 to 85% non-condensing
Drop Specification	76.2 cm (30 in.) drop onto vinyl tile adhered to concrete at 20°C
Electrostatic Discharge (ESD)	± 15 kV air discharge, ± 8 kV direct discharge, ± 8 kV indirect discharge

Figure 42 5-Slot Cradle Technical Specifications

Item	Description
Dimensions	Height: 10.9 cm (4.29 in.) Width: 48.9 cm (19.25 in.) Length: 13.3 cm (5.24 in.)
Weight	1.884 kg / 4.15 lbs
Input Voltage	12V DC @ 9Amp
Power Consumption	75 W max draw when all slots are charging
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Charging Temperature	0°C to 40°C (32°F to 104°F)
Relative Humidity	Operating: 5 to 85% non-condensing
Drop Specification	76.2 cm (30 in.) drop onto vinyl tile adhered to concrete at 20°C
Electrostatic Discharge (ESD)	± 15 kV air discharge, ± 8 kV direct discharge, ± 8 kV indirect discharge

Troubleshooting

Troubleshooting



NOTE: The troubleshooting information supplied in [Table 7](#) is relevant with the RFD2000 RFID Sled default LED configuration.

Table 7 Troubleshooting the RFD2000 RFID Sled with Default LED

Symptom	Possible Cause	Action
RFID application does not run in the TC20 mobile device.	The RFD2000 RFID Manager APK is not installed.	Install the RFID Manager APK first, before installing the RFID application in the TC20 mobile device. If the TC20 terminal undergoes an enterprise reset, the RFID Manager APK must be re-installed.
RFID Sled does not read tags.	The RF region configuration is not set.	Use the RFID Manager application to set the regulatory region or country operation per the application instructions.
RFID Sled is attached to TC20 mobile device and it is not responsive to a RFID application, even after the trigger is pressed.	Battery is too low and not able to power the RFID Sled.	Press the trigger for a couple of seconds to power the RFID Sled On. The RFID Sled LED blinks amber when it is turned On. (By default, pressing the trigger turns On the RFID Sled if it is in Off mode. However, the RFID Sled can be disabled in which case this step is not necessary.) Place the RFID Sled in the charging cradle. The RFID Sled blinks amber LEDs indicating charging commenced. See LED Indications on page 13 .
	Zebra TC20 mobile computer is not properly inserted in the RFID Sled.	Remove and reinsert the Zebra mobile device securely in the RFID Sled. See Attaching Mobile Computer to RFID Sled on page 16 .
	Damaged battery.	If the RFD2000 RFID Sled LED does not blink amber after sitting on charging cradle for a while, request service to replace battery. See Service Information on page 9 .

Table 7 Troubleshooting the RFD2000 RFID Sled with Default LED (Continued)

Symptom	Possible Cause	Action
RFID Sled not responsive to application and RFD2000 RFID Sled red LED is On or blinks.	Recovery mode is enabled.	If recovery mode is entered unintentionally, wait for approximately 1.5 minutes for the RFID Sled to exit recovery mode on its own. See Recovery Mode on page 13 .
RFID Sled is responsive but cannot read tags.	Battery is critically low.	Place the RFID Sled in the charging cradle. The RFID Sled LED blinks amber. The RFID Sled can be used when its LED turns on momentarily amber or green upon removal from charging cradle.
The RFD2000 RFID Sled LED blinks fast amber when in the cradle.	Charging error.	Restart charging by removing the RFID Sled from the cradle and inserting it back in the cradle. If issue persists, request service to replace battery. See Service Information on page 9 .
RFID Sled red LED momentarily turns On when the RFID Sled is removed from cradle.	This is an indication that the RFID Sled is removed too early from cradle because the battery level is still low.	Place the RFID Sled back in charger until the battery is sufficiently charged.
RFID Sled LED blinks red, or LED blinks red alternating with green or amber while in use (not while charging).	Battery end of life indication.	Request service to replace battery. See Service Information on page 9 .
Zebra TC20 Mobile Computer battery is not charging.	Charging cradle was unplugged from AC power.	Ensure the charging cradle is receiving power.
	Zebra TC20 Mobile Computer is not fully seated in the cradle.	Remove and re-insert the Zebra TC20 Mobile Computer into the cradle, ensuring it is firmly seated in the charging cradle.

Troubleshooting RFD2000 RFID Sled with LED Mode 2



NOTE: In addition to the troubleshooting information supplied in [Table 7](#), [Table 8](#) is relevant when the RFD2000 RFID Sled is configured to indicate battery charge status when pressing the trigger. This is LED Mode 2 as described in [Table 5 on page 12](#).

Table 8 Troubleshooting RFD2000 RFID Sled with LED Mode 2

Symptom	Possible Cause	Action
The RFID Sled LED does not blink when the trigger is pressed.	Battery is too low and not able to power the RFID Sled.	Press the trigger for a couple of seconds to power the RFID Sled On. The RFID Sled LED blinks amber when it is turned On. (By default, pressing the trigger turns the RFID Sled On if it is in Off mode. However, the RFID Sled can be disabled, in which case this step is not necessary.) Place the RFID Sled in the charging cradle. The RFID Sled blinks amber LEDs indicating charging commenced. See LED Indications on page 13
	Damaged battery.	If the RFD2000 RFID Sled LED does not blink amber after sitting on charging cradle for a while, request service to replace battery. See Service Information on page 9 .
RFID Sled is attached to TC20 mobile device and it is not responsive to a RFID application, even after the trigger is pressed.	Battery is too low and not able to power the RFID Sled.	Press the trigger for a couple of seconds to power the RFID Sled On. The RFID Sled LED blinks amber when it is turned On. (By default, pressing the trigger turns On the RFID Sled if it is in Off mode. However, the RFID Sled can be disabled in which case this step is not necessary.) Place the RFID Sled in the charging cradle. The RFID Sled blinks amber LEDs indicating charging commenced. See LED Indications on page 13 .
	Damaged battery.	If the RFD2000 RFID Sled LED does not blink amber after sitting on charging cradle for a while, request service to replace battery. See Service Information on page 9 .
	Zebra TC20 mobile computer is not properly inserted in the RFID Sled.	Remove and reinsert the Zebra mobile device securely in the RFID Sled. See Attaching Mobile Computer to RFID Sled on page 16 .
	TC20 Mobile computer cannot connect with RFID Sled.	If a RFID Sled trigger press turns the RFID Sled LED green or amber, the Sled is functional. Try a different TC20 Mobile Computer with the same RFID Sled, or reboot the TC20 Mobile Computer and retry to connect to the RFID Sled.
RFID Sled is responsive but cannot read tags.	Battery is critically low.	If pressing the RFID Sled trigger turns on the red LED, place the RFID Sled in the charging cradle. The RFID Sled LED blinks amber. The RFID Sled can be used when its LED turns on momentarily amber or green upon removal from charging cradle.

Data Dictionary

Introduction

This chapter includes attributes numbers (configuration parameters, monitored data, and born on information about the device) and the management of the various attribute domains. This information applies to both barcode scanners and OEM engines.

RFD2000 Attributes

Attribute Definitions

- Attribute Number - Contains the attribute number. All attributes numbers are unique.
- Attribute Name - Defines the name of the attribute.
- Descriptions - Contains a description of the attribute.
- Type - Defined in [Table 9](#).

Table 9 Attribute Types

Type	Definition
B	Byte - unsigned char
C	Char - single byte
F	Bit flags
W	WORD - Short unsigned integer (16 bits)
I	SWORD - Short signed integer (16 bits)
D	DWORD - Long unsigned integer (32 bits)
L	SDWORD - Long signed integer (32 bits)
A	Array
S	String
X	Action
N	Indication of last parameter

- Size - Provides the size of the attribute.
- Values - The valid range of values reported/accepted.
- User Mode Access - Defines if the attribute is read only or read/write.

Inventory Command Configurations

Table 10 Inventory Command Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1501	ATT_RFID_TAG_REPORT_FILTER_SEEN_TIMESTAMP	Enable or Disable first seen timestamp field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	1	RW
1502	ATT_RFID_TAG_REPORT_LAST_SEEN_TIMESTAMP	Enable or Disable last seen timestamp field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1503	ATT_RFID_TAG_REPORT_PROTOCOL_CONTROL	Enable or Disable Protocol Control field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1504	ATT_RFID_TAG_REPORT_RSSI	Enable or Disable RSSI field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	1	RW
1505	ATT_RFID_TAG_REPORT_PHASE	Enable or Disable phase difference field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1506	ATT_RFID_TAG_REPORT_CHANNEL_INDEX	Enable or Disable channel index field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1507	ATT_RFID_TAG_REPORT_TAG_SEEN_COUNT	Enable or Disable tag seen count field for inventoried tags reported over ZETI interface	'B'	1	0 -1(0:Disable 1:Enable)	1	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1509 (US Only)	ATT_RFID_ANT_IP_INDEX	Index of radio link profile to be used	'B'	1	0 - 35(0: DivideRatio: 8, BDR: 60000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 1: DivideRatio: 8, BDR: 640000, M: FM0, FLM: PR_ASK, PIE: 1500, MinTari: 6250, MaxTari: 6250, StepTari: 0, 2: DivideRatio: 8, BDR: 640000, M: FM0, FLM: PR_ASK, PIE: 2000, MinTari: 6250, MaxTari: 6250, StepTari: 0, 3: DivideRatio: 8, BDR: 120000, M: M2, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 4: DivideRatio: 8, BDR: 120000, M: M2, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 5: DivideRatio: 8, BDR: 120000, M: M2, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 6: DivideRatio: 8, BDR: 120000, M: M2, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 7: DivideRatio: 8, BDR: 128000, M: M2, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 8: DivideRatio: 8, BDR: 128000, M: M2, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 9: DivideRatio: 8, BDR: 128000, M: M2, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 10: DivideRatio: 8, BDR: 128000, M: M2, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 11: DivideRatio: 8, BDR: 160000, M: M2, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 12: DivideRatio: 8, BDR: 160000, M: M2, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 13: DivideRatio: 8, BDR: 60000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 14: DivideRatio: 8, BDR: 60000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 15: DivideRatio: 8, BDR: 60000, M: M4, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 16: DivideRatio: 8, BDR: 60000, M: M4, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100,	0	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1509 (continued)	ATT_RFID_ANT_IP_INDEX	Index of radio link profile to be used	'B'	1	17: DivideRatio: 8, BDR: 64000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 18: DivideRatio: 8, BDR: 64000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 19: DivideRatio: 8, BDR: 64000, M: M4, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 20: DivideRatio: 8, BDR: 64000, M: M4, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 21: DivideRatio: 8, BDR: 80000, M: M4, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 22: DivideRatio: 8, BDR: 80000, M: M4, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 23: Automatic Profile, 24: DivideRatio: 8, BDR: 320000, M: FM0, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 18800, StepTari: 2100 25: DivideRatio: 8, BDR: 320000, M: FM0, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 26: DivideRatio: 8, BDR: 30000, M: M8, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 27: DivideRatio: 8, BDR: 30000, M: M8, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 28: DivideRatio: 8, BDR: 30000, M: M8, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 29: DivideRatio: 8, BDR: 30000, M: M8, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 30: DivideRatio: 8, BDR: 32000, M: M8, FLM: PR_ASK, PIE: 1500, MinTari: 25000, MaxTari: 25000, StepTari: 0, 31: DivideRatio: 8, BDR: 32000, M: M8, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 23000, StepTari: 2100, 32: DivideRatio: 8, BDR: 32000, M: M8, FLM: PR_ASK, PIE: 2000, MinTari: 25000, MaxTari: 25000, StepTari: 0, 33: DivideRatio: 8, BDR: 32000, M: M8, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 23000, StepTari: 2100,	0	RW

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1509 (continued)	ATT_RFID_ANT_IP_INDEX	Index of radio link profile to be used	'B'	1	34: DivideRatio: 8, BDR: 40000, M: M8, FLM: PR_ASK, PIE: 1500, MinTari: 12500, MaxTari: 18800, StepTari: 2100, 35: DivideRatio: 8, BDR: 40000, M: M8, FLM: PR_ASK, PIE: 2000, MinTari: 12500, MaxTari: 18800, StepTari: 2100,)	0	RW
1510	ATT_RFID_ANT_SELECT	Enable or Disable Air Interface level tag selection (pre-filter)	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
WORD PARAMS							
1623	ATT_RFID_ANTENNA_POWER	Power level for RF transmission in 10s of dBm	'W'	2	0 - 300	270dBm	RW
DWORD PARAMS							
1643	ATT_RFID_ANTENNA_TARI	Tari value, in nano-seconds	'D'	4	0 - 4294967295(One of the following values: 6250 12500 14600 16700 18800 20900 23000 25000)	0	RW

Tag Select Configurations

Table 11 Tag Select Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1511	ATT_RFID_TAG_SELECT_1_ENABLE	Enable or disable select filter 1	'B'	1	0 - 1(0:Disable 1:Enable)	0	RW
1512	ATT_RFID_TAG_SELECT_1_TARGET	Target for select filter 1	'B'	1	0 - 4(0: Session S0 1: Session S1 2: Session S2 3: Session S3 4: Select Flag)	2	RW
1513	ATT_RFID_TAG_SELECT_1_ACTION	Action for select filter 1	'B'	1	0 - 7 (See section action value, Table 14)	0	RW
1514	ATT_RFID_TAG_SELECT_1_MEMBANK	Memory bank for select filter 1	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	1	RW
1515	ATT_RFID_TAG_SELECT_1_TRUNCATE	Enable or disable truncated reply for select filter 1	'B'	1	0 -1(0:Disable 1:Enable)	0	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1516	ATT_RFID_TAG_SELECT_1_LENGTH	Number of bits from start of match pattern to be used for select mask for select filter 1	'B'	1	0 - 255	16	RW
1517	ATT_RFID_TAG_SELECT_2_ENABLE	Enable or disable select filter 2	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1518	ATT_RFID_TAG_SELECT_2_TARGET	Target for select filter 2	'B'	1	0 - 4(0: Session S0 1: Session S1 2: Session S2 3: Session S3 4: Select Flag)	2	RW
1519	ATT_RFID_TAG_SELECT_2_ACTION	Action for select filter 2	'B'	1	0 - 7 (See section Action Value, Table 14)	0	RW
1536	ATT_RFID_TAG_SELECT_2_MEMBANK	Memory bank for select filter 2	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	1	RW
1537	ATT_RFID_TAG_SELECT_2_TRUNCATE	Enable or disable truncated reply for select filter 2	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1538	ATT_RFID_TAG_SELECT_2_LENGTH	Number of bits from start of match pattern to be used for select mask for select filter 2	'B'	1	0 - 255	16	RW
1539	ATT_RFID_TAG_SELECT_3_ENABLE	Enable or disable select filter 3	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1540	ATT_RFID_TAG_SELECT_3_TARGET	Target for select filter 3	'B'	1	0 - 4(0: Session S0 1: Session S1 2: Session S2 3: Session S3 4: Select Flag)	2	RW
1541	ATT_RFID_TAG_SELECT_3_ACTION	Action for select filter 3	'B'	1	0 - 7 (See section Action Value, Table 14)	0	RW
1542	ATT_RFID_TAG_SELECT_3_MEMBANK	Memory bank for select filter 3	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	1	RW
1543	ATT_RFID_TAG_SELECT_3_TRUNCATE	Enable or disable truncated reply for select filter 3	'B'	1	0 -1(0:Disable 1:Enable)	0	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1544	ATT_RFID_TAG_SELECT_3_LENGTH	Number of bits from start of match pattern to be used for select mask for select filter 3	'B'	1	0 - 255	16	RW
1545	ATT_RFID_TAG_SELECT_4_ENABLE	Enable or disable select filter 4	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1546	ATT_RFID_TAG_SELECT_4_TARGET	Target for select filter 4	'B'	1	0 - 4(0: Session S0 1: Session S1 2: Session S2 3: Session S3 4: Select Flag)	2	RW
1547	ATT_RFID_TAG_SELECT_4_ACTION	Action for select filter 4	'B'	1	0 - 7 (See section Action Value, Table 14)	0	RW
1548	ATT_RFID_TAG_SELECT_4_MEMBANK	Memory bank for select filter 4	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	0	RW
1549	ATT_RFID_TAG_SELECT_4_TRUNCATE	Enable or disable truncated reply for select filter 4	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1550	ATT_RFID_TAG_SELECT_4_LENGTH	Number of bits from start of match pattern to be used for select mask for select filter 4	'B'	1	0 - 255	16	RW
WORD PARAMS							
1624	ATT_RFID_TAG_SELECT_1_POINTER	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 - 512	16	RW
1625	ATT_RFID_TAG_SELECT_2_POINTER	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 - 512	16	RW
1626	ATT_RFID_TAG_SELECT_3_POINTER	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 - 512	16	RW
1627	ATT_RFID_TAG_SELECT_4_POINTER	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 - 512	16	RW

[illegible]

Tag Query Configurations

Table 12 Tag Query Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1551	ATT_RFID_TAG_QUERY_SELECT	State of tag's SL flag to filter tags for which query is applicable	'B'	1	0 - 3(0: Query applies to all tags 1: 2: Query applies to tag with SL De-Asserted 3: Query applies to tag with SL Asserted)	0	RW
1552	ATT_RFID_TAG_QUERY_SESSION	Session on which query is applicable	'B'	1	10 - 3(0: Session S0 1: Session S1 2: Session S2 3: Session S3)	1	RW
1553	ATT_RFID_TAG_QUERY_TARGET	Tag's target inventory flag state. If target is set to AB flip, after an inventory round with target A, inventory round is repeated with target B.	'B'	1	0 - 2(0: Inventory target flag A 1: Inventory target flag B 2: AB flip)	0	RW
DWORD PARAMS							
1644	ATT_RFID_TAG_POPULATION	Default expected tag population in the field while reader is operated	'D'	4	0 - 4294967295	30	RW

Tag Access Configurations

Table 13 Tag Access Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1554	ATT_RFID_TAG_ACCESS_CRITERIA_IDX	Index to list of access criteria to choose criteria to be used during access operation	'B'	1	0 -1(0:Disable 1:Enable)	0	RW
1555	ATT_RFID_TAG_ACCESS_CMD	Default access command identifier	'B'	1	0 -255(7: Read 8: Write 9: Lock 10: Kill 11: Block Erase 12: Block Perma Lock)	7	RW
1556	ATT_RFID_TAG_READ_MEMBANK	Memory bank to read. Applicable for Read access operation.	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1557	ATT_RFID_TAG_READ_LENGTH	Number of words to read. 0 means all data in bank.	'B'	1	0-64	0	RW
1558	ATT_RFID_TAG_WRITE_MEMBANK	Memory bank to write. Applicable for write access operation.	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1559	ATT_RFID_TAG_WRITE_DOBLOCK_WRITE	Perform Block Write operation when Write access operation is performed.	'B'	1	0 -1(0: Do not perform Block Write for Write operation 1: Perform Block Write for Write Operation)	0	RW
1560	ATT_RFID_TAG_BLOCK_ERASE_MEMBANK	Memory bank for Block Erase. Applicable for Block Erase access operation	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1561	ATT_RFID_TAG_BLOCK_ERASE_LENGTH	Number of words to erase	'B'	1	1-128	1	RW
1562	ATT_RFID_TAG_BLOCK_PERMA_DLOCK	Perform Block Perma Lock or Read current Perma Lock status	'B'	1	0 -1(0: Read Block Perma Lock Status 1: Perform Block Perma Lock)	0	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1563	ATT_RFID_TAG_BLOCK_PERMA_M EMBANK	Memory Bank on which Block Perma Lock operation needs to be performed	'B'	1	0- 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1565	ATT_RFID_TAG_BLOCK_PERMA_LOCK_BLK RANGE	Block Perma Lock Mask Range in units of 16 blocks	'B'	1	0 - 255	1	RW
WORD PARAMS							
1564	ATT_RFID_TAG_BLOCK_PERMA_LOCK_BLKPTR	Starting address of block mask in units of 16 blocks	'W'	2	0 - 65535	0	RW
1628	ATT_RFID_TAG_READ_OFFSET	Number of words offset from beginning of data bank, from where the read operation needs to be performed.	'W'	2	0 - 65535	0	RW
1629	ATT_RFID_TAG_WRITE_OFFSET	Number of words offset from beginning of data bank, from where the write operation needs to be performed.	'W'	2	0 - 65535	0	RW
1630	ATT_RFID_TAG_BLOCK_ERASE_OFFSET	Number of words offset from beginning of data bank, from where the block erase operation needs to be performed.	'W'	2	0 - 65535	0	RW
STRING PARAMS							
1654	ATT_RFID_TAG_WRITE_DATA_BUFFER	Data to be written for tag write access operation	'S'	34	Variable (Sequence of bytes. Maximum 34 bytes)	NULL STRING (0x00,0x00)	RW
1684	ATT_RFID_TAG_BLOCK_PERMA_LOCK_BLKMASK		'S'	32	Variable (Sequence of bytes. Maximum 32 bytes)	NULL STRING (0x00,0x00)	RW
1655	ATT_RFID_TAG_BLOCK_MASK	Mask value for tag lock operation	'S'	5	Variable (Sequence of bytes. Maximum 5 bytes)	0x07,0x07,0x07,0x07,0x07	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
DWORD PARAMS							
1645	ATT_RFID_TAG_ACCESS_PWD	Password for access operations	'D'		0 - 4294967295	0	RW

Region Configurations

Table 14 Region Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1581	ATT_RFID_REGION_SKU	RFID regulatory identifier	'B'	1	0 - 255	1	RW
1582	ATT_RFID_REGION_DEV_NAME		'B'	1	0 - 255		RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1583	ATT_RFID_REGION_CODE	Country of operation for unit. Regulatory setting will be dependent on this selection.	'B'	1	0 -255{ 0: NO_REGION_SET 1: ALBANIA 2: ANDORRA 3: ARGENTINA 4: AUSTRALIA 5: BANGLADESH 6: BHUTAN 7: BOLIVIA 8: BOSNIA_HERZENGOVINA 9: BRAZIL 10: CANADA 11: CAMBODIA 12: CHILE 13: CHINA 14: COLOMBIA 15: DOMINICAN_REPUBLIC 16: ECUADOR 17: EL_SALVADOR 18: GREAT_BRITAIN, 19: EUROPEAN_UNION 20: GAUTEMALA 21: GUAM 22: HONG_KONG 23: INDIA 24: INDONESIA 25: JAPAN_1W_LBT 26: JAPAN_250MW 27: LAOS_EU 28: LAOS_FCC 29: MACAU 30: MACEDONIA 31: MALAYSIA 32: MEXICO 33: MONACO 34: MOTENEGRO 35: NEW_ZEALAND_FCC 36: NEW_ZEALAND_EU 37: PAKISTAN 38: PANAMA 39: PARAGUAY 40: PERU 41: PHILIPPINES 42: PUERTO_RICO 43: RUSSIA 44: SAUDI_ARABIA 45: SINGAPORE 46: SOUTH_AFRICA 47: SOUTH_KOREA 48: SRI_LANKA 49: TAIWAN 50: THAILAND 51: TURKEY 52: UAE 53: UNITED_STATES 54: URUGUAY 55: VENEZUELA 56: VIETNAM 57: VIRGINIA_ISLAND 58: ETSI 59: FCC 60: ISRAEL 61: ALGERIA 62: ARMENIA 63: AUSTRIA 64: AZERBAIJAN 65: BAHRAIN 66: BELGIUM 67: BULGARIA 68: COSTA_RICA 69: CROATIA 70: CYPRUS 71: CZECH_REPUBLIC 72: DENMARK		

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
					73: EGYPT 74: ESTONIA 75: FINLAND 76: FRANCE 77: GEORGIA 78: GERMANY 79: GREECE 80: HUNGARY 81: ICELAND 82: IRELAND 83: ITALY 84: JORDAN 85: KAZAKHSTAN 86: KUWAIT 87: LATVIA 88: LITHUANIA 89: LUXEMBOURG 90: MALTA 91: NETHERLANDS 92: NORWAY 93: OMAN 94: POLAND 95: PORTUGAL 96: QATAR 97: ROMANIA 98: SERBIA 99: SLOVAKIA 100: SLOVEN 101: SPAIN 102: SWEDEN 103: SWITZERLAND 104: TUNISIA 105: UKRAINE }	0	RW
1584	ATT_RFID_HOPPING_ENABLED	Enable channel hopping. Applicable only if regulatory allows it to be configurable.	'B'	1	0 -1(0:Disable 1:Enable)	1	RW
DWORD PARAMS							
1647	ATT_RFID_REG_C HNL_LOWER_MASK	Bit mask for enabled channels. Least significant bit represents lower most channels.	'D'	4	0 - 4294967295	0x000f	RW
1648	1648 ATT_RFID_REG_C HNL_UPPER_MASK		'D'	4	0 - 4294967295	0x0000	RW

Peripheral Configurations

Table 15 Peripheral Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1607	ATT_RFID_UUID_CONFIG_ORDER	To determine UUID order	'B'	1	0 -1(0:Configure SPP UUID first 1: Configure CUSTOM UUID first)	1	RW

Trigger Configurations

Table 16 Trigger Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1593	ATT_RFID_START_ON_TRIGGER	Control RFID operation start based on external hand-held trigger	'B'	1	0 - 1(0:Disable 1:Enable)	0	RW
1594	ATT_RFID_START_TRIGGER_TYPE	Control operation start based on press or release of trigger	'B'	1	0 - 1 (0: Start on trigger press 1: Start on trigger release)	0	RW
1595	ATT_RFID_REPEAT_START	Should operation be repeated by monitoring for start trigger condition after a stop trigger condition is met	'B'	1	0 - 1(0: Repeat start trigger monitoring 1: Do not repeat start trigger)	0	RW
1596	ATT_RFID_STOP_ON_TRIGGER	Control RFID operation stop based on external hand-held trigger	'B'	1	0 - 1(0:Disable 1:Enable)	0	RW
1597	ATT_RFID_STOP_TRIGGER_TYPE	Control operation stop based on press or release of trigger	'B'	1	0 - 1(0: Stop on trigger pull 1: Stop on trigger release)	0	RW
1598	ATT_RFID_STOP_ON_TAG_COUNT	Control RFID operation stop based on tag seen count	'B'	1	0 - 1(0: Do not stop on tag seen count 1: Stop on tag seen count)	0	RW
1599	ATT_RFID_STOP_ON_TIMEOUT	Control RFID operation stop based on a timeout	'B'	1	0 - 1(0: Do not stop on timeout 1: Stop on timeout)	0	RW
1600	ATT_RFID_STOP_ON_INV_COUNT	Control RFID operation stop based on completion of specified number of inventory rounds	'B'	1	0 - 1(0: Do not stop on inventory count 1: Stop on inventory count)	0	RW
WORD PARAMS							

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1635	ATT_RFID_TRIGGER_START_DELAY	Delay in milli-seconds from start of trigger to initiate the operation. 0 means no delay.	'W'	2	0 - 65535	0	RW
1636	ATT_RFID_STOP_TAG_COUNT	Count of tags to monitor before stopping.	'W'	2	0 - 65535	0	RW
1637	ATT_RFID_STOP_INV_COUNT	Number of inventory rounds	'W'	2	0 - 65535	0	RW
DWORD PARAMS							
1649	ATT_RFID_TRIGGER_STOP_TIMEOUT	Timeout value for stop trigger	'D'	4	0 - 4294967295	0	RW

ASCII Configurations

Table 17 ASCII Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1601	ATT_RFID_ASCII_ECO_OFF_ON	Controls whether input from host is echoed back to host in ZETI communication. Useful for terminal based hosts to see what is typed and transmitted to the reader.	'B'	1	0 - 1(0: Enable ZETI Echo 1: Turn off ZETI Echo)	1	RW
1602	ATT_RFID_ASCII_CRC_ON_OFF	Control whether CRC field is enabled in ZETI communication. If enabled, a CRC field is added to each line of response from the reader.	'B'	1	0 - 1(0: Turn off ZETI CRC 1: Enable ZETI CRC)	0	RW
1603	ATT_RFID_ASCII_DEBUG_INTERFACE		'B'	1	0 - 255	0	RW
1604	ATT_RFID_ASCII_DEBUG_ON_OFF		'B'	1	0 - 255	0	RW
1605	ATT_RFID_ASCII_DEBUG_LEVEL		'B'	1	0 - 255	3	RW
1606	ATT_RFID_ASCII_OPERATION_END_NOTIFICATION_ON_OFF	Enable or Disable operation end notification messages from reader over ZETI interface for RFID operations	'B'	1	0 - 1(0: Turn off Operation End Notification 1: Enable Operation End Notification)	0	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
1608	ATT_RFID_ASCII_START_OPR_NOTIFY_ON_OFF	Enable or Disable notification messages from reader over ZETI interface after every operation start	'B'	1	0 - 1(0: Turn off Operation Start Notification 1: Enable Operation Start Notification)	0	RW
1609	ATT_RFID_ASCII_STOP_OPR_NOTIFY_ON_OFF	Enable or Disable notification messages from reader over ZETI interface after every operation stop	'B'	1	0 - 1(0: Turn off Operation Stop Notification 1: Enable Operation Stop Notification)	0	RW
1668	ATT_RFID_ASCII_TRIGGER_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	1	RW
1669	ATT_RFID_ASCII_BATTERY_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	1	RW
1670	ATT_RFID_ASCII_TEMPERATURE_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	1	RW
1671	ATT_RFID_ASCII_POWER_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	0	RW
1680	ATT_RFID_ASCII_DATABASE_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	0	RW
1681	ATT_RFID_ASCII_RADIO_ERR_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	0	RW
1685	ATT_RFID_ASCII_BATCH_MODE_NOTIFY_ON_OFF		'B'	1	0 - 1(0: Turn off Notification 1: Turn on Notification)	1	RW

Tag Access Criteria Configurations

Table 18 Tag Access Criteria Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1610	ATT_RFID_ACCES S1_ENABLE	Enable or Disable RFID Access Operation filter	'B'	1	0 - 1(0: Disable Access Filter 1: Enable Access Filter)		
1611	ATT_RFID_ACCES S1_FILTER1_MEMB ANK	Memory Bank for first filter	'B'	1	0 - 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1612	ATT_RFID_ACCES S1_FILTER1_DOMA TCH	Should operation be done on tags matching the filter or on those not matching the filter	'B'	1	0 - 1(0: Disable Access Filter 1: Enable filter match)	0	RW
1613	ATT_RFID_ACCES S1_FILTER2_MEMB ANK	Memory Bank for second filter	'B'	1	0 - 3(0:Reserved 1:EPC 2:TID 3:USER)	3	RW
1614	ATT_RFID_ACCES S1_FILTER2_DOMA TCH	Should operation be done on tags matching the filter or on those not matching the filter	'B'	1	0 - 1(0: Disable Access Filter 1: Enable filter match)	0	RW
WORD PARAMS							
1638	ATT_RFID_ACCES S1_FILTER1_STAR T_POS	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 to 65535	0	RW
1639	ATT_RFID_ACCES S1_FILTER1_MATC H_LENGTH	Numbers of bits from start position to use for matching.	'W'	2	0 to 65535	16	RW
1640	ATT_RFID_ACCES S1_FILTER2_STAR T_POS	Start position in bits from beginning of memory bank from where match needs to be performed.	'W'	2	0 to 65535	0	RW
1641	ATT_RFID_ACCES S1_FILTER2_MATC H_LENGTH	Numbers of bits from start position to use for matching.	'W'	2	0 to 65535	16	RW

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
STRING PARAMS							
1659	ATT_RFID_ACCES S1_FILTER1_DATA		'S'	34	Variable (Sequence of bytes. Maximum 34 bytes)	NULL STRING(0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00)	RW
1660	ATT_RFID_ACCES S1_FILTER1_MASK		'S'	34	Variable (Sequence of bytes. Maximum 34 bytes)	NULL STRING(0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00)	RW
1661	ATT_RFID_ACCES S1_FILTER2_DATA		'S'	34	Variable (Sequence of bytes. Maximum 34 bytes)	NULL STRING(0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00)	RW
1662	ATT_RFID_ACCES S1_FILTER2_MASK		'S'	34	Variable (Sequence of bytes. Maximum 34 bytes)	NULL STRING(0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00,0x00,0x00,0x 00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x00, 0x00,0x00)	RW

Locate Tag Configurations

Table 19 Locate Tag Configurations

[illegible]

Dynamic Power Configurations

Table 20 Dynamic Power Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1676	ATT_GENX_DYN_PWR_OPTIMIZATION	Enable or Disable Dynamic Power Optimization during RFID operations	'B'	1	0 - 1(0:Disable 1:Enable)	1	RW

Duty Cycle Configurations

Table 21 Duty Cycle Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1677	ATT_GENX_DUTY_CYCLE_PERCENT	Nominal percentage of time RF is turned ON during reader operations	'B'	1	0 - 100	100%	RW

Power Mode Configurations

Table 22 Power Mode Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1765	ATT_BATT_DISCO NNECT_EN	dle timeout in low power mode after which device automatically powers off	'B'	2	0 - disable, 26 - 10 Minutes, 27 - 15 Minutes, 28 - 20 Minutes, 29 - 30 Minutes, 30 - 45 Seconds, 33 - 1 Hour, 34 - 2 Hours, 36 - 4 hours note: additional 5 minutes is added for the above timeout (for example, if 10 mins is selected, it takes 15 mins to go to off mode).	35 min	RW
1785	ATT_RFID_LED_MO DE	(See section LED Modes, Table 15)	'B'	2	0 - 3	1	RW
1786	ATT_RFID_LED_MO DE	When trigger is pressed, the LED must almost immediately "flash ON- a blink" to indicate the battery state of charge. The LED stays ON 0.3 sec by default. This time window is configurable from 0.1 sec to 3 sec.	'B'	2	1 - 30	0.3sec (unit is tenths of a second)	RW
1788	ATT_BATTERY_ST ATUS_LED_DURAT ION	Regardless of the LED mode, upon removing sled from charging cradle, the battery state of charge is displayed	'B'	2	0 - 50 sec	4 sec	RW
WORD PARAMS							
1632	ATT_RFID_LOW_P OWER_MODE_TIM EOUT	Idle timeout after which unit goes into low power mode	'W'	2	5 - 65535	5 min	RW
1633	ATT_RFID_OFF_M ODE_TIMEOUT	Idle timeout in low power mode after which device automatically powers off	'W'	2	5 - 65535	300 sec	RW

Unique Tag Report Configurations

Table 23 Unique Tag Report Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1580	ATT_RFID_UNIQUE_TAG_REPORT	Enable or Disable reporting of unique tags only	'B'	1	0 - 1(0:Disable 1:Enable)	0	RW

Other RFID Configurations

Table 24 Other RFID Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BYTE PARAMS							
1615	ATT_RFID_BUFFER_SIZE		'B'	1	6 - 50	10	RW
1616	ATT_RFID_INV_CYCLES		'B'	1	0 - 255	4	RW
1617	ATT_RFID_KTX		'B'	1	0 - 255	4	RW
1618	ATT_RFID_KS		'B'	1	0 - 255	5	RW

System Configurations

Table 25 System Configurations

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
BIT PARAMS							
1664	ATT_GENX_MODE_SELECT	RFID mode	'F'	1 Bit	0 (0:RFID)	0	RW
56	ATT_DEC_BEEP	Sound beeper on successful RFID operation	'F'	1 Bit	0 - 1	1	RW
STRING PARAMS							
533	ATT_MODEL_NUMBER	Model number	'S'	19	Variable (Sequence of bytes. Maximum 19 bytes)	'R','F','D','2','0','0','0','-', 'X','X', 'X','X','X','X','X','X','X','X'	RO
534	534 ATT_SERIAL_NUMBER	Serial number	'S'	17	Variable (Sequence of bytes. Maximum 17 bytes)	'X','X','X','X','X','X','X','X', 'X','X', 'X','X','X','X','X','X'	RO

Data Dictionary

Attribute Number	Attribute Name	Description	Type	Size (Byte)	Values	Default Value	User Mode Access
535	ATT_DATE_OF_MANUFACTURE	Date of manufacture	'S'	8	Variable (Sequence of bytes. Maximum 8 bytes)	'D','D','M','M','M','Y','Y'	
536	ATT_DATE_OF_SERVICE	Date of last service	'S'	8	Variable (Sequence of bytes. Maximum 8 bytes)	'D','D','M','M','M','Y','Y'	
614	ATT_DATE_FIRST_PROG RAM	Date of first programming	'S'	8	Variable (Sequence of bytes. Maximum 8 bytes)	'D','D','M','M','M','Y','Y'	RW
616	ATT_CONFIG_FILE	Identifies the device configuration	'S'	17	Variable (Sequence of bytes. Maximum 17 bytes)	'F', 'a', 'c', 't', 'o', 'r', 'y', '', 'D', 'e', 'f', 'a', 'u', 'l', 't', 0x03	RW
20004	ATT_FIRM_VERSION	Firmware version string	'S'				RO
ACTION PARAMS							
6001	ATT_SET_DEFAULTS	Initiates a parameter defaults command	'X'	1			WO
6004	ATT_REBOOT	Remote reboot command	'X'	1			WO

Action Values

Table 26 Possible Select Action Values

Action	Matching	Non-Matching
0 (default)	Assert SL or Inventoried - A	De-assert SL or Inventoried - B
1	Assert SL or Inventoried - A	Do nothing
2	Do nothing	De-assert SL or Inventoried - B
3	Negate SL or (A - B, B - A)	Do nothing
4	De-assert SL or Inventoried - B	Assert SL or Inventoried - A
5	De-assert SL or Inventoried - B	Do Nothing
6	Do nothing	Assert SL or Inventoried - A
7	Do nothing	Negate SL or (A - B, B - A)

Index

B

battery	
maintenance	49
management	18
notification	18
optimization	18

C

conventions	
notational	8

D

data dictionary	55
documents	9

F

feature	18
---------	----

I

information, service	9
----------------------	---

L

lanyard	11, 17
---------	--------

M

maintenance	48
-------------	----

R

rfid manager	20
firmware update	27
import into stagenow	34
installation	21
recovery mode	29

rfid sled

cleaning	47, 52
configurations	7
features	11
maintenance	48
troubleshooting	50, 52

S

service information	9
software	9
stagenow	32

T

troubleshooting	50, 52
default configuration	52
LED mode 2	54

U

unpacking	10
-----------	----

