



Point Mobile PM452

O Point Mobile PM452 é um dispositivo potente com tecnologia de terminais portáteis, meticulosamente projetado para oferecer desempenho de leitura incomparável em qualquer ambiente.





For Android™ 13

Enterprise Mobility

PM452

User Manual

Instruction

This manual provides information about basic features and using the PM452. Please read this manual carefully before using your device and peripherals to ensure safe and proper use.



Note: Screenshots in this manual may differ from actual screens.

Revision History

Revision	Date	Description
v1.0	27 Jun 2024	Initial release
v1.1	02 Jul 2024	Removed unsupported feature icon
v1.2	15 Jul 2024	Updated NFC tapping area figure

Introduction

PM452 SKUs

The contents of this manual can cover the following SKUs.

Part Number	Scanner	Keypad	Network	Common
P452E31B4DNE0C	N5703	Function-Numeric	Wi-Fi 6E, Bluetooth	Android 13 GMS RAM/Flash: 4G/64G NFC
P452E31B4DNE0C	EX30			
P452E3164DNE0C	N5703	Alpha-Numeric		
P452E3164DNE0C	EX30			
P452E3864DNE0C	N6803FR			
P452E3124DNE0C	N5703	Numeric		
P452E3124DNE0C	EX30			
P452E3824DNE0C	N6803FR			
P452E61B4DNE0C	N5703	Function-Numeric		
P452E61B4DNE0C	EX30			
P452E6164DNE0C	N5703	Alpha-Numeric		
P452E6164DNE0C	EX30			
P452E6864DNE0C	N6803FR			
P452E6124GNE0C	N5703	Numeric		
P452E6124DNE0C	EX30			
P452E6824DNE0C	N6803FR			

Table of Contents

INSTRUCTION.....	1
Revision History	1
PM452 SKUs	2
GETTING STARTED.....	5
Device Parts.....	5
Product Standard Accessories.....	7
Install SD & SIM cards	8
Install & Remove Battery.....	11
Charge the Device	14
LED Indicator	18
Turn On / Off the Device	19
Use a Touch Screen	20
LEARNING THE BASICS	23
Setup Wizard	23
Home Screen	24
MTP Connection with PC	32
Manage the Files.....	33
Lock the Screen	34
Settings.....	35
USING THE KEYPAD.....	37
Keypad.....	37
Use the Buttons	49
CAMERA	52
SCANNER	53

Table of Contents

- Turn on / off the Scanner 53
- ScanSettings 54
- Scan a Barcode 63
- ScanDemo 64

- WIRELESS 65**
 - Mobile Network 65
 - Wi-Fi..... 66
 - Bluetooth..... 67
 - NFC..... 70

- SYSTEM MAINTENANCE 71**
 - System Information 71
 - Check Device Health..... 72
 - OS Update 73
 - Factory Data Reset 76


- ACCESSORIES 77**
 - Hand Strap..... 77
 - Gun Handle 78
 - Charging cradle..... 81

- SAFETY INFORMATION 83**
 - Battery Safety Information..... 83

Getting Started

Device Parts


Figure 1 PM452 front + left + bottom view

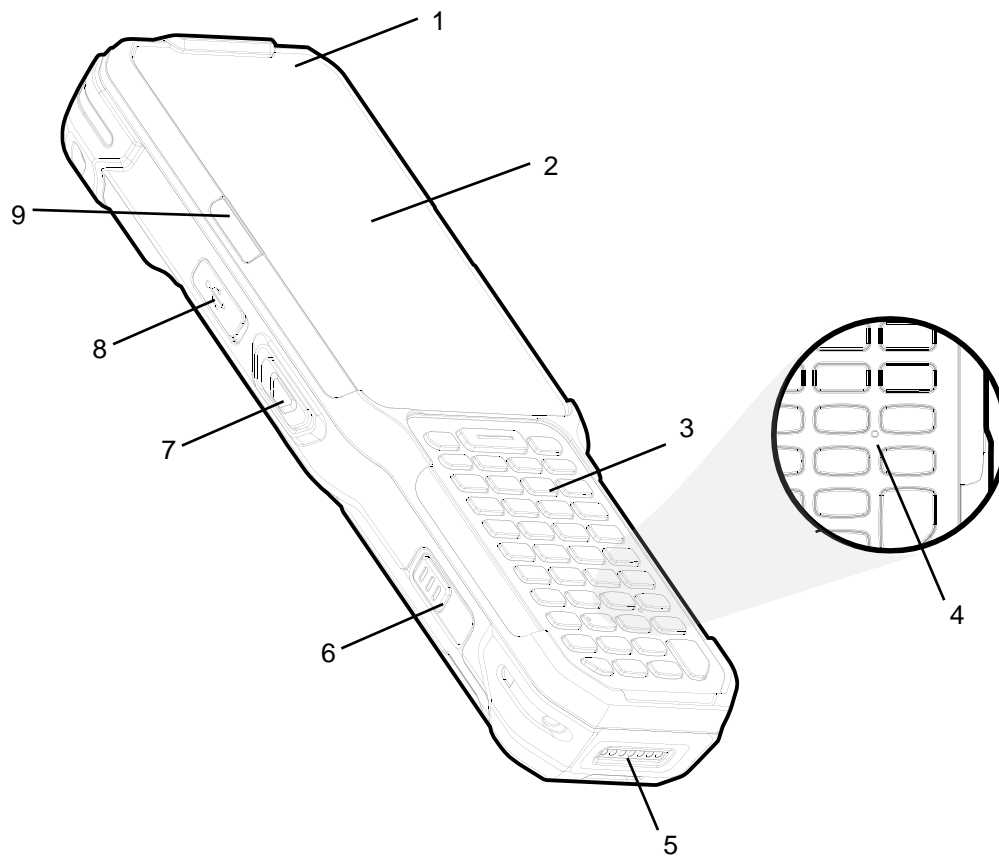

No	Name	Description
1	LED indicator (Front)	Indicate the power status and notification. Find more details in LED indicator
2	Touch screen	Displays all operating screen
3	Keypad	Numeric / Alpha-Numeric / Function-Numeric Keypad For more details, refer to Using the Keypad
4	Microphone	Use for collecting sound
5	I/O connector for cradle	Connector for charging and communication with cradle
6	Battery release button (Left)	Press the buttons in to release the battery
7	Scan button (Left)	Scan a barcode by pressing (Programmable button)
8	USB connector with cap	USB Type C connector for charging and data communication and the connector is protected by the cap
9	LED indicator (Center-Left)	Indicate the barcode reading result. Find more details in LED indicator

Getting Started

Figure 2 PM452 rear + right + top view

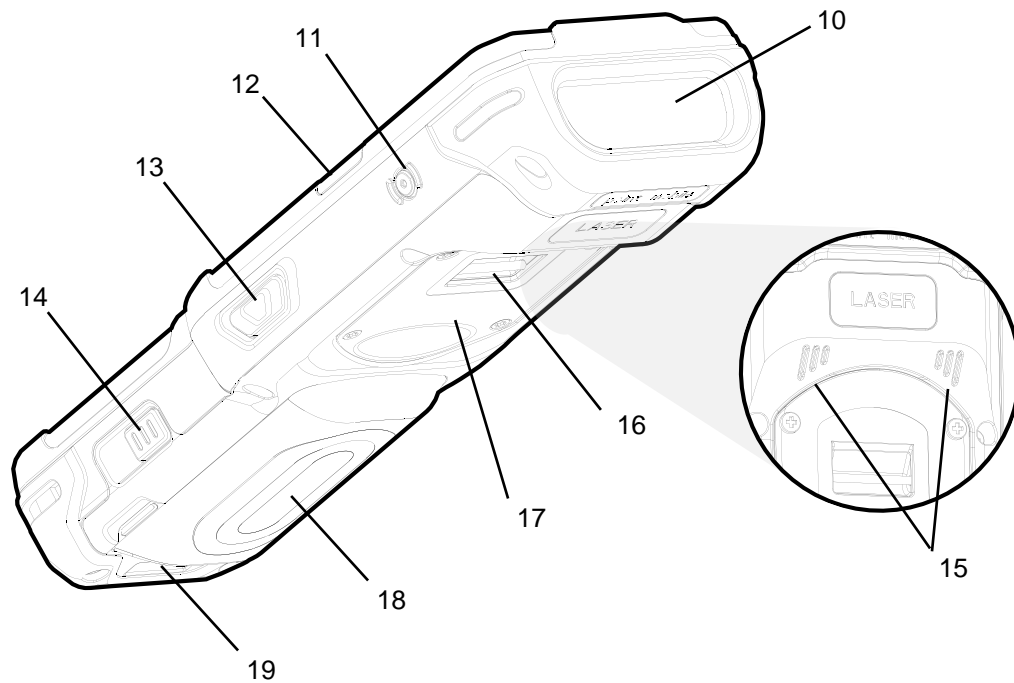







No	Name	Description
10	Scanner & Top camera	Scan a barcode & Take a picture
11	Power button	Turn on/off the device
12	LED indicator (Center-Right)	Indicate the barcode reading result. Find more details in LED indicator
13	Scan button (Right)	Scan a barcode by pressing (Programmable button)
14	Battery release button (Right)	Press the buttons in to release the battery
15	Speaker	Ring system sound
16	Hand strap hole (Top)	Mount a hand strap
17	Gun handle connect part	Plug the gun handle. Refer to Gun Handle
18	Battery	Provide power
19	Hand strap hole (Bottom)	Mount a hand strap

Getting Started

Product Standard Accessories

The following items are in the product box.

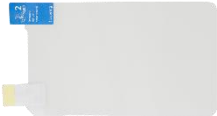Accessory	Name
	Battery pack
	Charger
	AC plug
	Stylus pen
	LCD protection film
	Hand strap



Note: The images may differ from the actual accessory.



Getting Started

Install SD & SIM cards

PM452 supports

- microSD card
- Micro SIM card – WWAN (LTE) SKU only

You can find the card slots when removing the battery. Depending on SKU, the equipped card slots are different. Refer to the following table.

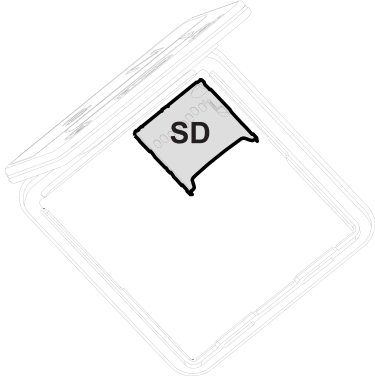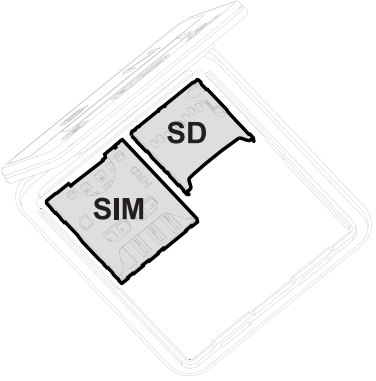
Wi-Fi SKU	WWAN (LTE) SKU
	

Getting Started

Install SD card


1. Remove the battery and open the card slot cover.

Figure 3 Card slot cover

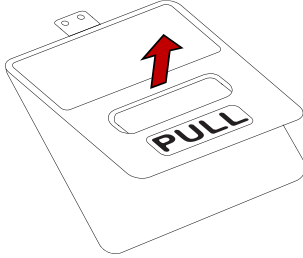

2. Insert a microSD card with the contacts facing down.

Figure 4 Install a SD card

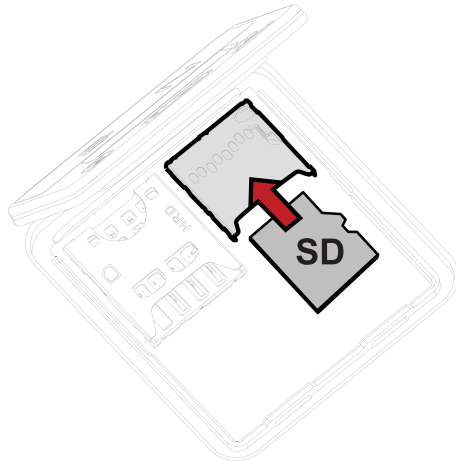


3. Close the card slot cover firmly.
To remove the card, gently slide it out of slot.

Getting Started

Install SIM card


1. Remove the battery and open the card slot cover.

Figure 5 Card slot cover

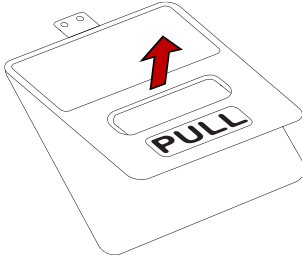

2. Insert a micro SIM card with the contacts facing down.

Figure 6 Install a SIM card

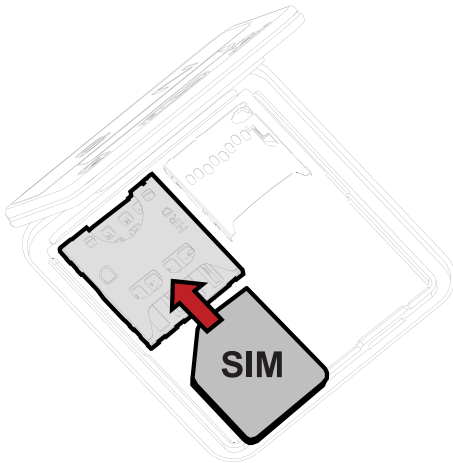

3. Close the card slot cover firmly.
To remove the card, gently slide it out of slot.

Getting Started


Install & Remove Battery

Install the battery

1. Insert the battery from the top (Opposite side of the gold contacts).
2. Push the battery's bottom firmly.

Confirm that the battery release buttons are completely outward.

Figure 7 Installing the battery

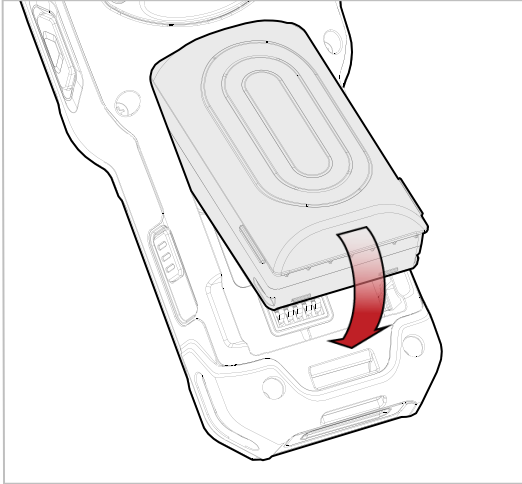


Getting Started

Remove the battery

1. Press and hold the both sides of battery release buttons simultaneously.

Figure 8 Removing the battery - 1

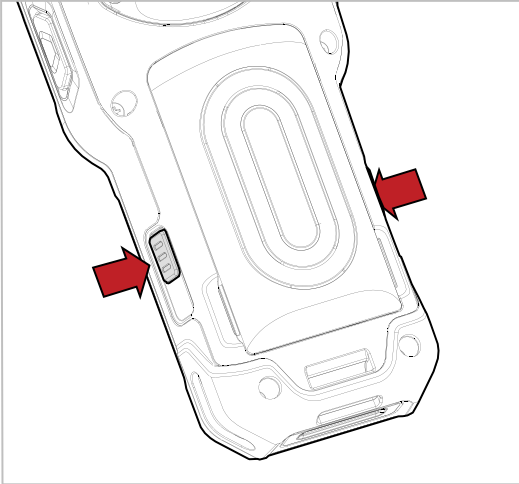

2. While pressing the battery release button in, pull the battery's bottom side up.

Figure 9 Removing the battery - 2



Getting Started

Battery hot swap

Battery hot swap is a feature that allows users to replace the battery without powering off.

PM452 supports two types of hot swap mode, Enterprise Hot Swap, and Legacy hot swap. Basically, the device enters Enterprise Hot Swap mode. You can change the preferred hot swap mode in EmSettings.

Enterprise Hot Swap

Enterprise hot swap allows the device to maintain Wi-Fi/Bluetooth connectivity and memory persistence even when detaching the battery. Users can earn time to replace the battery without stopping the ongoing task or disconnecting the Bluetooth devices.

But, as the backup battery with a smaller capacity than the main battery takes over to maintain the system, users are highly recommended to replace the battery within 30 seconds (30 seconds countdown displays). And some mitigations are activated to conserve power consumption.

- Reducing display brightness to about 10%
- Disabling NFC, Scanner
- Lowering sound volume

Once the user replaces the battery with a charged one, the device will come back to normal operation mode without booting process.



Notice: Do not change any settings or perform actions that may increase power consumption for device stability.

Legacy hot swap

When the battery is removed from the device, the display turns off, the device enters Hot swap mode and waits for battery replacement.

Once you replace the battery to a new one, the device will come back to normal operation mode without booting process.

Getting Started

Charge the Device

Before using PM452, charge the device enough to use. PM452 can be charged with power adapter or charging cradle. For best charging performance and safety, follow the normal [charging temperature](#).



Caution: Always use an original charger and cable from Point Mobile. Other chargers and cables may damage PM452. Also, make sure the charger and cables are not wet.

Follow the [Battery Safety Information](#) for safety of using the battery.

Battery specification

- Typical capacity:
 - Standard battery: 4,000mAh
 - Extended battery: 5,700mAh
- Rechargeable & Removable battery

Charging temperature

Charge devices and batteries in temperatures from 0 °C to 45 °C. At out-of-normal range temperatures, the PM452 may stop charging for safety, and the power LED blinks red.

Getting Started


Smart Charging

PM452 supports three charging modes to provide optimal battery performance for your work.

- **Life-X mode (Default)**
 - An optimized charging mode that improves the battery's lifespan and stability.
- **Normal mode**
 - A typical charging mode.
- **Fast charging mode**
 - A charging mode that charges the battery faster than the other modes.

To change the smart charging mode, go to **Settings > Battery** or **EmKit > EmSettings**, and select **Smart Charging**.

Figure 10 Smart Charging

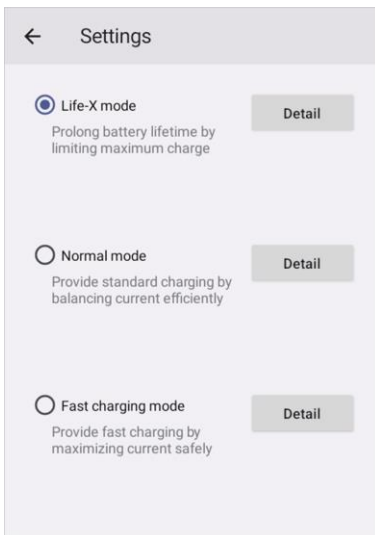


Getting Started

Charge with power adapter


1. Assemble a proper country plug and charger, and rotate the plug clockwise to engage firmly.
2. Open the USB connector's cover cap on the PM452.

Figure 11 USB connector with cap

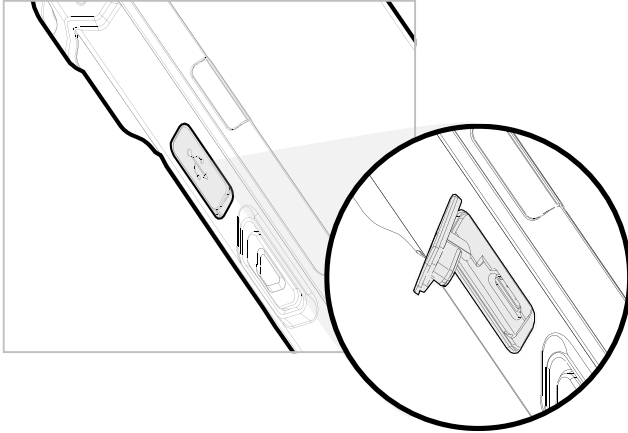

3. Connect the cable to the USB connector.
4. Provide power by plugging the power adapter to the wall socket.

Figure 12 PM452 charging with power adapter

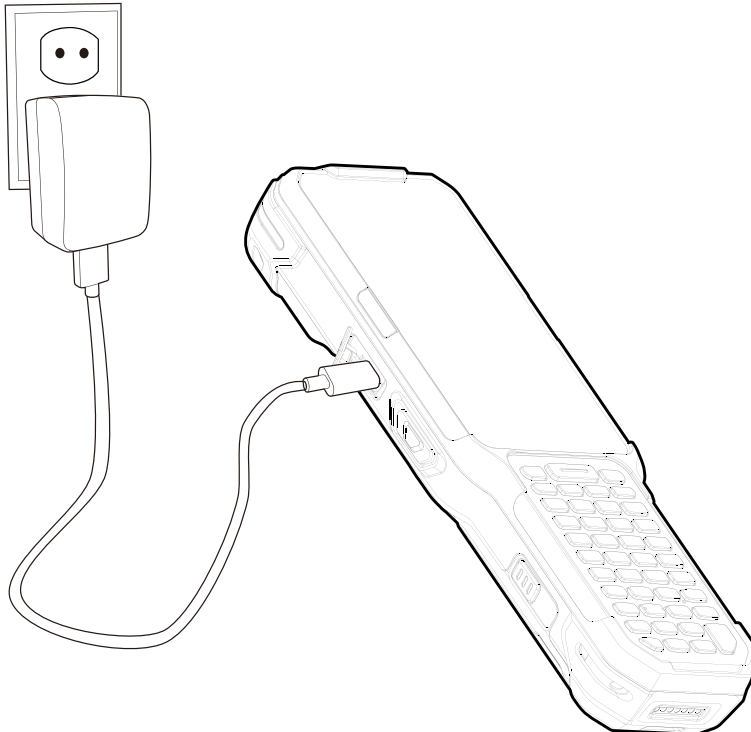

Getting Started

Charging Cradle

There are three types of charging cradle for PM452. Single slot (ethernet) cradle (SSC / SEC), 4 slot cradle (4SC), 4 slot battery cradle (4SBC). The cradles are sold separately and can be used in common with PM451.

Single Slot Cradle (SSC) / Single Slot Ethernet Cradle (SEC)

SSC and SEC provide one PM452 charging slot and one PM452 battery charging slot.

4 Slot Cradle (4SC)

4SC provides four PM452 charging slots.

4 Slot Battery Cradle (4SBC)


4SBC can charge up to 4 pieces of PM452 batteries at the same time.







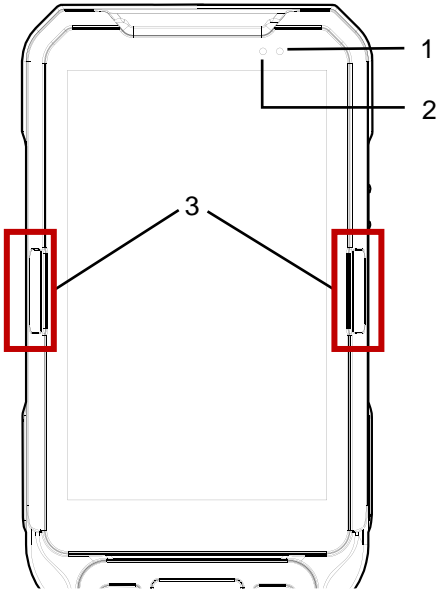

Getting Started

LED Indicator

PM452 has two types of LED indicators.

Figure 13 PM452 LED indicators



No	Indicator	Status	Indication
1	Notification LED	 Solid red	Device entered Hot swap mode
		 Blinking blue	Notification existing
2	Power LED	 Solid green	Device is completely charged
		 Solid red	Device is charging / Battery is low
		 Blinking red	Charging temperature is out-of-normal range (Refer to Charging temperature) / Battery is very low
		 Alternately blinking red & green	Cannot recognize the battery
3	Center LED	 Red flash	Barcode reading failed
		 Blue flash	Barcode reading success


Getting Started

Turn On / Off the Device

To turn on the device,

- Press and hold the power button on the right side of the device until **SMART BEYOND RUGGED** logo displays on the screen.


Figure 14 PM452 power button

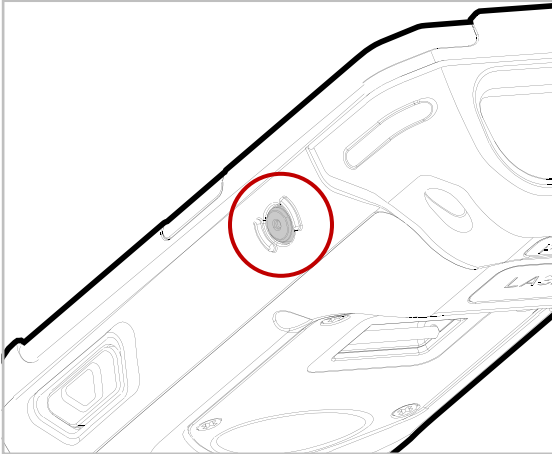

To turn off the device,

- Press and hold the power button when the display is on until the power menu is shown. Then, tap **Power off**.

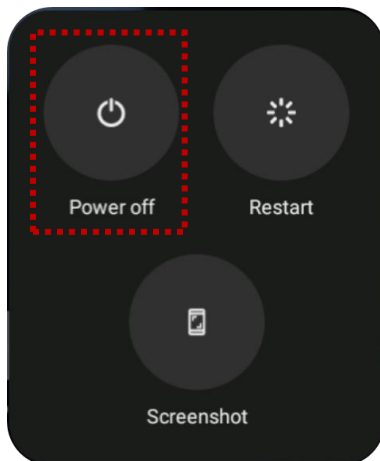





Figure 15 Power menu - Power off



Getting Started

Use a Touch Screen

Controlling the touch screen

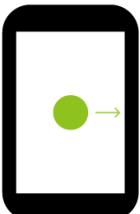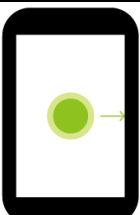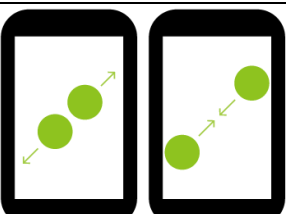Gesture	Description
	<p>Tap One-finger press</p>
	<p>Long-press One-finger press, wait, lift for select action</p>
	<p>Drag, Swipe, or Fling One-finger press, move, lift for scroll or tilt action</p>
	<p>Long-press drag One-finger press, wait, move, lift for pick up and move, or select multiple items action</p>
	<p>Pinch Open & Close Two-finger press, move outwards and inwards, lift for zoom in / out action</p>
	<p>Rotate When PM452 is turning sideways, screen orientation is changing</p>

Getting Started

System navigation

Navigation bar (Software button)

The navigation bar is enabled as a default, and it is located at the bottom of the screen. The app overview button, home button, and back button are placed on the bar in order.

Figure 16 Navigation bar




Shape	Button	Function
■	Recent apps button	Tap to see the recently used app list.
●	Home button	Tap to go to home screen. Long-press to launch the Google Assistant.
◀	Back button	Tap to go back to previous screen.

Getting Started

Gesture Navigation

If you are unfamiliar with the navigation bar or you want to see the screen with a wider screen, hide the navigation bar. The functions provided by the software buttons on the navigation bar can be used by using specific gestures.

To hide the navigation bar, navigate to **Setting**  > **System** > **Gesture** > **System navigation** and change the setting to **Gesture navigation**. Then, the navigation bar will be hidden.



Note: To use the navigation bar again, change the setting to **3-button navigation**.

Find the gestures and matched function in the table below.

Figure 17 Gesture navigation



Function	Gesture
Open recent apps screen	Swipe up from the bottom of the screen, hold, then release.
Go to home screen	Swipe up from the center-bottom of the screen.
Back to previous screen	Swipe from the left or right edge of the screen.
Launch Google Assistant	Swipe up from either the left-bottom or right-bottom.

Learning the Basics

Setup Wizard

When PM452 starts very first time or boot after factory reset, Setup Wizard is launched. Following the steps on the screen, set system language, Google account, Wi-Fi connection and copy the data, etc.

Some settings can be skipped, but there may be some restrictions on the use of the system.

Figure 19 Setup Wizard (main)


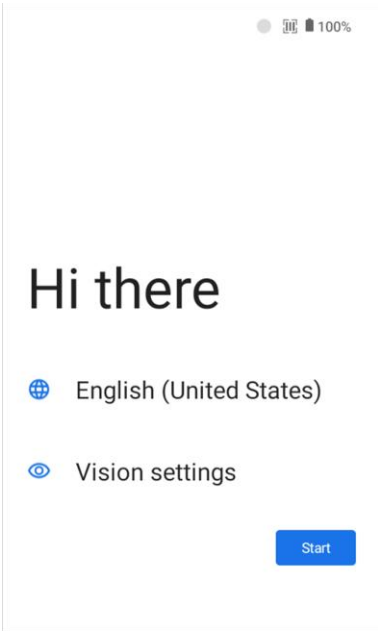


Figure 18 Setup Wizard (Google account)

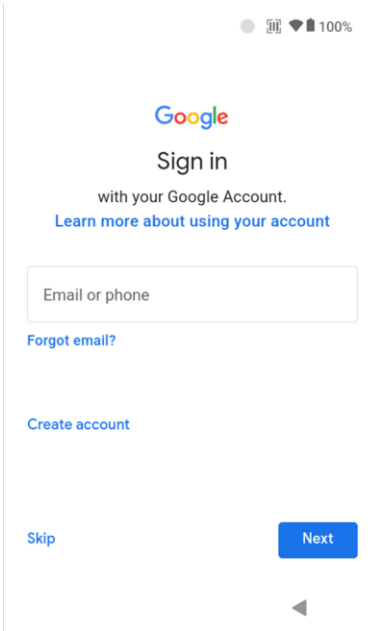


Learning the Basics

Home Screen

Home screen is a screen displayed after Setup Wizard or pressing the Home button.

Figure 20 Home screen

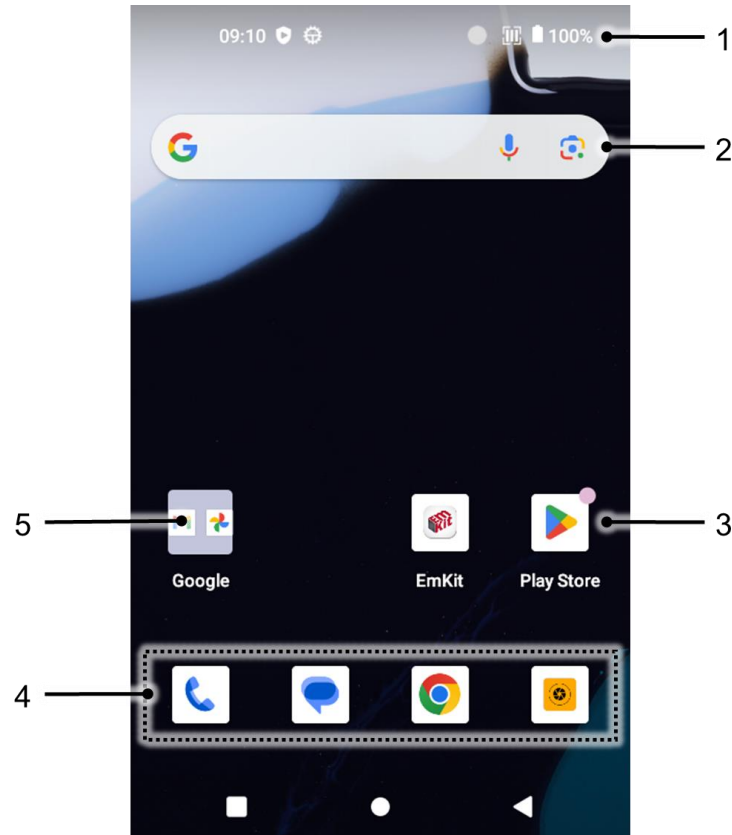

No	Item	Description
1	Status bar	Indicates device status and notification.
2	Google search	Search an item with Google
3	App	Tap to run the application Long-press to see the application's options
4	Favorites tray	Place the frequently used apps
5	App folder	Apps are organized in the folder. Tap to open the App folder

Learning the Basics

Status bar










Time, status icons, and notification icons are on the Status bar.

Status icons

Icon	Description	Icon	Description
LTE	LTE connected	3G	3G connected
	EDGE connected		
	Strong signal		Weak signal
	Data disabled		Connection issue
	Data communication		No data connection
	Hotspot enabled		Airplane mode
	Connected to a Bluetooth device		Connected to a Wi-Fi network
	Battery is full		Battery is low
	Battery is critical low		Cannot recognize battery
	Battery is charging		Alarm is set
	Location service turned on		Vibrate mode
	Scanner turned on		Scanner turned on, but trigger turned off
	Numeric input mode		Lowercase alphabet input mode
	Uppercase alphabet input mode (Temporary)		Uppercase alphabet input mode (Fixed)
	Functions input mode (Temporary)		Functions input mode (Fixed)
	CTRL functions mode		ALT functions mode

Learning the Basics

Notification icons


Icon	Description	Icon	Description
	New Email		Connected to VPN network
	Upcoming event		Other input method available
	File uploaded		File downloaded
	File copied		OTG device connected
	There are more notifications		

Notification panel

Notification panel displays a list of all notifications. Tap a notification to respond.

To open the Notification panel, drag the Status bar down. To close the panel, swipe it up.

Figure 21 Notification panel

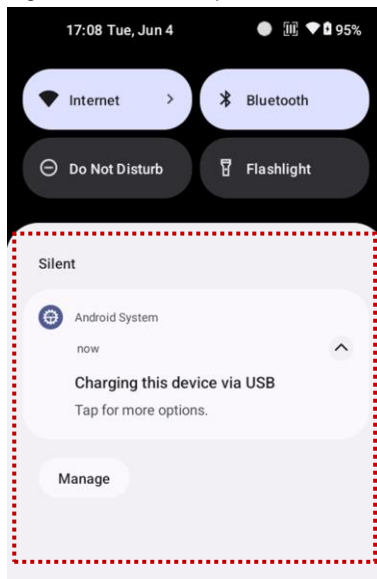

Learning the Basics


Quick setting panel

Quick setting panel contains some frequently used settings such as Wi-Fi, Bluetooth, etc.


To use the Quick setting panel,

1. Open the Notification panel.
2. Drag down the Notification panel.
3. Tap a setting icon to enable / disable the setting or long-press an icon to see more detail.

Figure 22 Quick setting panel

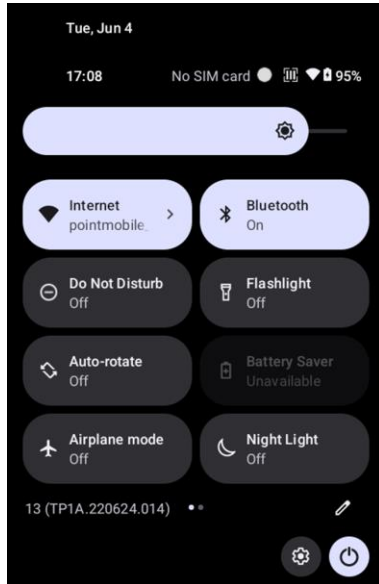

To edit the configuration of Quick setting panel,

1. Tap  on the bottom of the panel.
2. By long-press and dragging the icon, customize the configuration of the panel.


Learning the Basics

Apps & Widget

App folder


To create the app folder, long-press an app icon and drag it to another app icon.

Figure 23 Create app folder

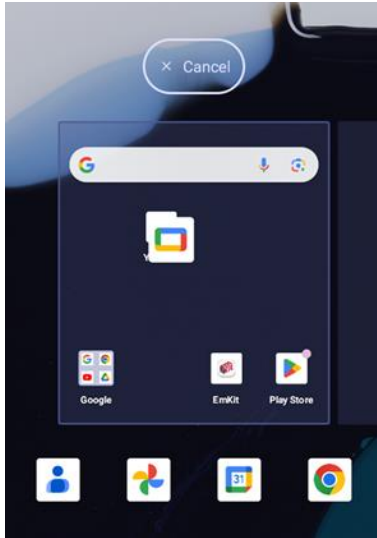

To change the folder name, tap the **Edit Name** and input a new name.

Figure 24 Change app folder name

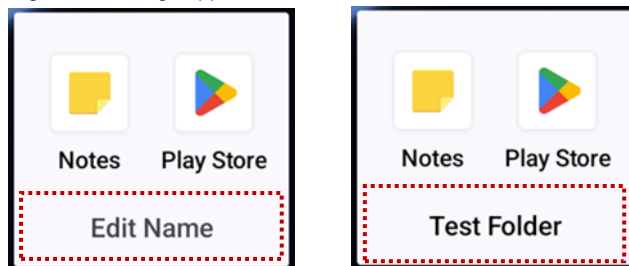


Learning the Basics

App drawer

All installed apps are listed alphabetically in App drawer.

- To open the App drawer, swipe up the Home screen.
- To close the App drawer, swipe down the screen.

Figure 25 App drawer

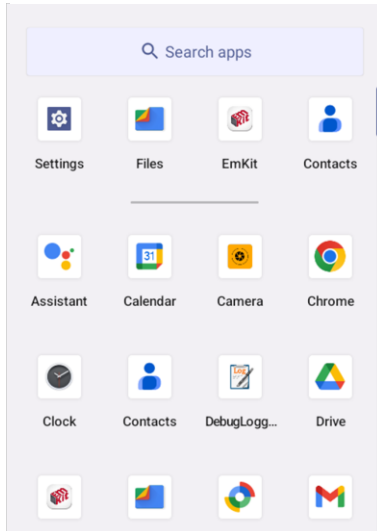

Favorites tray

To organize an app in the Favorites tray,

1. Long-press an app icon from the App drawer. Then, drag it slightly until the Home screen is shown.
2. Place the app icon in the Favorites tray.

Figure 26 Add an app to Favorites tray



Learning the Basics


Organize app in Home screen

To organize an app in the Home screen,

1. Long-press an app icon from the App drawer. Then, drag it slightly until the Home screen is shown.
2. Place the app icon where you want.

(To cancel to place the app, drag it to **Cancel** area and release.)


Figure 27 Place app in Home screen

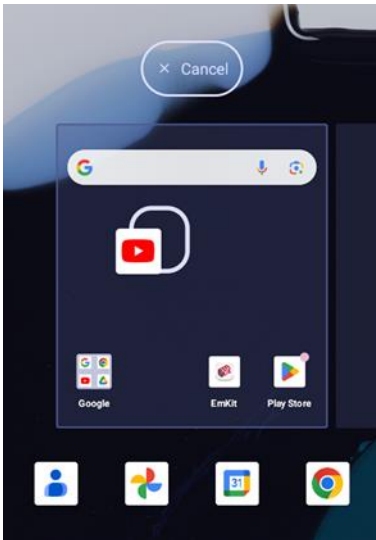

To remove an app or widget in the Home screen,

1. Long-press an app icon or widget.
2. Drag it to **Remove** area and release.

Figure 28 Remove from Home screen

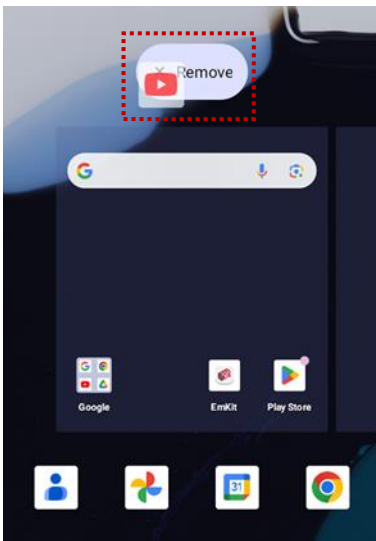


Learning the Basics

Widget

To add a widget in the Home screen,

1. Long-press the empty space of the Home screen.
2. In three menus, select **Widgets**.

Figure 29 Widget menu

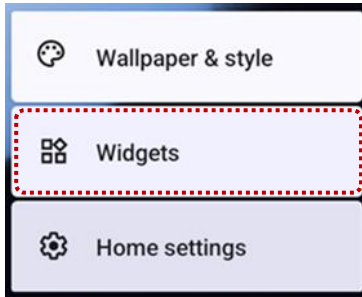

3. Among the list, tap and hold a widget you want to add.
4. Place the widget to the Home screen by dragging.


Learning the Basics

MTP Connection with PC

To transfer the files with a PC,


1. Connect the device to the PC via USB cable first.
2. Drag down Status bar and tap **Android System** notification to change USB preference option.

Figure 30 USB connection notification

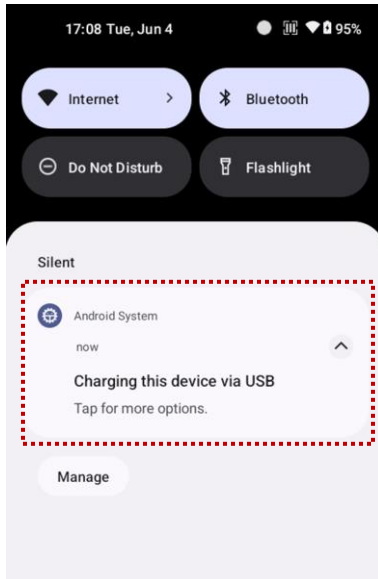

3. Change the option to **File Transfer** from **No data transfer**.

Figure 31 USB Preferences

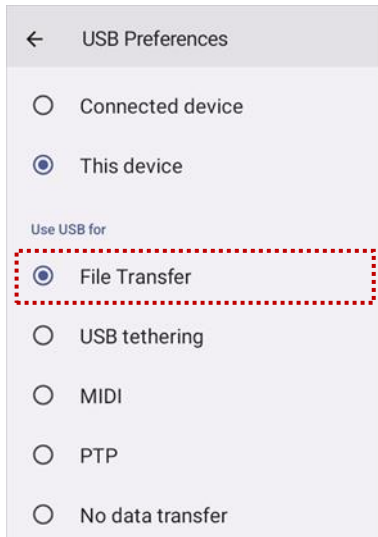

4. Now PC can recognize the connected device. Find PM452 device from file explorer of the PC.


Learning the Basics

Manage the Files

Launch **Files**  to manage the files in the storage.

You can find the folders and files, move / copy them to other location, and delete them from the storage.

Figure 32 Files

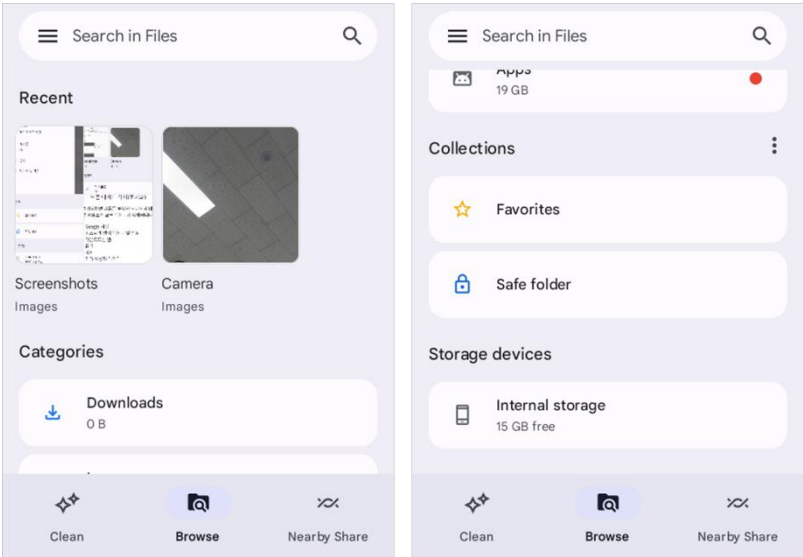

Learning the Basics

Lock the Screen

Protect the device from unauthorized personnel by setting up the screen lock.


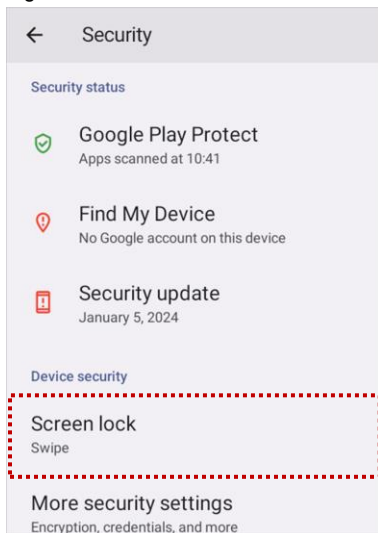
1. Navigate to **Settings**  > **Security**.
2. Tap **Screen lock**.

Figure 33 Screen lock





3. Choose a screen lock method.
 - None: Screen unlocks immediately
 - Swipe: Swipe the lock screen to unlock (Default)
 - Pattern: Draw a pattern to unlock
 - PIN: Input a PIN to unlock (At least 4 digits)
 - Password: Input a password to unlock (At least 4 characters)

Learning the Basics

Settings

There are two ways to go to **Settings**:

- Open the App drawer and tap **Settings** 
- Open the Quick setting panel and tap gear icon 

Adjust display brightness

To adjust the display brightness level,


- Open Quick setting panel and adjust display brightness bar
- Go to **Settings**  > **Display** > **Brightness level**

Figure 34 Normal brightness level



Figure 35 High brightness level (higher than 80%)



Caution: Using high brightness levels for long periods may cause eye strain and increase battery consumption.

Adjust sound


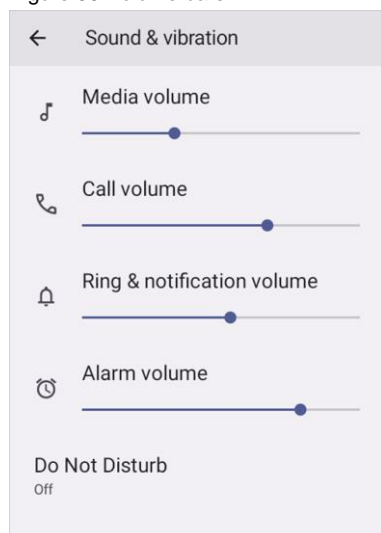
To adjust sound volume, go to **Settings**  > **Sound** and control the Media, Call, Alarm, Ring volume bars.

Figure 36 Volume bars



Caution: Using high volume levels for long periods may cause ear strain and increase battery consumption.

Learning the Basics

Adjust display and text size

If the display and text size of the screen is too small or too large, adjust the size.


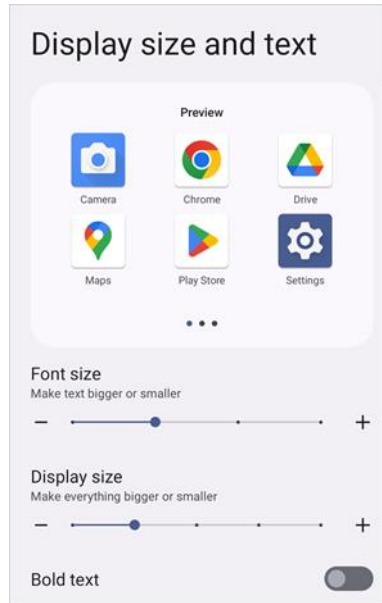
1. Go to **Settings**  > **Display** > **Display size and text**.
2. Referring to the **Preview**, set the font size.

Figure 37 Set display and text size



Use Keyboard Backlight

The buttons in the keypad may not be visible in the dark. For this inconvenience, PM452 have keyboard backlight so that you can find the proper keys easily.

To use the keyboard backlight,


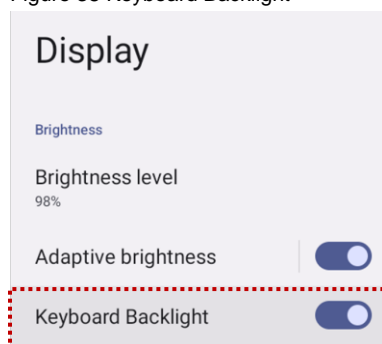
1. Go to **Settings**  > **Display**.
2. Tap **Keyboard Backlight** switch.

Figure 38 Keyboard Backlight







Using the Keypad

Keypad









Numeric Keypad

Figure 39 Numeric keypad












Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT 	Programmable keys, <ul style="list-style-type: none"> • P1 is the AppSwitch key by default • P2 is the Back key by default
Scan (Orange) SCANNER_F 	Scan the barcode
Left / Up / Down / Right DPAD_LEFT / UP / DOWN / RIGHT 	Moves left / up / down / right
ESC ESCAPE 	Escape function



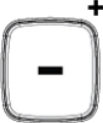


Using the Keypad

Key	Description
Backspace <i>BKSP</i> 	Backspace function
TAB <i>TAB</i> 	Tap function
Alpha (Yellow) 	Toggle key for Alphabet input mode. The keycode or function shown on the keypad in yellow will be inputted in Alphabet input mode. Press once <ul style="list-style-type: none"> Activates Alphabet input mode The  icon appears on status bar Press twice <ul style="list-style-type: none"> Back to default input mode
Fn (Blue) 	Toggle key for functions input mode. The function shown on the keypad in blue will be run in functions input mode. Press once <ul style="list-style-type: none"> Activates Functions input mode The  icon appears on status bar Press twice <ul style="list-style-type: none"> Maintains the functions input mode The  icon appears on status bar Press three times <ul style="list-style-type: none"> Back to default input mode
Function 1 ~ 4 (5 ~ 8) <i>F1 ~ F8</i> 	In Default input mode <ul style="list-style-type: none"> Executes the function mapped to F1 ~ F4 In Function input mode <ul style="list-style-type: none"> Execute the function mapped to F5 to F8

Using the Keypad

Key	Description
<p>Numeric 0 ~ 9 0~9</p> 	<p>In Default input mode</p> <ul style="list-style-type: none"> Inputs 0 ~ 9 <p>In Alphabet input mode</p> <ul style="list-style-type: none"> Inputs alphabet in uppercase or lowercase Input blank (space function) (0) <p>In Function input mode (2, 3, 4, 6, 7, 9)</p> <ul style="list-style-type: none"> Controls screen brightness, keyboard backlight brightness, and volume Refer to Functions section for more detail.
<p>Period / Decimal Point <i>PERIOD</i></p> 	<p>In Default input mode</p> <ul style="list-style-type: none"> Inputs a period (decimal point) <p>In Alphabet input mode</p> <ul style="list-style-type: none"> Inputs decimal comma
<p>Minus (-)</p> 	<p>In Default input mode</p> <ul style="list-style-type: none"> Inputs minus (-) symbol or hyphen <p>In Function input mode</p> <ul style="list-style-type: none"> Inputs plus (+) symbol
<p>Shift</p> 	<p>Toggle key for shift combination input mode.</p> <p>In Default input mode</p> <ul style="list-style-type: none"> Press once <ul style="list-style-type: none"> Activates Shift combination mode temporarily The  icon appears on status bar. Ex)  Press twice <ul style="list-style-type: none"> Maintains the Shift combination mode The  icon appears on status bar. Ex)  Press three times <ul style="list-style-type: none"> Back to default input mode <p>In Function input mode</p> <ul style="list-style-type: none"> Press once <ul style="list-style-type: none"> Activates CTRL function mode temporarily The  icon appears on status bar. Press twice <ul style="list-style-type: none"> Back to Function input mode


Using the Keypad





Key	Description									
Enter <i>ENTER</i> 	Enter function									
Symbol 	<p>Press once</p> <ul style="list-style-type: none"> Inputs a symbol you set. By default, '~' will be inserted <p>Press twice</p> <ul style="list-style-type: none"> Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want. <table border="1" data-bbox="846 802 1143 1050"> <tbody> <tr> <td> ~ <small>\u007e</small></td> <td>@ <small>\u0040</small></td> <td>- <small>\u002d</small></td> </tr> <tr> <td>£ <small>\u00a3</small></td> <td>: <small>\u003a</small></td> <td>€ <small>\u20ac</small></td> </tr> <tr> <td> <small>\u007c</small></td> <td>[<small>\u005b</small></td> <td>] <small>\u005d</small></td> </tr> </tbody> </table> <ul style="list-style-type: none"> You can change the configuration of the grid with Program Buttons. Refer to Symbol grid. <p>Press three times</p> <ul style="list-style-type: none"> Hides the grid 	 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>	£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>	 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>
 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>								
£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>								
 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>								

Using the Keypad

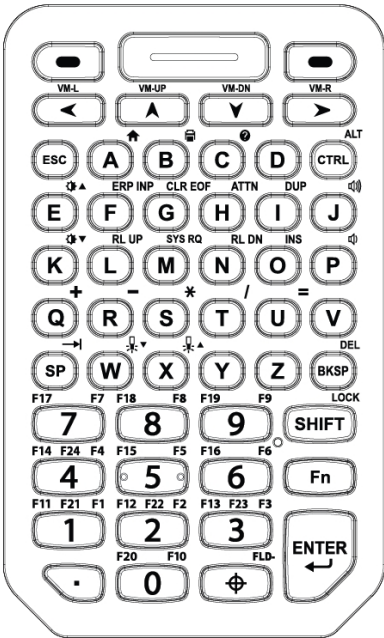






Alpha-Numeric Keypad

Figure 40 Alpha-Numeric keypad










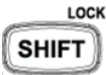

Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT 	Programmable keys, <ul style="list-style-type: none"> • P1 is the AppSwitch key by default • P2 is the Back key by default
Scan (Orange) SCANNER_F 	Scan the barcode
Left / Up / Down / Right DPAD_LEFT / UP / DOWN / RIGHT 	Moves left / up / down / right
ESC ESCAPE 	Escape function






Using the Keypad

Key	Description
Alphabets 	In Default input mode <ul style="list-style-type: none"> Inputs alphabet in uppercase or lowercase (If the shift combination mode is on, inputs uppercase) In Function input mode <ul style="list-style-type: none"> Controls screen brightness, keyboard backlight brightness, and volume (E, J, K, P, W, X) Input arithmetic operators (Q ~ U) Refer to Functions section for more detail In CTRL function mode <ul style="list-style-type: none"> Executes the function mapped to the keys
CTRL (Green) 	Toggle key for CTRL function or ALT function mode In Default input mode <ul style="list-style-type: none"> Activates the CTRL function mode The function shown on the keypad in green will be run The  icon appears on status bar In Function input mode <ul style="list-style-type: none"> Activates the ALT function mode The  icon appears on status bar
Space / TAB SPACE / TAB 	In Default input mode <ul style="list-style-type: none"> Inputs blank (space function) In Function input mode <ul style="list-style-type: none"> Tab function
Backspace BACKSPACE 	In Default input mode <ul style="list-style-type: none"> Backspace function In Function input mode <ul style="list-style-type: none"> Delete function
Numeric 0 ~ 9 / Function F1 ~ F24 0 ~ 9 / F1 ~ F24 	In Default input mode <ul style="list-style-type: none"> Inputs 0 to 9 In Function input mode <ul style="list-style-type: none"> Executes the function mapped to F1 to F10 In Shift combination mode <ul style="list-style-type: none"> Executes the function mapped to F11 to F20

Using the Keypad

Key	Description
	In CTRL function mode <ul style="list-style-type: none"> Executes the function mapped to F21 to F24
Shift (Yellow) 	Toggle key for Shift combination mode. The uppercase alphabets will be inputted or the function shown on the keypad in yellow will be executed in Shift combination mode Press once <ul style="list-style-type: none"> Activates Shift combination mode temporarily The  icon appears on status bar. Ex)  Press twice <ul style="list-style-type: none"> Maintains the Shift combination mode The  icon appears on status bar. Ex)  Press three times <ul style="list-style-type: none"> Back to default input mode
Fn (Blue) 	Toggle key for functions input mode. The function shown on the keypad in blue will be run in functions input mode. Press once <ul style="list-style-type: none"> Activates Functions input mode The  icon appears on status bar Press twice <ul style="list-style-type: none"> Maintains the functions input mode The  icon appears on status bar Press three times <ul style="list-style-type: none"> Back to default input mode
Enter ENTER 	Enter function

Using the Keypad

Key	Description									
Period / Decimal Point <i>PERIOD</i> 	Inputs a period (decimal point)									
Symbol 	<p>Press once</p> <ul style="list-style-type: none"> Inputs a symbol you set. By default, '~' will be inserted <p>Press twice</p> <ul style="list-style-type: none"> Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want. <table border="1" data-bbox="846 688 1141 936"> <tbody> <tr> <td> ~ <small>\u007e</small></td> <td>@ <small>\u0040</small></td> <td>- <small>\u002d</small></td> </tr> <tr> <td>£ <small>\u00a3</small></td> <td>: <small>\u003a</small></td> <td>€ <small>\u20ac</small></td> </tr> <tr> <td> <small>\u007c</small></td> <td>[<small>\u005b</small></td> <td>] <small>\u005d</small></td> </tr> </tbody> </table> <ul style="list-style-type: none"> You can change the configuration of the grid with Program Buttons. Refer to Symbol grid. <p>Press three times</p> <ul style="list-style-type: none"> Hides the grid 	 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>	£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>	 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>
 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>								
£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>								
 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>								




Note: The 5250 terminal emulation keypad configuration is only used when the 5250 emulation software runs on PM452.

ex) ERP INP, CLR EOF, SYS RQ keys in CTRL function mode

Using the Keypad





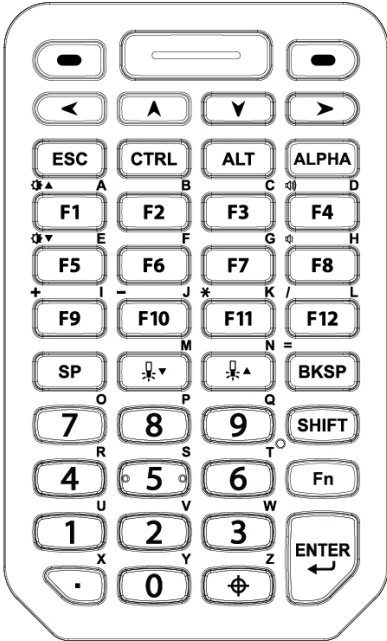



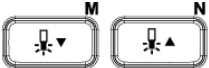
Function-Numeric Keypad

Figure 41 Function-Numeric keypad







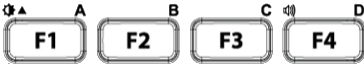





Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT 	Programmable keys, <ul style="list-style-type: none"> • P1 is the AppSwitch key by default • P2 is the Back key by default
Scan (Orange) SCANNER_F 	Scan the barcode
Left / Up / Down / Right DPAD_LEFT / UP / DOWN / RIGHT 	Moves left / up / down / right
ESC ESCAPE 	Escape function







Using the Keypad

Key	Description
CTRL 	Toggle key for the CTRL function mode The  icon appears on status bar in the CTRL function mode
ALT 	Toggle key for the ALT function mode The  icon appears on status bar in the ALT function mode
Alpha (Yellow) 	Toggle key for Alphabet input mode. The keycode shown on the keypad in yellow will be inputted in Alphabet input mode. Press once <ul style="list-style-type: none"> Activates Alphabet input mode The  icon appears on status bar Press twice <ul style="list-style-type: none"> Back to default input mode
Function 1 ~ 12 F1 ~ F12 	In Default input mode <ul style="list-style-type: none"> Executes the function mapped to F1 ~ F12 In Alphabet input mode <ul style="list-style-type: none"> Inputs alphabet A ~ L In Function input mode <ul style="list-style-type: none"> Controls screen brightness and volume (F1, F4, F5, F8) Inputs arithmetic operators (F9, F10, F11, F12) Refer to Functions section for more detail
Space SPACE 	Space function
Keyboard backlight brightness keys 	In Default input mode <ul style="list-style-type: none"> Controls the keyboard backlight's brightness Refer to Functions section for more detail. In Alphabet input mode <ul style="list-style-type: none"> Inputs alphabet M or N

Using the Keypad

Key	Description
Backspace <i>BKSP</i> 	In Default input mode <ul style="list-style-type: none"> Backspace function In Function input mode <ul style="list-style-type: none"> Inputs arithmetic operator '='
Numeric 0 ~ 9 <i>0 ~ 9</i> 	In Default input mode <ul style="list-style-type: none"> Inputs 0 to 9 In Alphabet input mode <ul style="list-style-type: none"> Inputs alphabet O to W or Y
Shift 	Toggle key for Shift combination mode. The uppercase alphabets will be inputted in the Shift combination mode Press once <ul style="list-style-type: none"> Activates Shift combination mode temporarily The  icon appears on status bar. Ex)  Press twice <ul style="list-style-type: none"> Maintains the Shift combination mode The  icon appears on status bar. Ex)  Press three times <ul style="list-style-type: none"> Back to default input mode
Fn (Blue) 	Toggle key for functions input mode. The function shown on the keypad in blue will be run in functions input mode. Press once <ul style="list-style-type: none"> Activates Functions input mode The  icon appears on status bar Press twice <ul style="list-style-type: none"> Maintains the functions input mode The  icon appears on status bar Press three times <ul style="list-style-type: none"> Back to default input mode








Using the Keypad

Key	Description									
Enter <i>ENTER</i> 	Enter function									
Period / Decimal Point <i>PERIOD</i> 	In Default input mode <ul style="list-style-type: none"> Inputs a period (decimal point) In Alphabet input mode <ul style="list-style-type: none"> Inputs alphabet X 									
Symbol 	Press once <ul style="list-style-type: none"> (In Default input mode) Inputs a symbol you set. By default, '~' will be inserted (In Alphabet input mode) Inputs alphabet Z Press twice <ul style="list-style-type: none"> Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want. <table border="1" data-bbox="846 1014 1143 1262"> <tbody> <tr> <td> ~ <small>\u007e</small></td> <td>@ <small>\u0040</small></td> <td>- <small>\u002d</small></td> </tr> <tr> <td>£ <small>\u00a3</small></td> <td>: <small>\u003a</small></td> <td>€ <small>\u20ac</small></td> </tr> <tr> <td> <small>\u007c</small></td> <td>[<small>\u005b</small></td> <td>] <small>\u005d</small></td> </tr> </tbody> </table> <ul style="list-style-type: none"> You can change the configuration of the grid with Program Buttons. Refer to Symbol grid. Press three times <ul style="list-style-type: none"> Hides the grid 	 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>	£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>	 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>
 ~ <small>\u007e</small>	@ <small>\u0040</small>	- <small>\u002d</small>								
£ <small>\u00a3</small>	: <small>\u003a</small>	€ <small>\u20ac</small>								
 <small>\u007c</small>	[<small>\u005b</small>] <small>\u005d</small>								

Using the Keypad

Use the Buttons

Functions

Function	Description	Numeric	Alpha-Numeric	Function-Numeric
	Volume down	Fn + 2	Fn + P	Fn + F8
	Volume up	Fn + 3	Fn + J	Fn + F4
	Display brightness down	Fn + 4	Fn + K	Fn + F5
	Display brightness up	Fn + 7	Fn + E	Fn + F1
	Keyboard backlight brightness down	Fn + 6	Fn + W	Keyboard backlight brightness down
	Keyboard backlight brightness up	Fn + 9	Fn + X	Keyboard backlight brightness up
CTRL	CTRL function mode	Fn + SHIFT	CTRL	CTRL
ALT	ALT function mode	-	Fn + CTRL	ALT
	Home screen	-	CTRL + A	-

Screenshot

To take a screenshot, simultaneously press the **Power button + P1 key** (on the left side of the front scan button).

Using the Keyapd

Program Buttons

Most buttons on the PM452 except power button can be optimized as you want. To map the button to other functions from default,


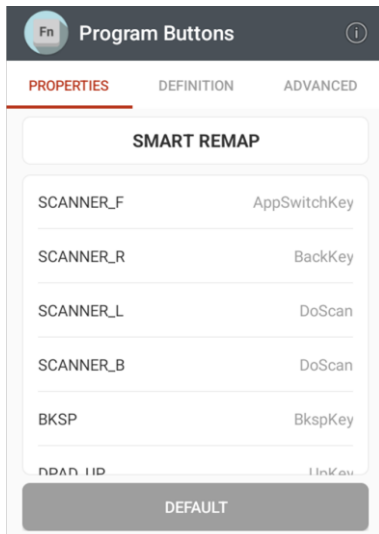
1. Navigate to **EmKit**  > **Program Buttons**.
2. Tap **SMART REMAP**. And press a button you want to remap.

Figure 42 Program Buttons - button list



Note: SCANNER_B indicates the trigger button on the gun handle.

3. Choose a behavior you want to use among the tabs.
4. Tap **APPLY**.


Using the Keyapd

Symbol grid

You can set the grid configuration of Symbols key in keypad with Program Buttons. To set the grid,

1. Navigate to **EmKit**  > **Program Buttons** > **ADVANCED** tab.

Figure 43 Program Buttons - symbol

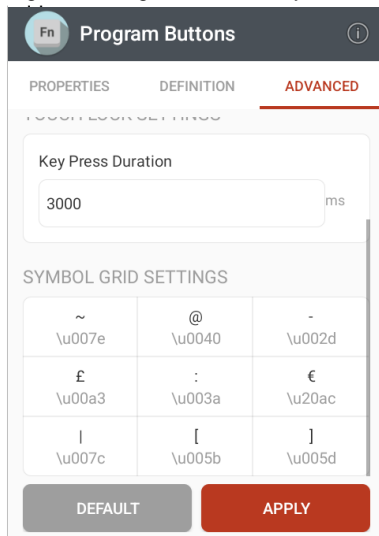

2. Tap a cell of the grid you want to change.
3. Input the Unicode of the desired symbol in the dialog.
4. Tap **OK**.
5. After setting up the symbol grid, tap **Apply** on the bottom to save the changes.



Note: To find the Unicode, see [this page](#) of Wikipedia.

Camera


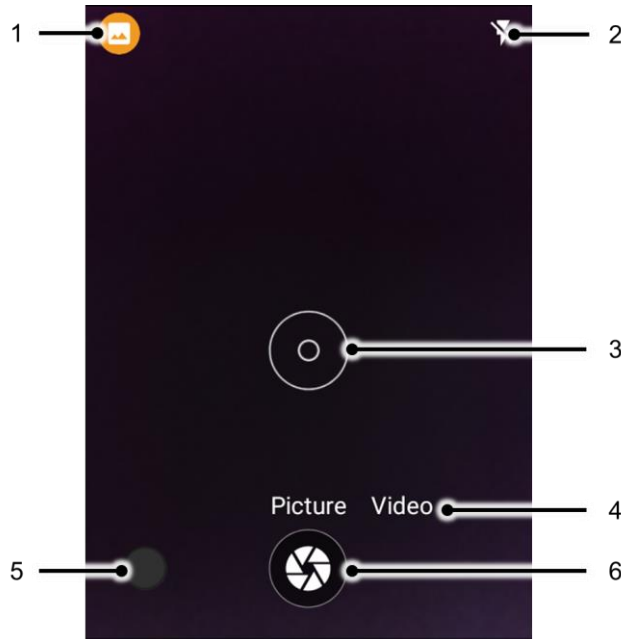



To use the camera, open App drawer and tap Camera application . Figure 44 is a main screen of Camera application.

Figure 44 Camera main screen




No	Name	Description
1	Modes	Select a mode depending on the target (normal / QR code) Or access advanced camera options
2	Advanced camera option	 : Always turn off the flashlight  : Turn on or off the flashlight automatically  : Always turn on the flashlight
3	Focus zone	You can change the focusing area by touching the other area
4	Picture / Video	Swipe or tap to change the mode (Picture / Video)
5	Gallery	Tap to see the recently taken pictures
6	Shutter button	Take a picture or recode a video

Scanner

Scanner is placed on the top of the device. Optimize the scanner settings for working environment and improve the efficiency.

Turn on / off the Scanner

The scanner is turned on by default. You can check the scanner status by the icon  on the status bar. If the icon displays, the scanner is turned on.

If the scanner is turned off, follow the steps turn it on.




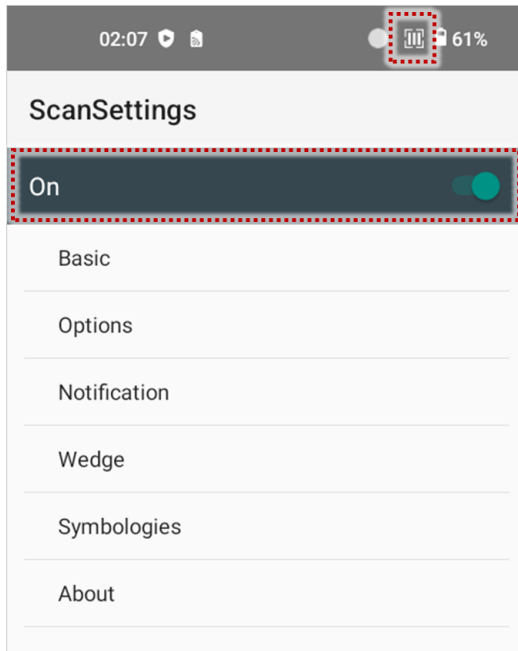
1. Go to **EmKit**  or **Settings**  and tap **ScanSettings**.
2. Tap toggle button to turn on/off the barcode scanner.
3. Check if the scanner icon  is placed on Status bar.

Figure 45 Turn on scanner



Scanner

ScanSettings

When the scanner is turned on, scanner setting menus will be displayed. **ScanSettings** consists of

- Basic
- Options
- Notification
- Wedge
- Symbologies
- About

Basic

Control the scanning options and wedge mode options.

1. Scanning

- Change the scanner's trigger timeout and set scan mode (single / auto / continuous scan).
- Enable or disable the TouchScan, which is a software scanner button. Place a scan icon in any position and tap the icon to read a barcode.

Figure 47 ScanSettings - Basic


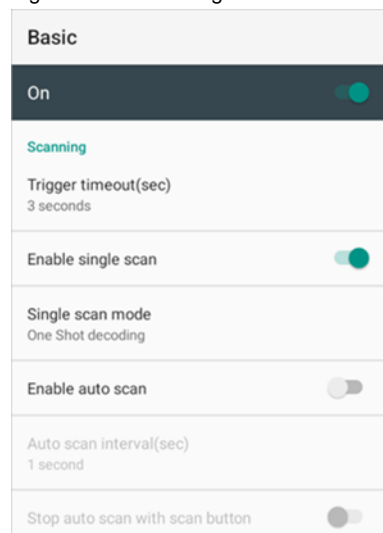


Figure 46 ScanSettings - TouchScan

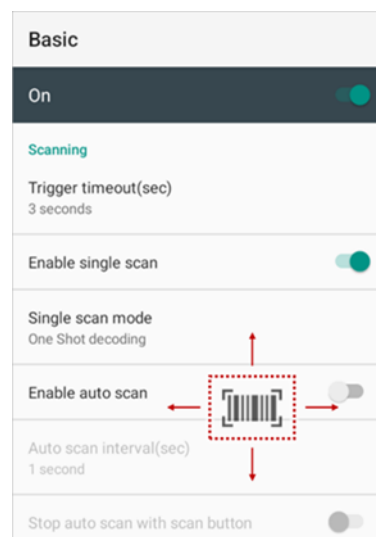

Scanner


2. Wedge mode

- Change the result type of decoded data among the below list.
 - User Message
 - Keyboard Event (Multiple)
 - Keyboard Event (Single)
 - Clipboard (KEYCODE_PASTE)
 - Clipboard (Ctrl + V)
 - Intent Broadcast
 - Custom Intent
- Set Terminator as,
 - None
 - Space
 - Tab
 - LF
 - Tap & LF

Options

Enable / Disable the center window, Aimer, Illumination. And set scanner decoding settings.

Figure 48 ScanSettings - Options

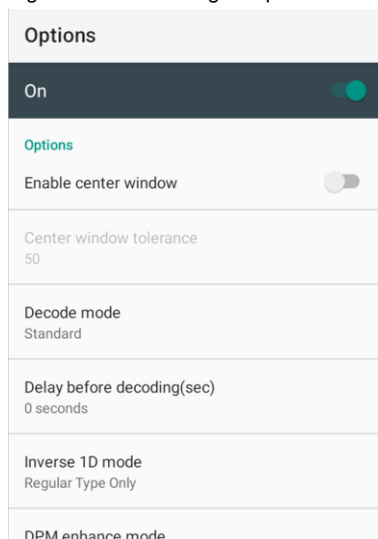


Scanner

Notification

Control the beep sound, LED and vibration option when scanning the barcode.

Figure 49 ScanSettings - Notification

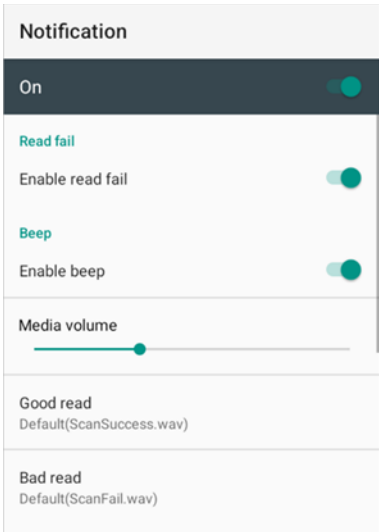


Scanner

Wedge

Set below items in Wedge settings

- Barcode ID
- AIM ID
- Group separator
- Prefix
- Suffix
- Character set
- Extended Wedge

Figure 50 ScanSettings - Wedge

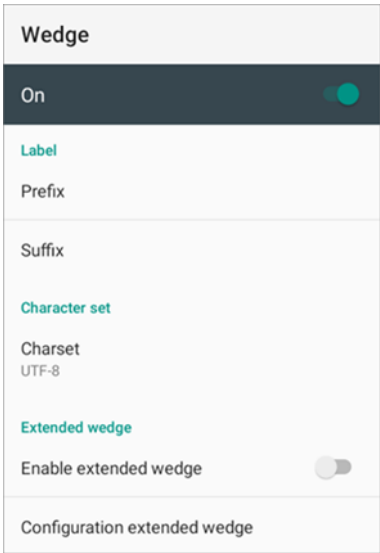


Scanner

Extended wedge

PM452 supports Extended wedge that allows to edit the decoded data. Tap **Enable extended wedge** toggle switch and then set a rule in **Configuration extended wedge**.


Figure 51 ScanSettings - Extended wedge

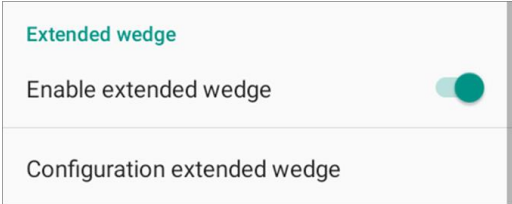

For example, make a rule that add a string "Point Mobile" at the start of decoded data whenever decoding CODE128.

1. Tap **Style** (1) and select **Condition** (2).


Figure 52 Extended wedge example_1

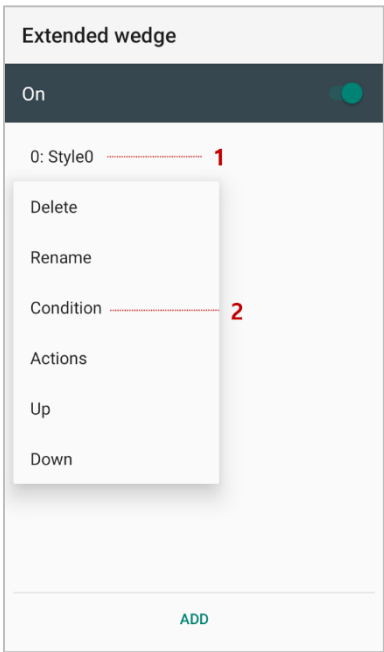

Scanner


- 2. Tap **Symbologies** and select **CODE128** among the symbologies.

Figure 53 Extended wedge example_2

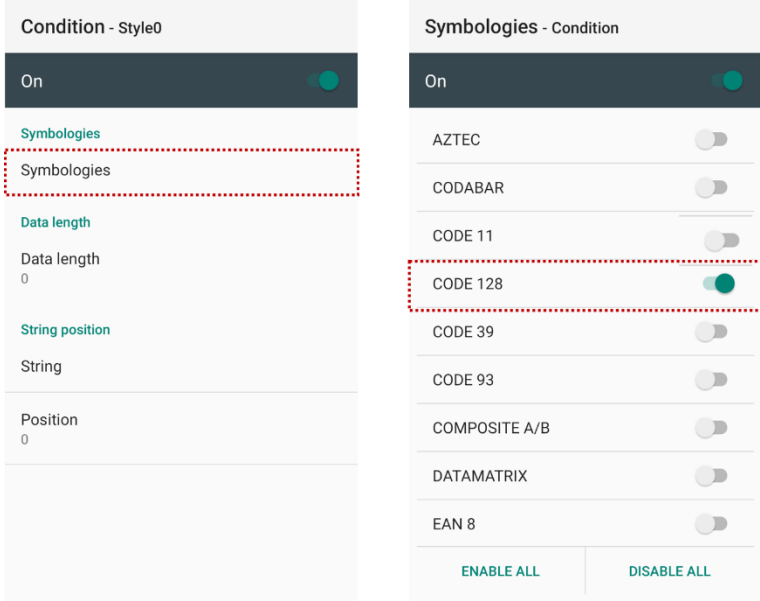

- 3. Tap **Style (1)** and select **Actions (2)**.


Figure 54 Extended wedge example_3

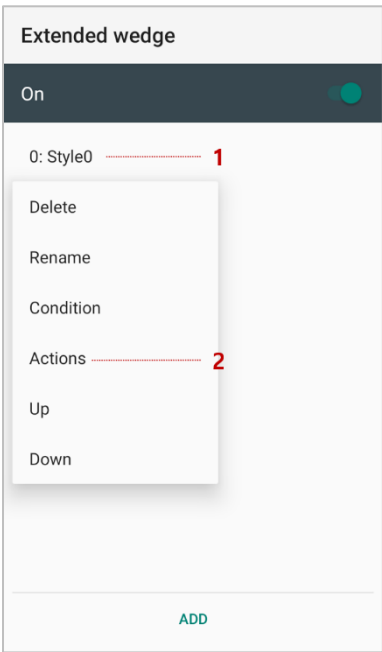

Scanner


- 4. Tap **ADD** and select **Move to start** to point the start of the decoded data.

Figure 55 Extended wedge example_4

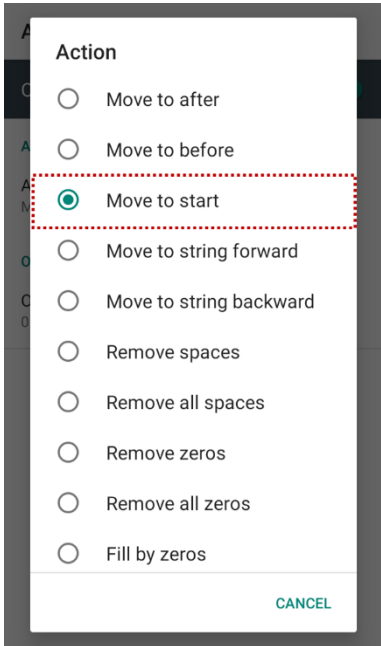


- 5. Add another action of which action type is Send string. Set value as "Point Mobile".

Figure 56 Extended wedge example_5

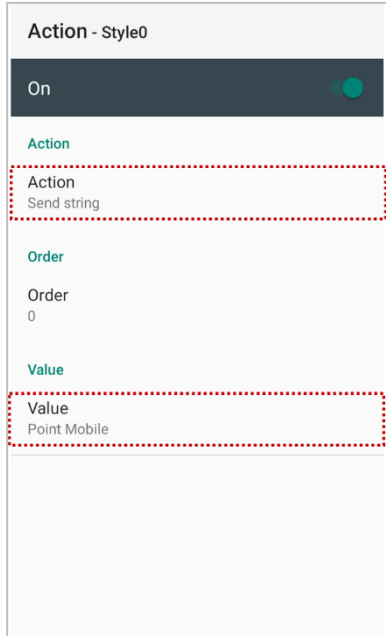

Scanner

6. "Point Mobile" string will be added to decoded CODE128 data.

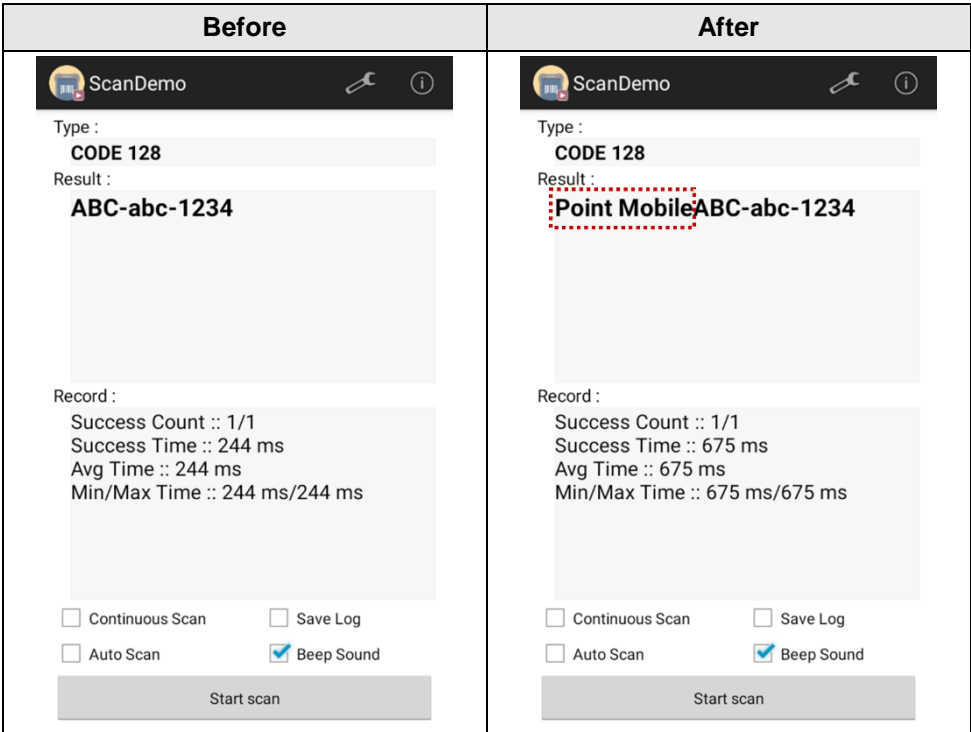


Scanner

Symbologies

Enable or disable the specific symbology or set detail options. By tapping each symbology name to access detail options.


Figure 57 ScanSettings - Symbologies

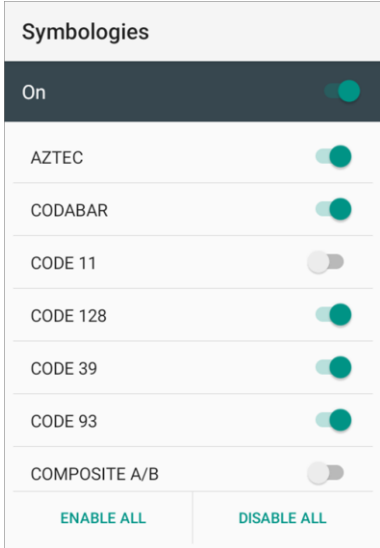

About

Find the scanner information or restore the scanner settings to default.

Figure 58 ScanSettings - About

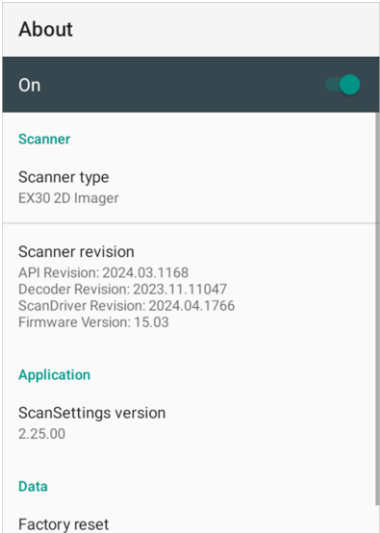

Scanner

Scan a Barcode

Point the scanner at the barcode and press the scan button on the device or gun handle. If another button is set as scan trigger using Program buttons (Refer to [Using the Keypad - Program Buttons](#)), it can trigger the scan action, too.

**Note:**

If you set the single scan mode as Press decoding or Release decoding, it may require another button pressing mechanism to trigger scanning. Refer to [Single Scan Mode article](#) for more detail.

N5703 Scanner SKU

Center the cross-hair laser aimer over the barcode. The barcode must be within the square made by the edge of the aimer. You can tilt the aimer slightly for a comfortable angle to scan.


Figure 59 Aiming barcode (N5703)



N6803FR / EX30 Scanner SKU

Center the red dot aimer over the barcode.

Figure 60 Aiming barcode (N6803FR / EX30)

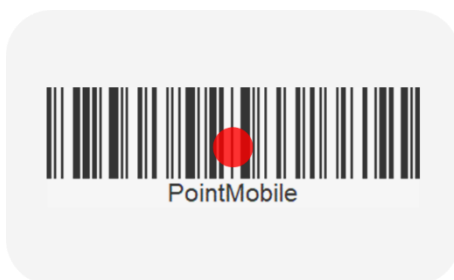

Scanner

ScanDemo

Using ScanDemo app, demonstrate scanning feature.


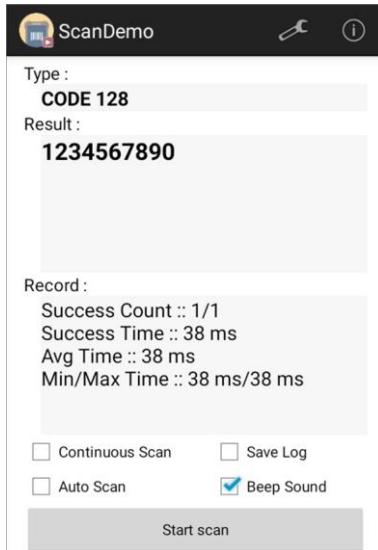
1. Execute **EmKit**  > **ScanDemo**.
2. Scan a barcode by pressing the scan button on the device or tapping **Start scan** button on the screen.
3. Find scan result

Figure 61 ScanDemo



Wireless

Mobile Network




Note: Mobile network is supported on PM452 WWAN (LTE) SKU only.

To connect mobile network, SIM card is required. Insert SIM card first referring [Install SD & SIM cards](#).

After inserting the SIM card, reboot the device. When network is connected, a network icon will be appeared on the status bar.

Figure 62 Mobile network icon

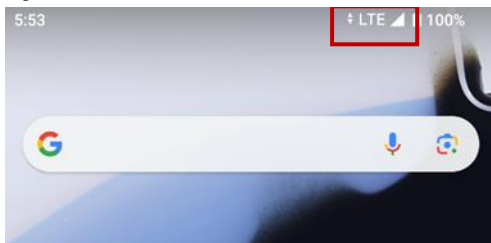

- **LTE network icon:** LTE


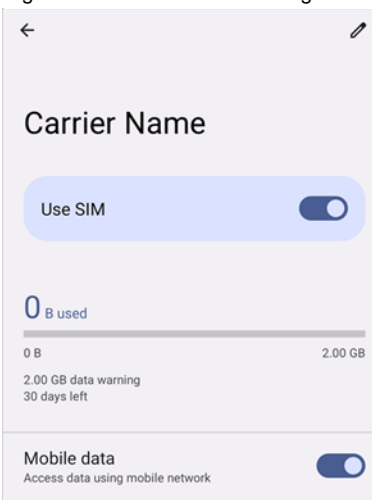
Find network information and adjust the network settings in **Settings**  > **Network & internet** > **SIMs**.

Figure 63 Mobile network setting



Wireless

Wi-Fi

To turn on and connect a Wi-Fi,




1. Go to **Settings**  > **Network & internet** > **Wi-Fi**.
2. Tap toggle button to enable Wi-Fi.
3. Device searches for nearby Wi-Fi signals and lists them in order of signal strength.
4. Select a Wi-Fi SSID to connect.
5. The message **Connected** under the SSID means the device complete to connect to the Wi-Fi.

Figure 64 Wi-Fi connected



 **Note:** There are Open Wi-Fi network and Secured Wi-Fi network. You can tell those apart by lock icon (🔒) in the nearby Wi-Fi list.

To connect the secured Wi-Fi network, you need to enter the password.

Figure 65 Open Wi-Fi Network






Figure 66 Secured Wi-Fi Network



If there is a saved Wi-Fi network, simply turn on the Wi-Fi through the Quick setting panel. The saved network will be connected automatically.

Figure 67 Wi-Fi in Quick setting panel

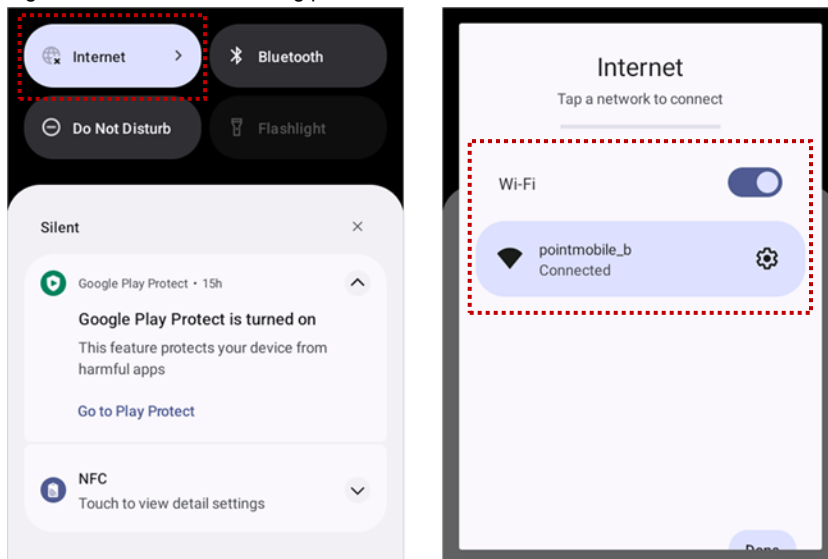

Wireless

Bluetooth

Turn on / off

Bluetooth is turned off as default. There are two ways to turn on the Bluetooth,


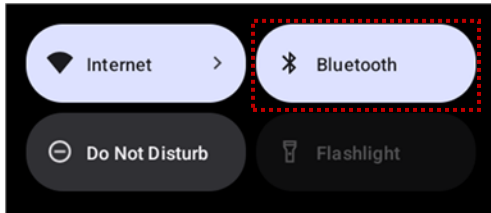
- Open quick setting panel and enable Bluetooth 

Figure 68 Bluetooth in Quick setting panel



- Go to **Settings**  > **Connected devices** > **Pair new device**

Pair and Connect

To connect with a new device,


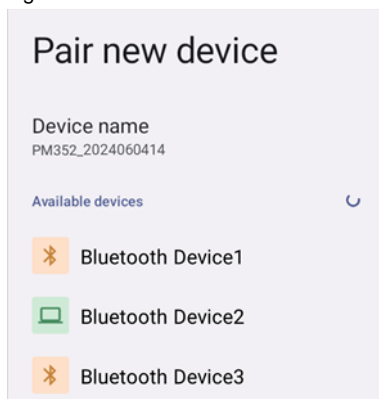
1. Go to **Settings**  > **Connected devices**.
2. Tap **Pair new device**.
(Bluetooth will be turned on automatically)
3. Select the device you want to pair among **Available devices** list.

Figure 69 Bluetooth available devices




4. Follow instructions on the screen (Pairing code or pairing confirmation dialog) and tap **PAIR**.

Wireless


5. When the connection is succeeded, the connected device name is listed under the **Other devices** list.

Figure 70 Bluetooth currently connected

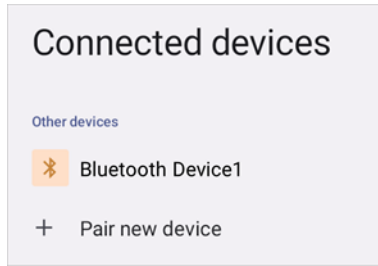


To connect a device previously connected, select the device name from the **Saved devices** list.

Figure 71 Previously connected devices

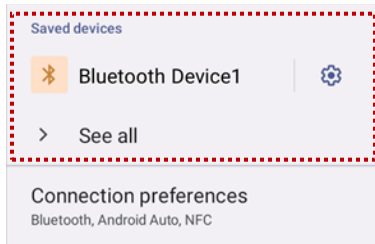

Unpair and Disconnect

To unpair the device, select the name of the device you want to unpair from the **Other devices** list and tap **FORGET** .


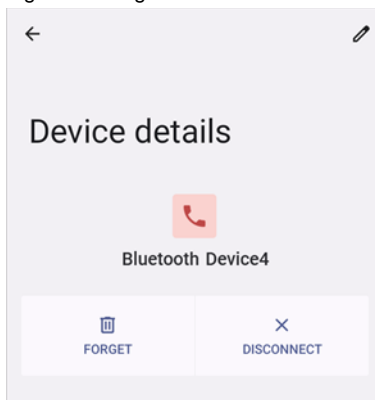

Or tap **DISCONNECT**  to disconnect only and not unpair.

Figure 72 Forget device




Wireless


Change the Bluetooth device details

Tap the  icon next to the device name to see device details.

If the device you want is not listed under the **Saved devices**, tap **See all**.

Figure 73 Bluetooth device detail

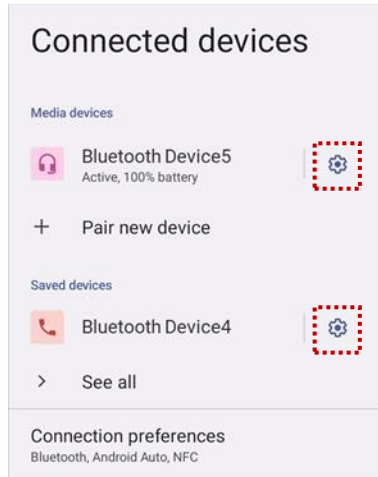

- To change the device's name, tap  on the top of the screen
- Turn other settings on or off (Available on some devices)

Wireless


NFC

PM452's NFC antenna is located on the rear-top side of the device. Bring the NFC tag close to the antenna location as Figure 74.

NFC feature is enabled by default. But if NFC does not work, make sure the NFC is enabled from the **Settings**

 > **Connected devices** > **Connection preferences** > **NFC**.

Figure 74 PM452 NFC tapping

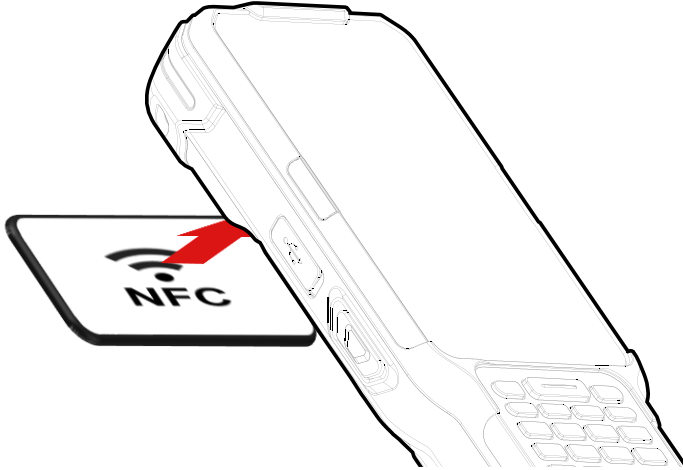

System Maintenance

System Information

There are two ways for checking system information, on **settings** and on **EmKit**.

On Settings

Go to **Settings**  > **About phone**. Following information can be found.

- Device name
- Phone number
- Emergency information
- Legal information & Certificates
- Model & SIM status
- Hostname
- IMEI
- Android version
- IP address
- Wi-Fi MAC address
- Bluetooth address
- Build number

On EmKit

Go to **EmKit**  > **System Information** . Following information can be found.

- Processor information
- Version information (Android version, OS image version, SDK version, etc.)
- Manufacturer information (Serial number, Part number, etc.)
- Device information (Scanner, Audio, Display, etc.)
- Battery information (Battery charging status, etc.)
- App version information (Version of EmKit apps)

System Maintenance

Check Device Health

EmHealthReport is a solution that provides the device's battery and eMMC health.

Monitor the battery and eMMC status to foresight their lifetime or find the cause when there is a battery problem such as cannot charge the device or rapid battery discharge.


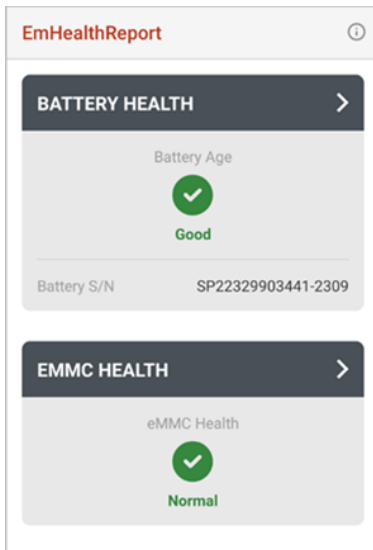
To use, open **EmKit**  and launch **EmHealthReport**. You can see the simple device health information on the main screen. To find detailed information, tap each blue arrow on the right side of the screen.

Figure 75 EmHealthReport



- **Battery Health**
 - Battery Serial Number
 - Battery Age
 - Battery Level
 - Battery First Use Date
 - Battery Voltage
 - Battery Temperature
 - System Temperature
 - Battery Manufacture Date
 - Smart Charging Mode
(Refer to [Smart Charging](#))
- **eMMC Health**
 - Pre-EOL Information
 - Device life time estimation type A
 - Device life time estimation type B

System Maintenance

OS Update

Periodic update improves the performance of the device. Point Mobile provides up-to-date OS version via Service Portal and FOTA. Update the device via storage, OTG port, and FOTA server. Depending on the workspace environment, choose more suitable method.



Notice: Please backup your data before starting the update process.

OS update via storage

To update the OS using storage,


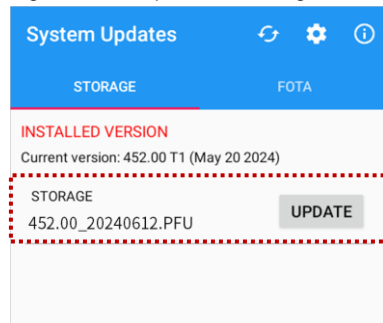
1. Download an OS image file into the root folder of microSD card or device internal storage.
2. (In case of using SD card) Insert SD card to the device and then turn the device on.
3. Go to **Settings**  > **System** > **System Update**.
4. Check if the OS image file shows up under **AVAILABLE VERSIONS**.

Figure 76 OS update via storage



5. Tap **UPDATE** to start the update process




Note: If the OS image file doesn't show up in **AVAILABLE VERSIONS**, check the file is placed in the root folder of storage. System only can recognize the file in the root folder.

System Maintenance

OS update via OTG port

PM452 supports the USB OTG feature.

1. Prepare a formatted USB flash drive for OS update.
2. Copy an OS image file to the root folder of the flash drive.
3. Connect the flash driver to the PM452.
4. Go to **Settings**  > **System** > **System Update**.
5. Check if the OS image file shows up under **AVAILABLE VERSIONS**.
6. Tap **UPDATE** to start the update process.

OS update via FOTA

If PM452 can connect to a network, use the FOTA server for the update.


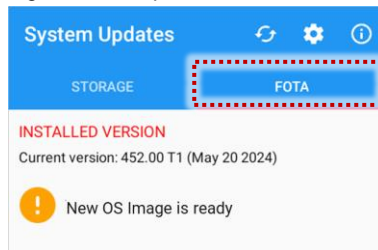
1. Connect the device with a network.
2. Go to **Settings**  > **System** > **System Update**.
3. Tap **FOTA** tab or Swipe left to move to **FOTA** tab.
4. If there is an OS version newer than device's one, the server shows the new OS information.

Figure 77 OS update via FOTA




System Maintenance

5. Tap **Download**.
6. Tap **OK** on the **OS Update** dialog to start to download the OS image file.
7. To complete the update, rebooting is required.
Tap **OK** on the **Restart required** dialog to restart the device.

i **Note:** Basically, OS update via FOTA works over Wi-Fi or Ethernet only. To enable the OS update over Mobile Network too, uncheck the setting value in FOTA Settings. Downloading over the Mobile network may result in additional charges.

Figure 78 FOTA Settings

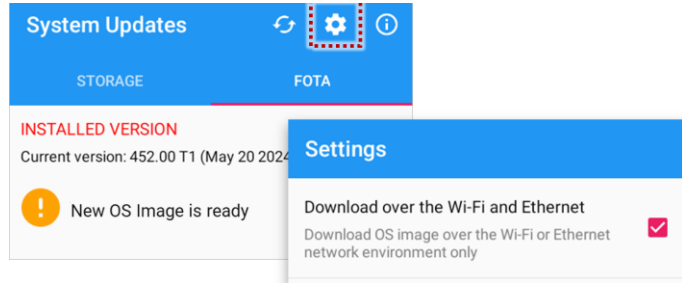

System Maintenance

Factory Data Reset

When PM452 work abnormal or there is a need to reset the device, follow the steps below to perform a factory data reset.



Caution: Factory data reset will erase all personalized settings and data saved in the device, such as Google account, apps, user data, etc. And factory data reset cannot undo.

Factory data reset via Settings app

If the device can be turned on and access **Settings**,


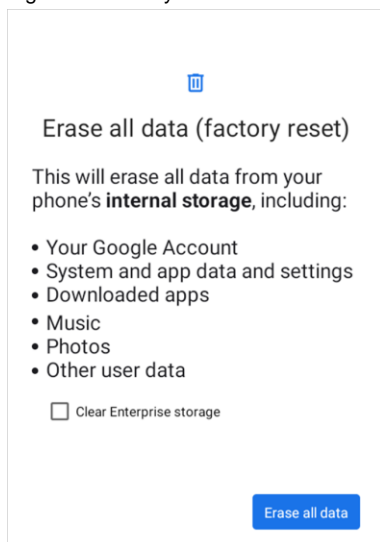
1. Navigate to **Settings**  > **System** > **Reset options**.
2. Tap **Erase all data (factory reset)**.
3. After being aware that factory reset will erase all data from the internal storage, tap **Erase all data**.

Figure 79 Factory data reset



4. Tap **Erase all data** again to start the factory reset process.

Accessories

PM452 supports below accessories and they can be used in common with PM451. All accessories except hand strap are sold separately.

Category	Accessory Name	Usage
Handy carry	Hand strap	Carries PM452 easily
	Gun handle	Provides an ergonomic trigger button (Programmable button)
Charging cradle	SSC (Single Slot Cradle) / SEC (Single Slot Ethernet Cradle)	Charges one PM452 and one PM452 battery Provide USB type C port or ethernet port
	4SC (4 Slot Cradle)	Charges four units of PM452
	4SBC (4 Slot Battery Cradle)	Charges up to four pieces of PM452's batteries

Hand Strap

The hand strap is enclosed in the PM452 standard package. Attach the strap and you can grab the device more firmly.

Attach hand strap

1. Attach the hook of the hand strap to the pole on the rear side of the PM452 firmly.
2. Thread the other side of the strap through the hand strap bottom hole.
3. Pull the strap and set the buckle at the desired length.

Accessories

Gun Handle


With gun handle, you can use additional programmable button. The button is used for triggering scanner usually.

If you want to change the function mapped to the trigger button, access [Program Buttons](#) and set **SCANNER_B** to the desired function.

Attach gun handle

1. Using a screwdriver, remove the four latch screws on the rear side of the PM452.
2. Open the gun handle connector cap.

Figure 80 Attaching gun handle - 1

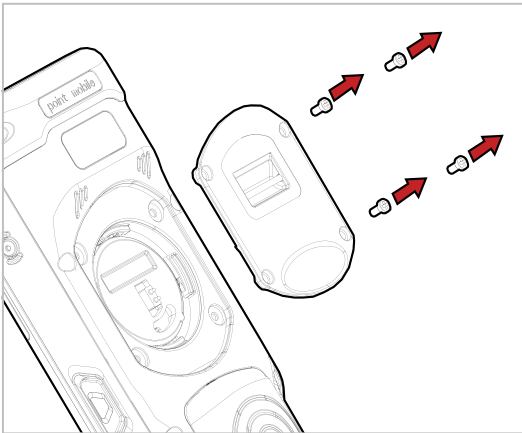

3. Put the gun handle on the connector part with rotating it counter-clockwise 45°.


Figure 81 Attaching gun handle - 2



Accessories

4. Rotate the gun handle clockwise to engage with the device.

Figure 82 Attaching gun handle - 3

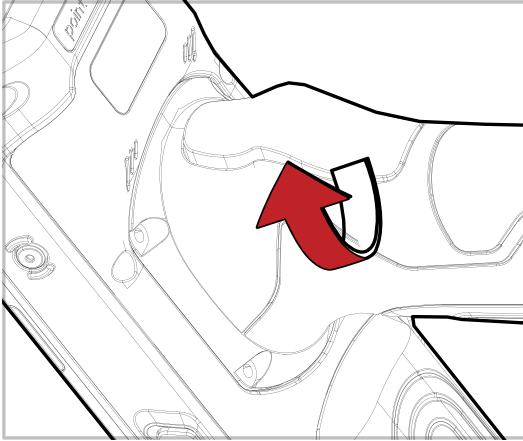


5. Fasten the four latch screws again.

Attach hand strap

A hand strap is enclosed in the gun handle package. Attach the strap and carry the device more comfortably.

1. Thread the thin strap through the hole on the bottom side of gun handle.
2. Pass the other parts through the loop of the strap, and pull it tight.


Figure 83 Attaching gun handle hand strap - 1

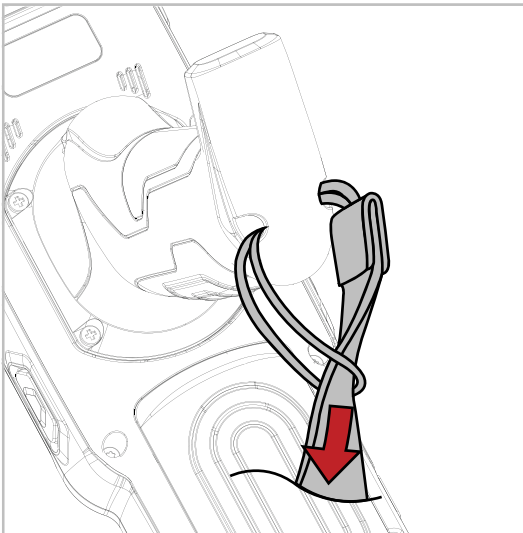

Accessories

3. Thread wide strap through the hand strap bottom hole on the PM452.
4. Pull the strap and set the buckle at the desired length.

Figure 84 Attaching gun handle hand strap - 2

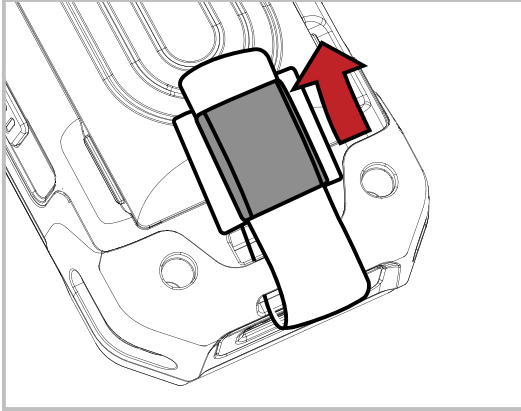

Accessories


Charging cradle



Note: All charging cradles can be used in common with PM451.

Single Slot Cradle / Single Slot Ethernet Cradle (SSC/SEC)

Figure 85 PM452 SSC, SEC

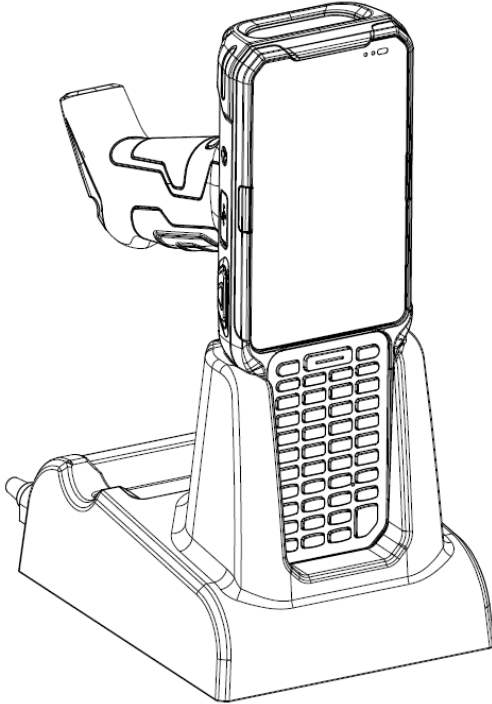

SSC can charge the followings.

- PM452 only
- PM452 + Gun handle mounted
- PM452 battery

For more detail, find SSC Quick start guide.


Accessories

4SC (4 Slot Cradle)

4SC has 4 device slots so it can charge up to two units of PM452 simultaneously. PM452 with a gun handle mounted also can be charged with 4SC.

For more detail, find 4SC Quick start guide.

Figure 86 PM452 4SC

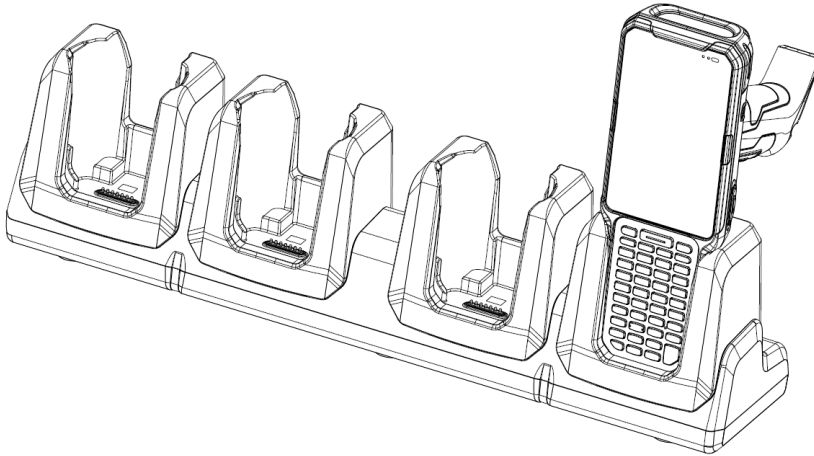


4SBC (4 Slot Battery Cradle)

4SBC has 4 battery slots so it can charge up to four pieces of PM452's battery simultaneously.

For more detail, find 4SBC Quick Start Guide.

Figure 87 PM452 4SBC

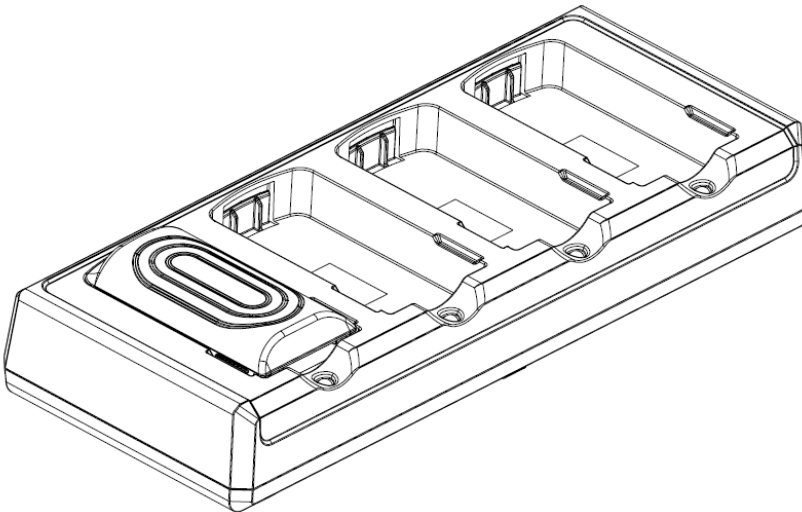

Safety Information

Battery Safety Information

Follow the battery safety guidelines for safe usage, storage, and disposal of Li-ion batteries. Improper battery use may result in a fire, explosion, or other critical hazards.

Battery Safety Guidelines

- Use only Point Mobile approved batteries and charging accessories. Other batteries and chargers may damage the device or result in a fire, leakage, or other hazards.
- Do not expose the battery to excessive heat or cold.
- Do not use or store the battery in or near areas that might get very hot, such as in a parked vehicle, near a heat duct or close to other heat sources.
- Do not allow objects that may cause a short circuit, such as metal objects, corrosive substances, or liquids like water, to contact the battery.
- Do not disassemble, crush, bend, shred, press, or other actions that may damage or deform the battery.
- Do not use or replace the battery on the go or from a high location. Dropping may result in an explosion or fire.
- Do not put any labels, stickers, tags, etc. on the device or battery. Performance of the device or battery, such as sealing, drop, or tumble, could be affected.
- Close supervision is necessary when used near children to avoid the risk of injury.
- If battery leakage is observed, avoid any contact with the skin or eyes and properly dispose of the battery. If contact has been made, wash the affected area with water for 15 minutes and seek medical advice.
- If you notice any type of damage to the battery, such as swelling, dents, and leaks, stop using it immediately and contact Point Mobile.

Battery Charging Guidelines

- Charge the battery in a clean, cool, dry, and ventilated environment.
- Separate the charger from the battery as soon as possible when the battery is fully charged.
- Battery performance can degrade due to the stress of daily charging and discharging. Batteries typically need to be replaced after 300 to 500 charging cycles (full charge-discharge cycles) or when the battery capacity has been reduced to 70 ~ 80% of its original capacity. The actual number of charging cycles varies based on usage patterns, temperature, age, and other factors.

Safety Information

Battery Storage / Disposal Guidelines

- Store the batteries in a clean, dry and ventilated environment within ambient temperature ranges of $20\pm 5^{\circ}\text{C}$.
- For safety regulations, batteries are charged to below 20~30% of full capacity during production.
- When not using batteries for a long period, charge the battery for 30 minutes to 1 hour at least once every 6 months to prevent full discharge and keep the performance.
- Batteries should be stored separately when storing for long periods. Disconnect from any device, charger, or cradle.
- Dispose of used batteries promptly according to local disposal regulations.
- Do not dispose of the battery in fire. It may cause explosion.



Notice: *The battery is consumable. Point Mobile provides a warranty for the battery for 12 months after purchase. If you suspect the battery swelling, change the battery immediately and contact Point Mobile.*



Point Mobile. Co., Ltd.

Offline

Tel: +82-2-3397-7870~1

Fax: +82-2-3397-7872

Address: 26F, Building A, Gasan Publik,
178, Digital-ro, Geumcheon-gu, Seoul, Korea 08513

Online

Website: <https://www.pointmobile.com>

E-mail : pm_ta@pointmobile.com